

FACTORY AUTOMATION

# Low Voltage Air Circuit Breakers 〈Catalog〉

# World Super **AE**

630AF~6300AF

World Super

**WS**  
Series





Mitsubishi Electric Corporation operates across a wide range of sectors, from home appliances and building systems to railway solutions, factory automation equipment, and satellites and leverages the synergy created by these diverse sectors to address various challenges and provide optimal solutions worldwide.

We, the Mitsubishi Electric Group, will continue to evolve in "carbon neutrality" and a "circular economy" by promoting innovation in products and services and providing integrated solutions through our business activities, all in order to realize a vibrant and sustainable society.

Under "Changes for the Better" which reflects the Mitsubishi Electric Group's commitment to "always strive to achieve something better", Mitsubishi Electric FA will expand the value of its products and services in the FA system business by advancing the provision and expansion of integrated solutions under the slogan "Automating the World" for an even better tomorrow. Through automation technology, we aim to contribute to innovation not only in the manufacturing industry but also across society as a whole.

We stand as your partner in shaping a smarter, more efficient, and more sustainable future.



The Mitsubishi Electric Group is actively solving social issues, such as decarbonization and labor shortages, by providing production sites with energy-saving equipment and solutions that utilize automation systems, thereby helping towards a sustainable society.

# OVERVIEW

Warranty	5	1
Product Features	7	2
Appearance and Product structure	11	3
Product Specification	13	4
Connections	15	5
Charging	16	6
Accessories	17	7
Electronic trip relay	23	8
Wiring diagram	45	9
Outline dimensions	47	10
Technical information	61	11
Ordering information	67	12
Index	71	13
Revising history	72	14
Service network	73	15

# Mitsubishi Presents the WS Series, Satisfied with the High Demands of the 21st Century Global Market.

World Super  
**WS**  
Series

**Best-Solution**

Various line-up and high flexibility

**High-Performance**

One-rank higher breaking performance

**High-Reliability**

Safety and reliability provided


**Customer Friendly**

Easy handling and retrofitted solution



Global...



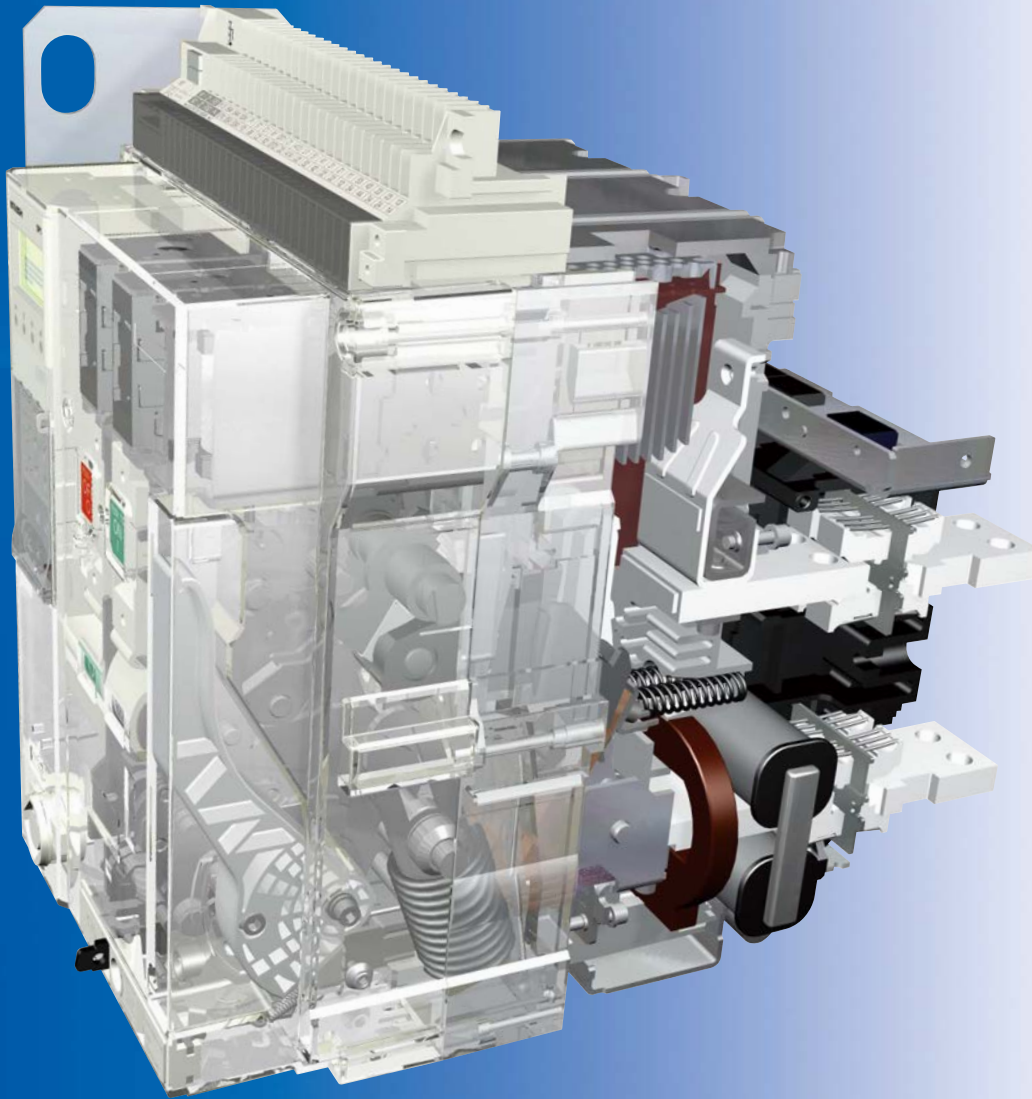

Line up ( 630 to 6300A )

Rated current (A)	630	1000	1250	1600	2000	2500	3200	4000	5000	6300
SW series	AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA	-				
	-				AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA	-	
	-							AE4000-SW	AE5000-SW	AE6300-SW

## Warranty period and warranty coverage

If any faults or defects (hereinafter “Failure”) found to be the responsibility of Mitsubishi Electric occurs during use of the product within the warranty period, the product shall be repaired at no cost via the sales representative or Mitsubishi Electric Sales office. However, if repairs are required on-site at domestic or overseas locations, expenses to send an engineer will be charged.

### 1. Warranty period

The warranty period of the product shall be for twelve (12) months after the date of purchase or delivery to the designated place. Note that after manufacture and shipment from Mitsubishi Electric, the maximum distribution period shall be six (6) months, and the longest warranty period after manufacturing shall be eighteen (18) months. The warranty period of the repaired parts shall not exceed the warranty period of the original product before repairs.

### 2. Warranty coverage

- (1) The primary failure diagnosis should be performed by users. However, if required by users, Mitsubishi Electric or Mitsubishi Electric Sales office may be able to perform the diagnosis. In that case, for damages caused by any cause found to be the responsibility of Mitsubishi Electric, the diagnosis will be performed at no cost. For details, contact a distributor.
- (2) The coverage shall be limited to ordinary use within the usage state, usage methods, usage environment, and other conditions which follow the instructions and precautions given in the instruction manual, user’s manual, and caution labels on the product.
- (3) Even within the warranty period, repair cost shall be charged for the following cases.
  - [1] Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by selection of hardware or software design on the user side.
  - [2] Failure caused by modifications, etc. to the product by the user without any approvals from Mitsubishi Electric.
  - [3] In case Mitsubishi Electric product is assembled into a user’s device, failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user’s device is subject to or as necessary by industry standards, had been provided.
  - [4] Failure that could have been avoided if the maintenance described in the user’s manual has been performed.
  - [5] Failure caused by external irresistible forces such as fires or abnormal voltages, and failure caused by natural disasters such as earthquakes, lightning, wind and water damages.
  - [6] Failure caused by reasons unpredictable based on scientific technology standards at the time of shipment from Mitsubishi Electric.
  - [7] Any other failure found not to be the responsibility of Mitsubishi Electric or that admitted not to be so by the user.

In addition, the warranty applies only to the product delivered. It does not apply to the damage that is caused by the failure of the product.

### 3. Service period for spare parts

Five years after discontinuation of production. Equipment that has exceeded its useful life (as a guideline for replacement) should be renewed. For discontinued models for which the supply of replacement parts has ended, parts cannot be replaced even if an abnormality is found in the internal parts or accessories during inspection or maintenance.

## Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the warranty period, Mitsubishi Electric shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi Electric.
- (2) Loss in opportunity, lost profits incurred to the user by failures of Mitsubishi Electric product.
- (3) Damages whether foreseeable or not, secondary damages, compensation for accidents, and compensation for damages to products other than Mitsubishi Electric products, caused by exceptional situations.
- (4) Compensation for cost occurring secondarily from replacement work by the user, maintenance of on-site equipment and start-up test run and other operations.
- (5) Use that deviates from the instructions described in this instruction manual is not covered by any guarantee regarding the performance of our circuit breakers.

## Product applications

- (1) When using the products listed in this catalogue, the following conditions must be confirmed and obeyed. The product must be used so that a failure that occurs to the product does not lead to a serious accident. When a damage or failure occurs, the external backup function or fail-safe function must be executed systematically.

(2) The products listed in this catalogue are designed and manufactured as general-purpose products for application to the general industry field. Therefore, the warranty does not apply to the following special uses.

- [1] The use that has a significant influence on the public facilities such as nuclear power plants and other power plants of power companies.
- [2] The use for railway companies, government offices, etc. that require to build the special quality assurance system.
- [3] The use for aerospace equipment, medical equipment, railway equipment, combustion and fuel equipment, passenger vehicles, manned transportation equipment, recreational equipment, safety equipment, and air conditioner for servers and the cooling facilities that are expected to have a significant influence on life, body, and property.

If the products listed in this catalogue are used for the above mentioned special uses, Mitsubishi Electric does not take any responsibility for the quality, performance, and safety of the product, which includes, but is not limited to, default liability, defect liability, quality assurance liability, tort liability, and product liability. However, in case the special quality (beyond general specifications) is not required and the use is a limited purpose and the backup/fail-safe functions are equipped with the facility, Mitsubishi Electric may determine that the products listed in this catalogue can be guaranteed. For details, consult a distributor or Mitsubishi Electric.

## Safety precautions

- Before using this product, read “Safety precautions” and the user’s manual carefully and use it correctly.
- Important safety instructions are given below. Strictly observe the instructions.
- Be sure to instruct the end user with these safety precautions.

### Meaning of indications

	<b>DANGER</b>	Incorrect handling of the product will result in a hazardous situation, such as death or serious injury.
	<b>CAUTION</b>	Incorrect handling of the product may result in a hazardous situation according to circumstances.
		This means prohibition. Never ignore this instruction.
		Warning for possible outbreak of a fire under certain conditions.

### **DANGER**

- Do not use the product under the conditions with over-rated current. Otherwise, ground-fault or short circuit fault could occur due to dielectric breakdown, or explosion could occur due to a short circuit protection failure.
- Do not touch terminal area. There is a risk of electrical shock.

### **CAUTION**

- The electrical work shall be performed by qualified personnel (electrical expert).
- Inspection and maintenance should be performed by qualified personnel (electrical expert). Before performing wiring works, turn off the upstream circuit breaker. Failure to do so may expose you to electrical shock.
- Tighten the terminal screw with the torque specified in the instruction manual. Failure to do so may cause a fire.
- Do not install or store in an abnormal environment with high temperature, high humidity, dust, corrosive gas, vibrations, or shocks, etc. To do so may cause a fire, malfunction of the circuit breaker or make it inoperative.
- Protect the circuit breaker so that foreign particles, such as dust, concrete powder and iron powder, and rain water will not enter the circuit breaker. Failure to do so may cause malfunction or fire.
- When the circuit breaker trips automatically, remove the cause before turning on the handle. Failure to do so may cause an electric shock or a fire.
- Retighten the terminals periodically. Failure to do so may cause a fire.
- Use the product in 50/60 Hz. Failure to do so may cause malfunction, inoperativeness or fire.
- Dispose of the product as industrial waste.

## Changes in product specifications

The specifications of the product listed in this catalogue, manuals or technical documents are subject to change without prior notice.

# Product Features


## Best Solution

Through Flexible and Various Options, To be Built up the Suitable Functions.

### Electronic Trip Relay

#### Main setting module ①

With interchangeable & add-on modules, flexible functions built up.

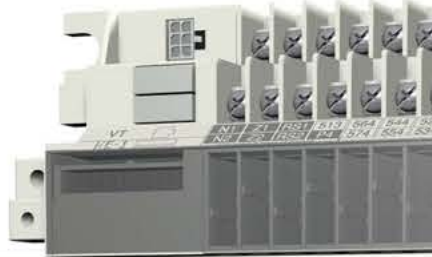

WS1 WS2 WS3	General use	WM1 WM2 WM3	Generator protection use	WB1 WB2 WB3	Special use	WF1 WF2 WF3	Protective coordination use
LTD+STD+INST / MCR		LTD+STD+INST / MCR		INST / MCR		LTD+STD+INST / MCR	

#### Optional setting module ②

With optional setting modules, GFR, ER etc are added easily.

G1	E1	AP	N5
Ground fault protection (GFR)	Earth leakage (ER) <sup>(1)</sup>	2nd Additional Pre-alarm	Neutral pole <sup>(2)</sup> 50% protection

Note (1) : Combination with ZCT

(2) : With "N5" optional module, Neutral pole protection will be changed from 100% (standard) to 50%.

#### Power supply ③

It is necessary for Display and LEDs. (see page 23, 24.)

P1	100-240V AC-DC
P2	24-60V DC
P3	100-240V AC / 100-125V DC with output contact
P4	24-60V DC with output contact
P5	100-240V DC with output contact (SSR) <sup>(1)</sup>

Note (1) : Solid State Relay

#### Additional function

EX1/EX2	Extension module	DP1	Display	TAL	Temperature alarm
	Module for display and communication		Current, Voltage, Power, Harmonics, Trip current, etc. Note : The VT unit is required to display the measured data except the load current.	The TAL is operated by an unusual temperature of the breaker contacts. (see page 38)	
				MCR-SW	MCR switch
					Making current release is possible with MCR switch. (see page 38)

#### WS relay with ampere meter and fault memory (DP3)


DP3	Display
	Displays Current, Harmonic, Trip current, Trip cause, etc. Note : Refer to page 27 on details.

#### Protection with power from Internal CT


The Over current protection and Ground fault protection can work with power from Internal CT, even if the control power source is off. For the Trip indicator LED and the additional functions like EX1/EX2, DP1/DP2, TAL and Network, the control power source is required.

#### Secure protection by actual effective value detection

For spread of electronic devices such as inverter, the actual effective value detection method is adopted, which is strong against deformed waveform and is detected from each phase independently .

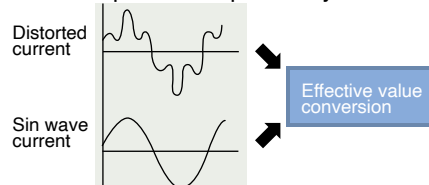

# Network

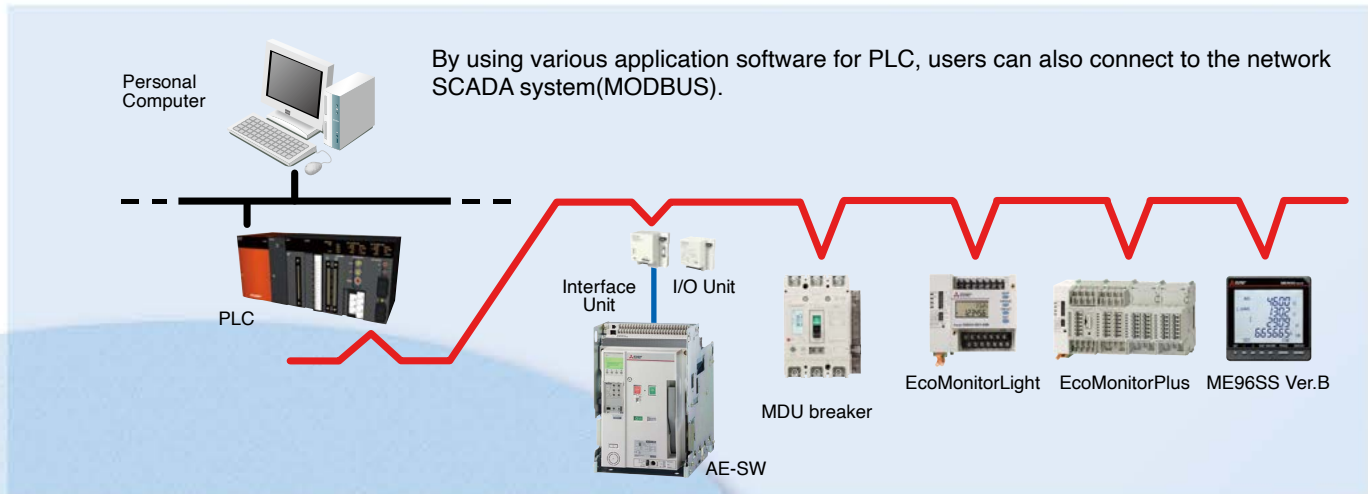

## Interface unit

MODBUS(RS-485)



**BIF-MD**

### Communication items

Measurement / Alarm	Current, Voltage*, Power*, Harmonics*, etc.
	Tripping cause, Tripping current
	Alarm (PAL, TAL, Self diagnosis, etc.)
Breaker remote control	ON and OFF by CC and SHT
	Spring charge by MD
Breaker status	ON or OFF or Charge state
	Drawout position
	ETR Setting value

Note\*: The VT unit is required to display the measured data except for the load current.

## I/O unit

**BIF-CON**

ON, OFF, Spring charge, Digital input



Option to interface unit I/O unit enables to turn ON/OFF the breaker and the spring charge via network. And by addition of the drawout position switch, it is possible to transmit the breaker drawout position.

## Display unit for Panel board

**DP2**



It has the same function as the breaker display unit (DP1). In the case where the breaker is installed in the panel, it becomes possible to view the measurement information from the outside of the panel board.

Note : The VT unit is required to display the measured data except for the load current.


## VT unit

**VT**



VT unit enables to measure voltages, electric powers, harmonics and etc.

# Electronic Trip Relay type code

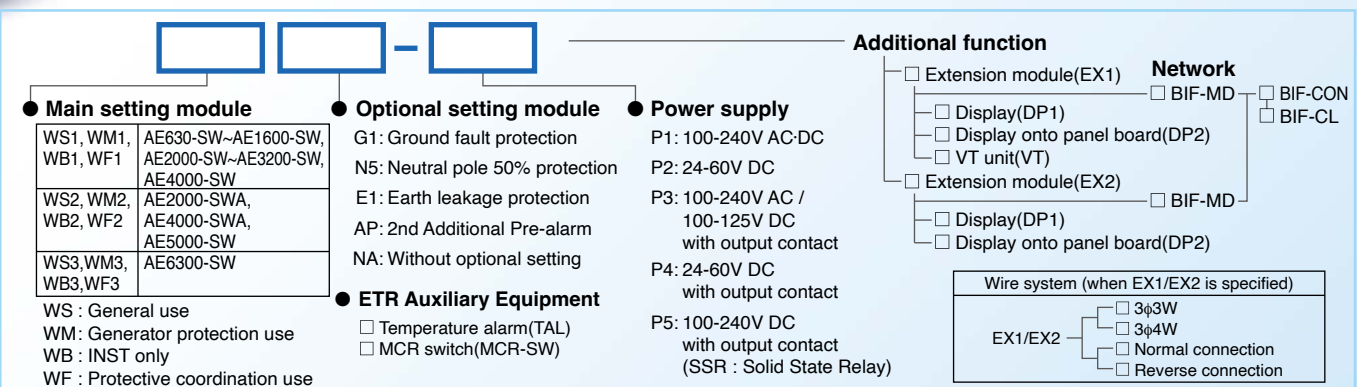

Note : For DP3, refer to page 27 on details.



# Product Features

## High-Performance High-Reliability

The safety of valuable circuits can be securely maintained.



### Higher short circuit protection performance by improving breaking capacity

In case of 690V AC, I<sub>cu</sub> = I<sub>cs</sub> improved  
 from 50 kA to 65 kA for AE630-SW~AE2000-SWA  
 from 50 kA to 75 kA for AE2000-SW~AE4000-SWA  
 from 50 kA to 85 kA for AE4000-SW~AE6300-SW

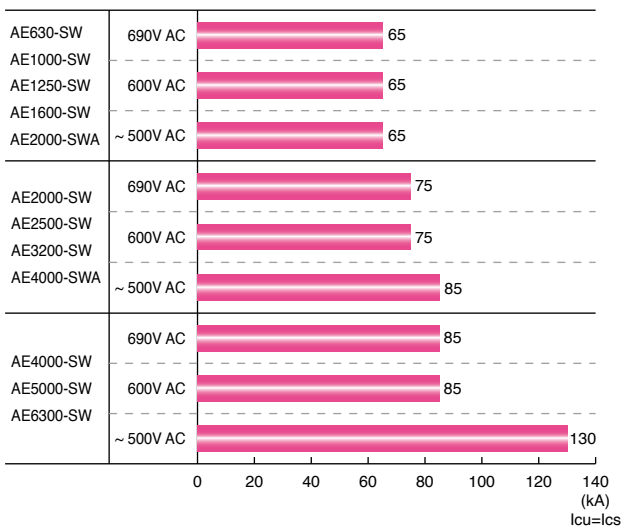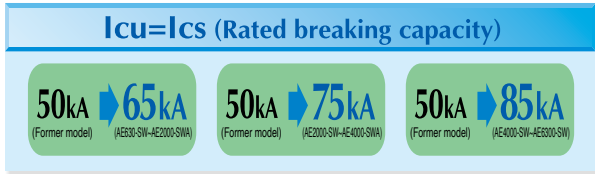

### Wide coordination range by improving rated short-time withstand current

I<sub>cw</sub> (1s) improved  
 from 65 kA to 75 kA for AE2000-SW~AE4000-SWA  
 from 85 kA to 100 kA for AE4000-SW~AE6300-SW

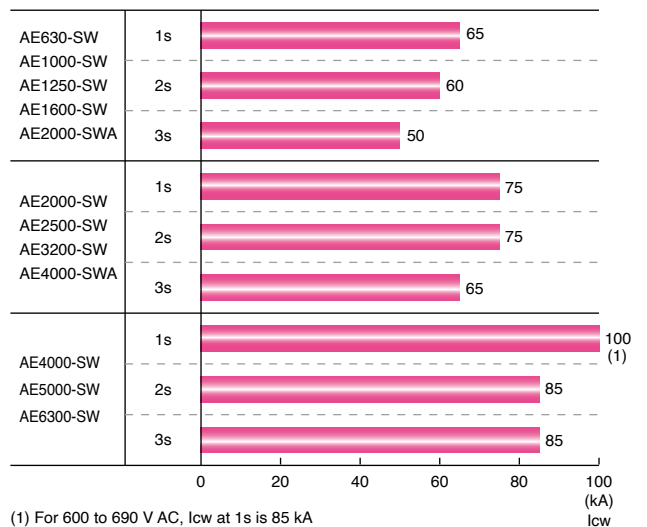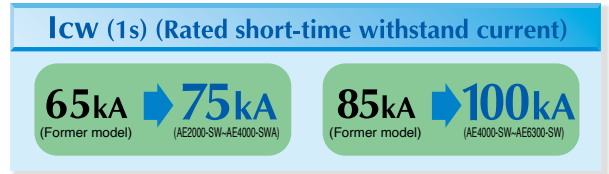

### Higher safety by improving insulation performance

Rated impulse withstand voltage (U<sub>imp</sub>) for the main circuit is improved from 8 kV to 12 kV.


### U<sub>imp</sub> (Rated impulse withstand voltage)



### Higher reliability by High operating durability


#### Mechanical

AE-SW series are sharply improved in mechanical durability compared to the former model.

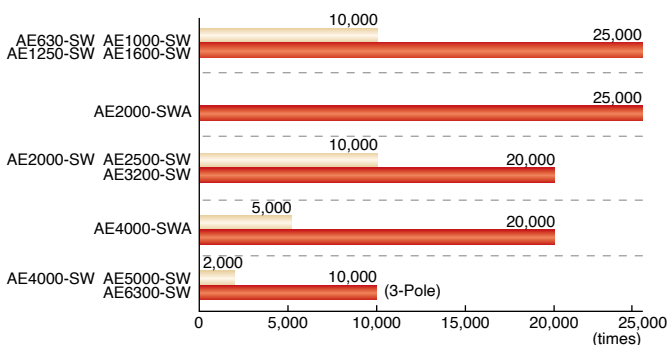

# Customer Friendly Convenience for Customer

## 3 sizes

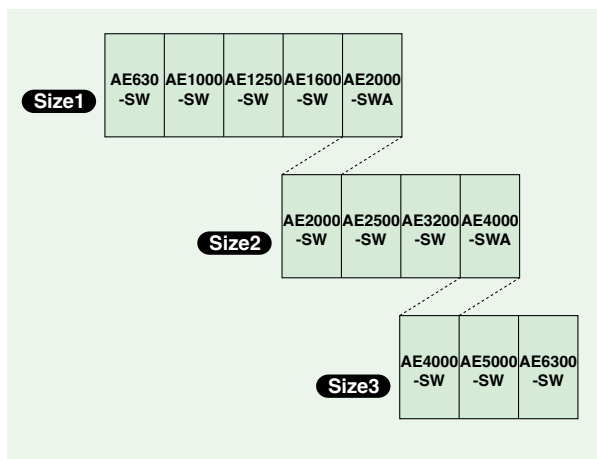

## Compact size AE2000-SWA!

- The compact AE2000-SWA can reduce the panel size.



## Replacement from the AE-SS model

AE-SS model : Discontinued in 2007


- Due to the same installation dimension and outline dimension, the former model (AE-SS) can be replaced with AE-SW series.
- For the replacement of Drawout type, the Drawout frames (Cradle) for AE-SS have to be replaced with one for AE-SW.
- AE-SW can be installed to the existing connection bus bar without any special connection kit. (Except for AE2000-SWA and AE4000-SWA)



## Replacement from the old model (AE-S)

AE-S model : Discontinued in 1991

By using a conversion adapter, AE-S type breakers can be easily renewed to AE-SW type breakers. There is no need to change the panel's connecting conductors or mounting hole positions, which reduces the amount of work required and shortens the replacement time. (Available for drawout types only. Please inquire for details.)

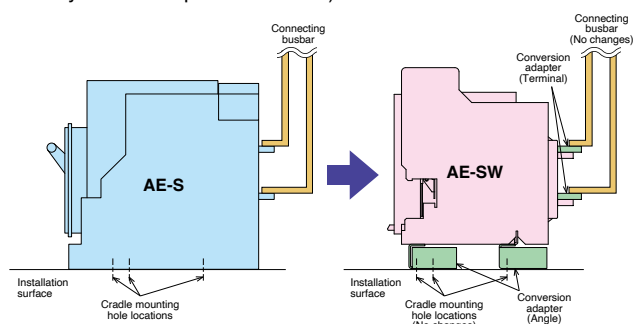

## Reverse connection available

Line and Load are not defined on the Main circuit terminals. Therefore, reverse connection is available without any limitation.


## Zero arc space

Arc exhaust to the outside of the breaker is drastically reduced for safer operation. (For AE630-SW~AE4000-SWA models, 600V AC or less) (Refer to page 62 : Insulation distance)

# Appearance and Product structure

## Fixed type

### AE-SW Series

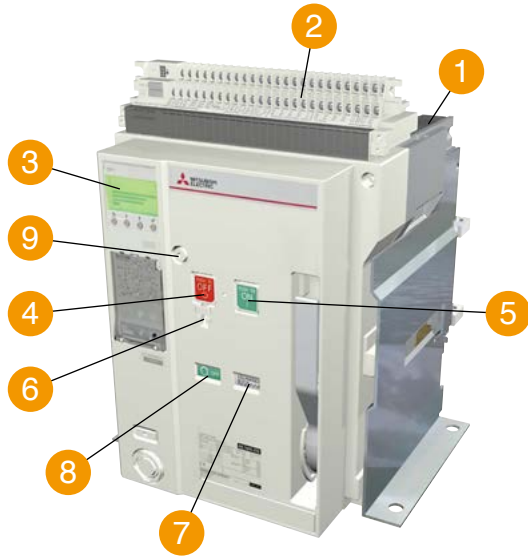


AE1600-SW 3P

- 1 Arc extinguishing chamber
- 2 Control circuit terminal block
- 3 Electronic trip relay
- 4 OFF button
- 5 ON button
- 6 Padlock hook (allows a padlock to be attached to the OFF button)
- 7 Charging indicator
- 8 ON/OFF indicator
- 9 Manual reset button(Optional)

For the fixed type, Lifting hooks (HP) are attached.

## Drawout type

### AE-SW Series

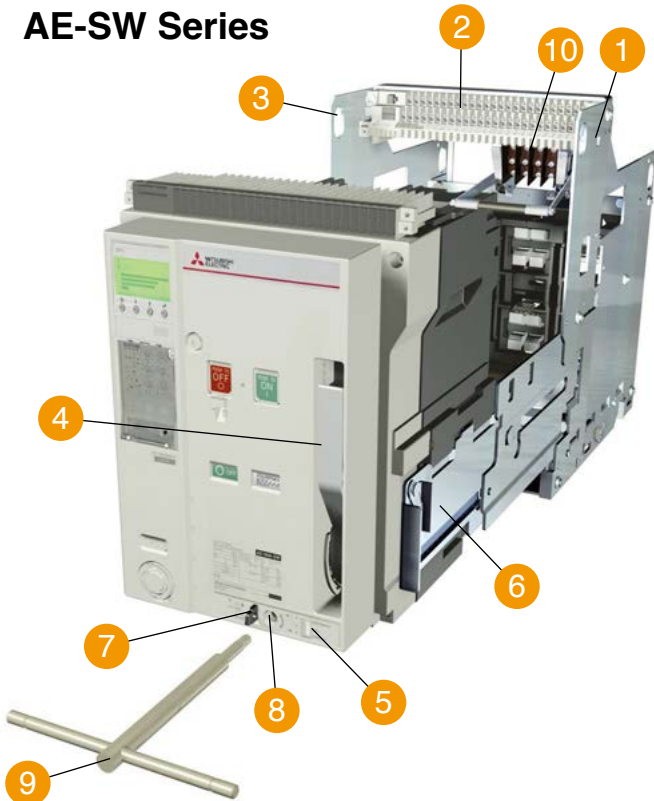


AE1600-SW 3P


- 1 Cradle
- 2 Control circuit terminal block
- 3 Lifting hole
- 4 Charging handle
- 5 Drawout position indicator
- 6 Extension rail
- 7 Lock plate
- 8 Aperture for the drawout handle
- 9 Drawout handle
- 10 Cell switch (Optional)

For the drawout type, Drawout handle is attached.

# Skeleton

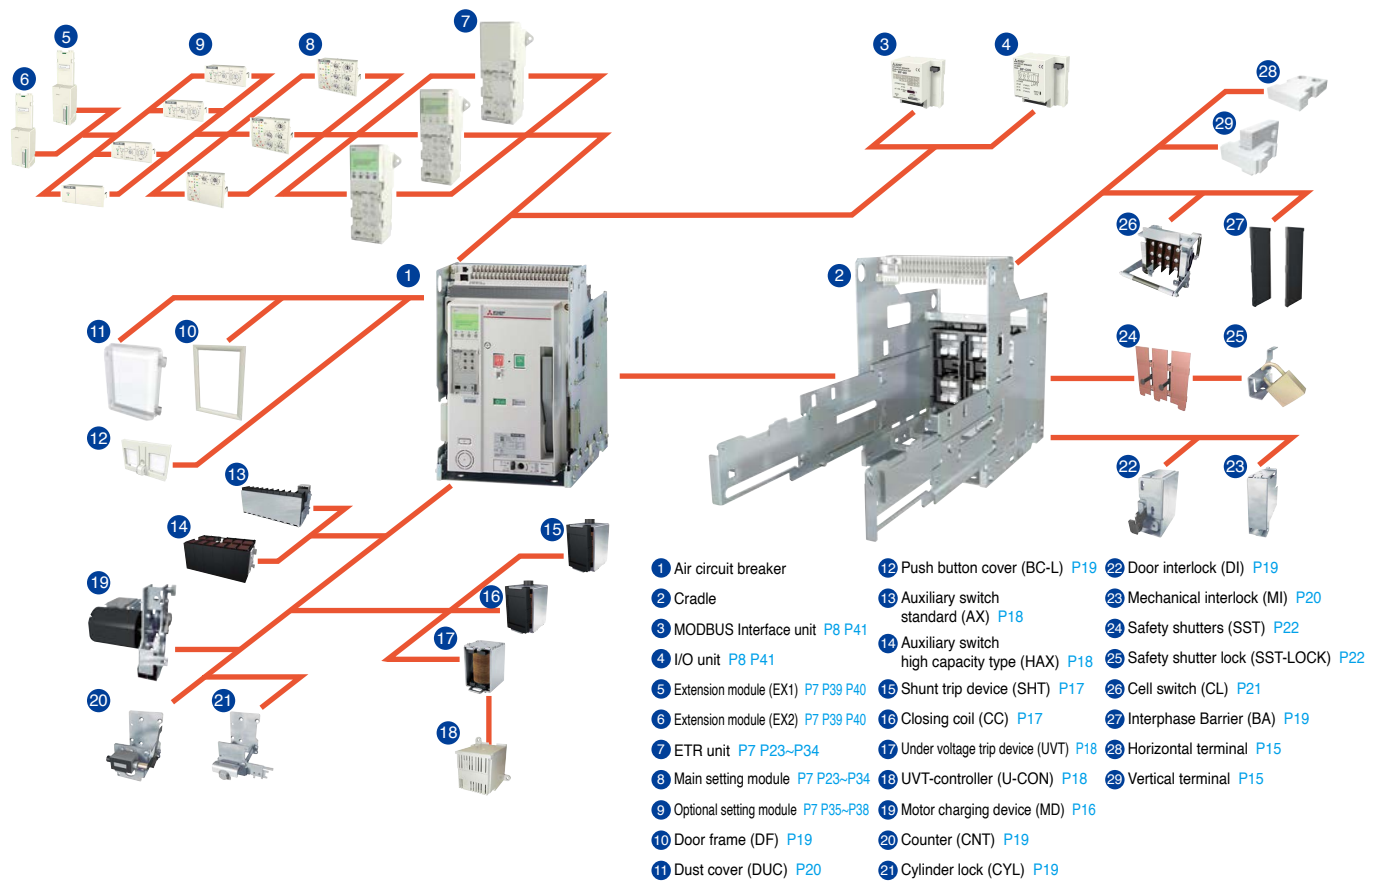

# Product configuration

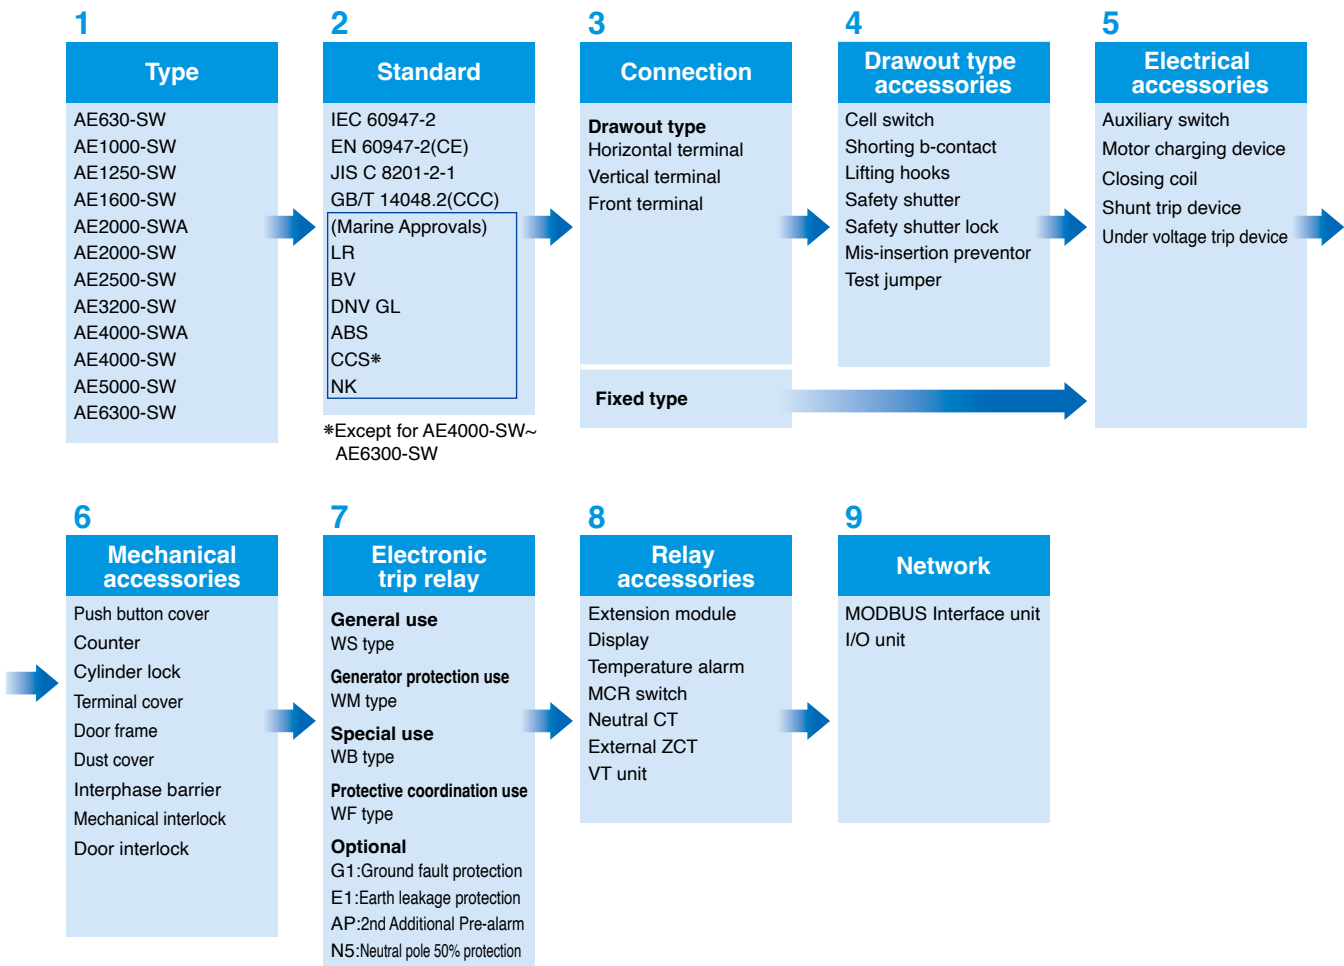

# Product Specification

## ● Specification

Type			AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW
Frame size	(A)		630	1000	1250	1600
Rated insulation voltage (Ui)	(50/60Hz)(AC.V)		1000			
Rated operational voltage (Ue)	(50/60Hz)(AC.V)		690			
Rated impulse withstand voltage (Uimp)	(kV)		12			
Selectivity category			B			
Pollution degree			3			
EMC environment condition (environment A or B) (Note 14)			A			
Number of poles			3, 4			
Rated current In (CT rating)	(A)		630 (Note 5)	1000	1250	1600
Current setting Ir (A) (40°C)	[WS] [WB]	General use (Current rating adjustable 0.5 to 1.0 × In 0.05 step)	315-346.5-378-409.5- 441-472.5-504-535.5- 567-598.5-630 (Note 5)	500-550-600-650- 700-750-800-850- 900-950-1000	625-687.5-750-812.5- 875-937.5-1000-1062.5- 1125-1187.5-1250	800-880-960-1040- 1120-1200-1280-1360- 1440-1520-1600
	[WM]	Generator protection use (Current rating fixed) (Note 10)	160 ≤ Ir ≤ 630	400 ≤ Ir ≤ 1000	800 ≤ Ir ≤ 1250	1000 ≤ Ir ≤ 1600
Rated current of neutral pole	(A)		630	1000	1250	1600
IEC60947-2 EN60947-2 JIS C 8201-2-1	Ultimate breaking capacity Icu (kA rms)		690V AC	65		
			600V AC	65		
			240-500V AC	65		
		with MCR	690V AC	65		
			600V AC	65		
			240-500V AC	65		
	Bare + External relay	690V AC	25 (Note 1)			
		500V AC	25 (Note 1)			
	Rated service breaking capacity Ics (kA rms) %Icu		100%			
	Rated making capacity Icm (kA peak)		690V AC	143		
			600V AC	143		
			240-500V AC	143		
		with MCR	690V AC	143		
			600V AC	143		
240-500V AC			143			
Bare or Bare + External relay	690V AC	52.5				
	500V AC	52.5				
Rated short time withstand current Icw (kA rms)	1s		65			
	2s		60			
	3s		50			
Maximum total breaking time		(ms)		40 (Note 6)		
Maximum closing time		(ms)		80		
Number of operating cycles  (Note 2) (Note 15)	With rated current	690V AC In (Note 16)	5,000			
		690V AC In (Note 17)	10,000			
	Without rated current (Note 17)		25,000 (Note 4)			
Connecting terminal  (Note 11)	Horizontal terminal		○			
	Vertical terminal		○			
	Front terminal		○			
Outline dimension (mm) H×W×D	Fixed type	3-pole	410×340×290			
		4-pole	410×425×290			
	Drawout type	3-pole	430×300×375			
		4-pole	430×385×375			
Weight (kg) (without Accessory)  (Note 12)	Fixed type	3-pole	35	35	35	
		4-pole	42	42	43	
	Drawout type (including cradle)	3-pole	56	56	56	
		4-pole	70	70	70	
	Cradle only	3-pole	24			
		4-pole	28			
Marking:CE/UKCA		Self-declaration				
CCC recognition (☆:Certified)		☆				
Marine approval (☆:Certified)		☆(NK, LR, DNV(DNV GL), BV, ABS, CCS)				
Automatic tripping device		Electronic (effective value detection)				

(Note 1) This is the Icu value when the bare main body and the external relay are combined.

(Note 2) The number of operating cycles without rated current also includes the number of operating cycles with rated current.

(Note 3) AE2000-SWA, AE4000-SWA and AE4000-SW-AE6300-SW apply for only vertical terminal of connecting terminal.

(Note 4) This value is max. operating cycle for just breaker body without any accessories.

(The max. operating cycles for the accessories like AX, MD, CC, SHT and UVT are half of this value.)

(Note 5) Products with low rating types are available. For AE630-SW low rating types (250A, 315A, 500A), DP3 is not available.

AE 630-SW 3 kinds of products with low rating types are available.

AE 2000-SW 2 kinds of products with low rating types are available.

· 250-275-300-325-350-375-400-425-450-475-500(CT 500A)  
· 157.5-173.3-189-204.8-220.5-236.3-252-267.8-283.5-299.3-315(CT 315A)  
· 125-137.5-150-162.5-175-187.5-200-212.5-225-237.5-250(CT 250A)

· 800-880-960-1040-1120-1200-1280-1440-1520-1600(CT 1600A)  
· 625-687.5-750-812.5-875-937.5-1000-1062.5-1125-1187.5-1250(CT 1250A)

	AE2000-SWA	AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA	AE4000-SW	AE5000-SW	AE6300-SW	
	2000	2000	2500	3200	4000	4000	5000	6300	
			1000				1000		
			690				690		
			12				12		
			B				B		
			3				3		
			A				A		
			3, 4				3, 4 (HN, FN) (Note 7)		
	2000	2000 (Note 5)	2500	3200	4000	4000	5000	6300	
	1000-1100-1200-1300-1400-1500-1600-1700-1800-1900-2000	1000-1100-1200-1300-1400-1500-1600-1700-1800-1900-2000 (Note 5)	1250-1375-1500-1625-1750-1875-2000-2125-2250-2375-2500	1600-1760-1920-2080-2240-2400-2560-2720-2880-3040-3200	2000-2200-2400-2600-2800-3000-3200-3400-3600-3800-4000	2000-2200-2400-2600-2800-3000-3200-3400-3600-3800-4000	2500-2750-3000-3250-3500-3750-4000-4250-4500-4750-5000	3150-3465-3780-4095-4410-4725-5040-5355-5670-5985-6300	
	1250 ≤ Ir ≤ 2000	800 ≤ Ir ≤ 2000	1600 ≤ Ir ≤ 2500	2000 ≤ Ir ≤ 3200	2500 ≤ Ir ≤ 4000	2500 ≤ Ir ≤ 4000	3150 ≤ Ir ≤ 5000	4000 ≤ Ir ≤ 6300	
	2000	2000	2500	3200	4000	2000 (4000) (Note 8)	2500 (5000) (Note 8)	3150 (6300) (Note 8)	
			75				85		
			75				85		
			85				130 (Note 9)		
			75				85		
			75				85		
			75				100		
			45 (Note 1)				65 (Note 1)		
			45 (Note 1)				65 (Note 1)		
			100%				100%		
			165				187		
			165				187		
			187				286		
			165				187		
			165				187		
			165				220		
			94.5				143		
			94.5				143		
			75				100 (Note 13)		
			75				85		
			65				85		
			40 (Note 6)				50 (Note 6)		
			80				80		
	1,500	1,500		1,000	500		1,000		
	8,000	8,000		8,000	5,000		-		
			20,000 (Note 4)				10,000 (3P) / 5,000 (4P)		
	-		○		-		-		
	○ (Note 3)		○		○ (Note 3)		○ (Note 3)		
	-		○		-		-		
			410×475×290				414×874×290		
			410×605×290				414×1004(1134)×290 (Note 8)		
			430×435×375		430×439×375		480×889×375		
			430×565×375		430×569×375		480×1019(1149)×375 (Note 8)		
	44	51	52	54	73	141	141	148	
	54	64	64	67	92	159 (179)	159 (179)	166 (188)	
	62	81	81	85	101	194	194	208	
	75	101	101	106	127	223 (247)	223 (247)	238 (269)	
	27		33	34	46	98	98	107	
	32		40	42	58	113 (127)	113 (127)	121 (138)	
			Self-declaration				Self-declaration		
			☆				☆		
			☆(NK, LR, DNV(DNV GL), BV, ABS, CCS)				☆(NK, LR, DNV(DNV GL), BV, ABS)		
			Electronic (effective value detection)				Electronic (effective value detection)		

(Note 6) This value means the instantaneous breaking time at shortcircuit interruption. As for accessories (SHT, UVT), refer to page 17 and 18.

(Note 7) 4(HN) means the neutral poles current capacity is 50% of the rated current, for 4 poles. 4(FN) means the neutral poles current capacity is 100% of the rated current, for 4 poles.

(Note 8) ( ) shows the value for 4P FN type.

(Note 9) Marine approval value is 138kA.

(Note 10) For WM relay, the current setting Ir can be set by 1A except AE630-SW low rating types "CT315A" and "CT250A". For AE630-SW with "CT315A" and "CT250A", it can be set by 0.1A.

(Note 11) As for selectable connection, please refer to page 15.

(Note 12) These weights include an electronic relay, but don't include other accessories.

(Note 13) For 600 ~ 690V AC, low at 1s is 85kA.

(Note 14) This product is designed for Environment A. When used in Environment B, it may cause unintended electromagnetic interference. The user must implement appropriate mitigation measures.

(Note 15) The number of operating cycles is the guideline for the life of the open/close operation in the standard operation environment. These are not guaranteed values.

(Note 16) This is the guideline for the life of the open/close operation when periodic inspection and maintenance are performed and consumable parts are not replaced.

(Note 17) This is the guideline for the life of the open/close operation when periodic inspection and maintenance are performed and consumable parts are replaced.

(Remark) All models conform the isolating function according to IEC 60947-2. Reverse connection is possible.

# Connections

## Over view (AE630-SW~AE1600-SW, AE2000-SW~AE3200-SW)

Connections Type	Horizontal	Vertical (VT)	Front (FT)	Vertical terminal adapter (VTA)	Front terminal adapter (FTA)
Fixed type (FIX)		—	—	 FIX-VTA	 FIX-FTA
Drawout type (DR)		 DR-VT	 DR-FT	 DR-VTA	 DR-FTA

● Connection image : AE630-SW~AE1600-SW, 3-pole type

## Over view (AE2000-SWA, AE4000-SWA, AE4000-SW~AE6300-SW)

Connections Type	Vertical (VT) Standard
Fixed type (FIX)	 FIX-VT
Drawout type (DR)	 DR-VT

● Connection image : AE2000-SWA, 3-pole type  
● For AE2000-SWA, AE4000-SWA, AE4000-SW, AE5000-SW and AE6300-SW models, vertical terminal only is available.

## Available connections

Connections		Breakers											
		AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA	AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA	AE4000-SW	AE5000-SW	AE6300-SW
Fixed type (FIX)	Horizontal	○	○	○	○	—	○	○	○	—	—	—	—
	FIX-VT	—	—	—	—	○	—	—	—	○	○	○	○
	FIX-VTA	○	○	○	○	—	○	○	○	—	—	—	—
	FIX-FTA	○	○	○	○	—	○	○	○	—	—	—	—
Drawout type (DR)	Horizontal	○	○	○	○	—	○	○	○	—	—	—	—
	DR-VT	○	○	○	○	○	○	○	○	○	○	○	○
	DR-FT	○	○	○	○	—	○	○	○	—	—	—	—
	DR-VTA	○	○	○	○	—	○	○	○	—	—	—	—
	DR-FTA	○	○	○	○	—	○	○	○	—	—	—	—

○ Available  
— Unavailable

## Manual charging




The closing spring is charged by the manual charging handle. The breaker is closed when the ON button is pressed, and opened when the OFF button is pressed.

- When the closing spring is completely charged, the charging indicator will show "CHARGED".
- Please close the breaker after the charging indicator turned to "CHARGED".
- The indicator shows the ON or OFF state of the main contacts.
- The breaker cannot be closed while the OFF button is being pressed. (Safety design)
- OFF lock is enabled by padlock (See page 11 and page 21) as standard.

## Motor charging device (MD)


Option

1

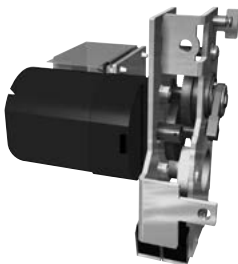


The closing spring is charged by an electric motor. When the breaker is closed, the spring is charged automatically (ON-charge method). The closing coil (CC) is required to remotely close the breaker, and the shunt trip device is required to remotely open the breaker.

- Manual charging operation is also possible.
- Pumping prevention is assured both electrically and mechanically.
- As the charging completion contact is separate from the electrical charging circuit, its function in the control scheme can be arranged as desired.

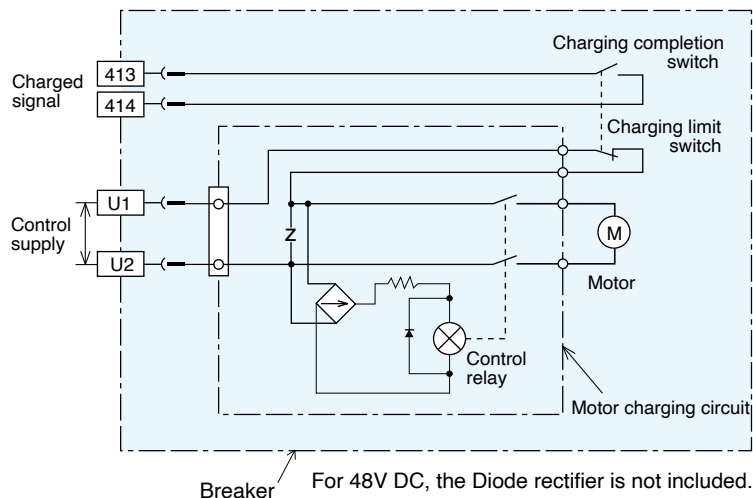


### OFF charging method

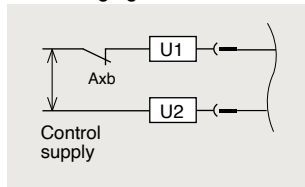

OFF charging method is also available. The closing spring is charged automatically when the breaker is opened. This is available only by externally connecting b contact (AXb) of the auxiliary switch to the motor charging circuit in series. In case of DC power supply, please use high capacity auxiliary switch (HAX).

### Polarity of DC circuit use

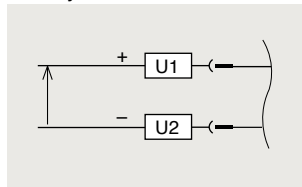

### Motor charging rating


Rated voltage (V)	Applicable voltage range (V)	Applied voltage (V)	Inrush		Steady current (A)	Charging time (s)	Criterion for power requirement (VA, W)
			Current [Peak value] (A)	time (s)			
48DC	36 ~ 52.8	48	14	< 0.4	3	≤ 5	500
AC/DC 100-125	85 ~ 137.5	100	10(10)	AC: < 0.45	3(4)		700
		125	12(12)	DC: < 0.25	3(4)		1000
AC/DC 200-250	170 ~ 275	200	5(7)	AC: < 0.45	1(2)		700
		250	6(8)	DC: < 0.25	1(2)	1000	

Values in parentheses show values for AE4000-SWA 4 pole and AE4000-SW ~ AE6300-SW. We cannot manufacture AE4000-SWA 4 pole and AE4000-SW ~ AE6300-SW in 48V DC rating. These values are for reference, not guaranteed values. Common use for 50 and 60Hz in AC.

### Charging completion contact rating

Voltage (V)	Current (A)	
	Resistance load	Inductive load
AC (50/60Hz)	460	5
	250	10
	125	10
DC	250	3
	125	10
	30	10

# Accessories (for breaker unit)

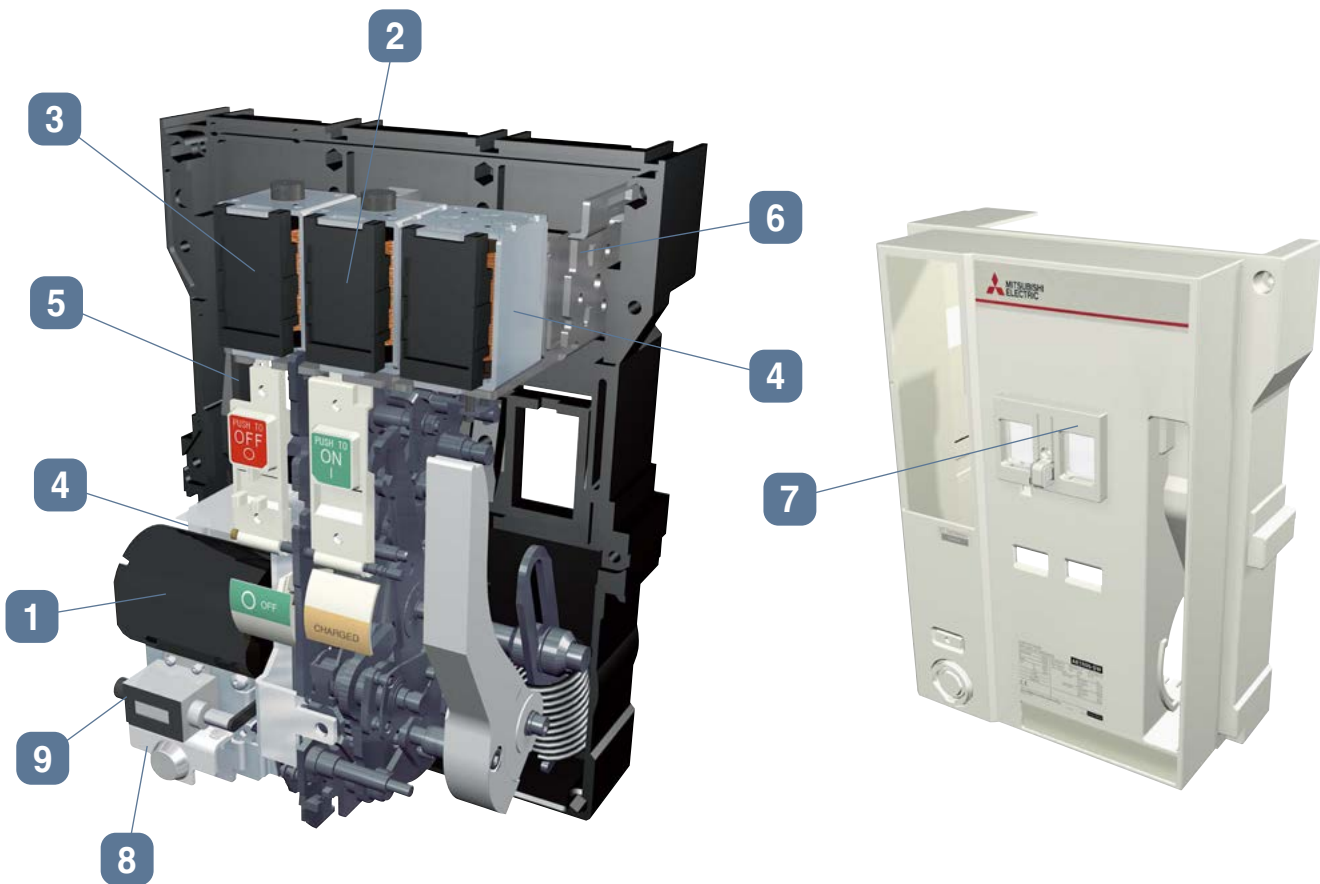

## Closing coil (CC)

Option

2




The closing coil is a device to close the breaker by remote control.

- An interlock to prevent pumping is provided electrically.

Rated voltage (Applicable voltage range)	Operating voltage · Operating inrush current (VA)		Closing time (Note1)
	AC	DC	
24-48V DC (18-52.8)	-	24V DC 3.0A (100W)	0.08 s or less
	-	48V DC 6.0A (200W)	
100-250V AC · DC common (75-275)	100V AC 0.7A (100VA)	100V DC 0.8A (100W)	
	250V AC 1.7A (200VA)	250V DC 1.8A (250W)	

CC circuit diagram

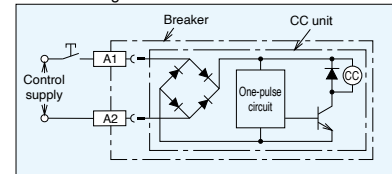

Diode rectifier is not used for control source 24-48V DC.

- Note 1) The operating time when the rated voltage is applied.  
In case of double rating of rated voltage, it is the value for the lower rating.  
(Example) In case of 24-48V DC, it is operating time for 24V DC.
- Note 2) After completing closing spring charging, wait for an interval of at least 0.5 seconds before applying the closing instruction to CC.
- Note 3) When closing again after applying voltage to SHT, an interval of at least 0.5 seconds is required.
- Note 4) These values are for reference, not guaranteed values.
- Note 5) Common use for 50 and 60Hz in AC.

- Closing time means time from the initial energization of the closing coil up to the complete closing of the main contacts.
- As CC is one-pulse driven, it is not necessary to insert AXb for burning prevention purposes. Inserting AXb will cause anti-pumping function to be ineffective.

## Shunt trip device (SHT)

Option


3



The shunt trip device is a device to open the breaker by remote control. A cut-off switch is included.

Rated voltage (Applicable voltage range)	Operating voltage · Operating inrush current (VA)		Operating time (Note1)
	AC	DC	
24-48V DC (16.8-52.8)	-	24V DC 2.5A (100W)	0.04 s or less
	-	48V DC 6.0A (200W)	
100-250V AC · DC common (70-275)	100V AC 0.4A (100VA)	100V DC 0.6A (100W)	
	250V AC 1.4A (150VA)	250V DC 1.6A (200W)	
380-500V AC (266-550)	380V AC 0.5A (250VA)	-	
	500V AC 0.7A (300VA)	-	

SHT circuit diagram

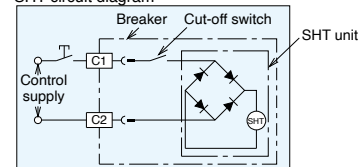

Diode rectifier is not used for control source 24-48V DC.

- Note 1) In case of double rating of rated voltage, it is the value for the lower rating.  
(Example) In case of 24-48V DC, it is operating time for 24V DC.
- Note 2) Operating time for AE4000-SW~AE6300-SW is 0.05s or less.
- Note 3) These values are for reference, not guaranteed values.
- Note 4) Common use for 50 and 60Hz in AC.

## Under voltage trip device (UVT)

Option


4




This is the device that automatically trips the breaker when the circuit voltage drops below the nominal voltage, and comprises UVT coil and UVT controller. There are 3 kinds of tripping time, INST, 0.5s and 3.0s. A trip terminal for forced OFF function is included as standard equipment.

Rated voltage	Frequency	operating time (time delay)	Pick-up voltage	Drop-out voltage	Trip function	Power consumption
100-120V AC	50/60Hz	<input type="checkbox"/> Inst(0.2s) <input type="checkbox"/> 0.5s(Min.) <input type="checkbox"/> 3.0s(Min.)	65~85V	45~70V	With open circuit of DT1,DT2 terminals.	Steady: 20VA Inrush: 200VA ≤ 0.4S (100-120V AC) 24V DC (Inrush:100VA ≤ 1S)
200-240V AC			130~170V	90~140V		
380-460V AC			247~323V	171~266V		
24V DC			15.6~20.4V	10.8~16.8V		
48V DC			31.2~40.8V	21.6~33.6V		
100-110V DC			65~85V	45~70V		
120-125V DC			78~102V	54~84V		

UVT circuit diagram

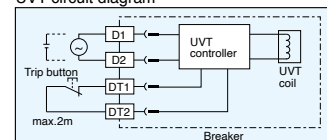

UVT circuit diagram (In case of 380~460V AC)

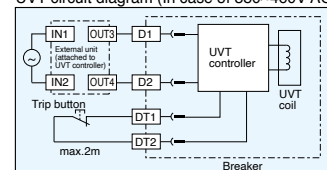

Note1) In case of 380-460V AC, the external unit is attached additionally.

Note2) The operating time is a guarantee value when it drops from 85% or more of rated voltage.

Note3) Time delay should be allowed for 1.5s between applying the voltage to the UVT and closing the breaker.

Note4) If a remote trip function is required, remove the shorting bar (DT1 DT2) and connect a normally closed switch, rated 0.5A at 150V DC across them. If a forced OFF function is used, the shorting (signal input to DT1 and DT2) should be held for 0.2 sec. and more.

Note5) When an ambient temperature is at 60°C, this device is installed outside of the breaker body.

Note6) The operating time in the above table does not include the operating time of the breaker.

Note7) Common use for 50 and 60Hz in AC.

Note8) The applicable voltage range is from 85% of the minimum rated voltage to 110% of the maximum rated voltage.

## OCR alarm (AL) [Automatic reset type Short-time operation (30ms)]

Standard if ETR is equipped


5



OCR alarm (AL) is provided as standard if ETR is equipped. OCR alarm (AL) is the contact (1a) of short-time operation (30ms), being output when the breaker is tripped by the electronic trip relay. Two types of automatic reset type (standard) and manual reset type (optional) are available. When ordering, specify either automatic reset or Manual reset.

Switch rating of OCR alarm

Voltage (V)		Current (A)	
		Resistive load	Inductive load
AC (50/60Hz)	240	3	2
	125	5	3
DC	240	0.2	0.2
	125	0.4	0.4
	30	4	3

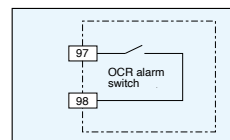

Note1) Though the control power supply is unnecessary to activate OCR alarm (AL), the self-holding circuit is necessary since the contact output is activated for the short time (30ms).

Note2) This works when tripping occurs in LTD, STD, INST, GFR or ER.

Note3) If any continuous output of OCR alarm (AL) is necessary, use the trip indicator (TI) output contact of the electronic trip relay. Choose P3, P4 or P5 for power supply type.



## OCR alarm (AL) [MRE : Manual reset type]

Option

For the OCR alarm(AL) of Manual reset type(optional), a manual reset button is provided. When the breaker trips due to the withdraw relay, the manual reset button protrudes and the OCR alarm (AL) is output continuously. The breaker cannot be turned ON until the manual reset button has been pressed to reset.

## Auxiliary switch Standard (AX) · High capacity type (HAX)

Option

6




This is the contact that remotely indicates the ON or OFF status of the breaker.

Switch rating

Voltage (V)		Current (A)			
		Standard (AX)		High capacity type (HAX)	
		Resistive load	Inductive load	Resistive load	Inductive load
AC (50/60Hz)	250	10	10	10	10
	125	10	10	10	10
DC	250	0.3	0.3	3	1.5
	125	0.6	0.6	10	6
	30	10	6	10	10
Maximum contacts		5a5b		5a5b	
Change-over sequence	Breaker state	a-contact (NO)	b-contact (NC)		
	ON	ON	OFF		
		OFF	ON		

Min. load range graph

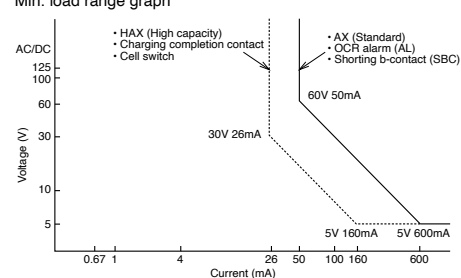

● The a and b contacts may turn simultaneously to ON instantaneously at the time of changing the contact; Pay attention to the contact state when designing circuits.

● The chattering time when the auxiliary switch changes state is 0.025 s or less.

# Accessories (for breaker unit)

## Push button cover (BC-L)

Option

7



The cover prevents careless manual operation (ON,OFF) of the push buttons.  
BC-L can be locked by a padlock (The padlock should be supplied by the customer.)  
For the suitable size of a padlock, refer to Page 21.

## Cylinder lock (CYL)

Option

8



The breaker is locked OFF with the cylinder lock.  
● Since it is an interlock which only allows the key to be removed when the breaker is locked off, it can be used for interlocking two or more breakers.

## Counter (CNT)

Option

9



The number of open/close operations of the breaker are shown by a 5 digit counter.

## Door frame (DF)

Option



The door frame improves the appearance, after cutting out the panel door to install the breaker.  
As for panel cut-out dimensions, refer to page 57.

## Door interlock (DI)

Option



The panel door cannot be opened unless the breaker is open position.  
● A wire type mechanical interlock allows flexibility in positioning breakers in the switchboard.  
● The parts of the Door panel should be supplied by the customer.  
● DI can not be installed with "Mechanical interlock(MI)for 3 breakers."

## Interphase Barrier (BA)

Option



This enhances the interphase insulation between the terminal portions of the breaker, and prevents short-circuit due to conductive inclusion or dust. It can be attached and detached easily. As for its availability, refer to the following table.

Type	Connections	AE630-SW~ AE1600-SW	AE2000-SW~ AE3200-SW	AE2000-SWA	AE4000-SWA	AE4000-SW~ AE6300-SW
Fixed type (FIX)	Horizontal (FIX)	●	●			
	Vertical terminal (FIX-VT)			▲	▲	-
	Vertical terminal adaptor (VTA)	▲	▲			
	Front terminal adaptor (FIX-FTA)	▲	▲			
Drawout type (DR)	Horizontal (DR)	●	●			
	Vertical terminal (DR-VT)	●	▲	▲	▲	▲
	Front terminal (DR-FT)	-	▲			
	Vertical terminal adaptor (VTA)	▲	▲			
	Front terminal adaptor (DR-FTA)	▲	▲			

● Available for the insulation ▲ Available for separating terminals - Attachment is impossible ■ Not existing type

\* No insulation function between upper and lower terminal.

Note) This cannot be used to separate the power supply and load sides.

## Terminal Cover (TTC)

Option



The transparent terminal cover prevents from careless touching to the live control terminals.  
Protection degree is IP20.

## Mechanical interlock (MI)

Option



This is the device to prevent parallel charge of 2 or 3 units of breakers, and it can interlock the breakers mechanically without fail.

All combinations are available among any models from AE630-SW to AE6300-SW.


Please make inquiries about installation to AE4000-SW~AE6300-SW.

Further the interlock is possible among the different connection types or poles, such as fixed type or drawout type, 3 pole or 4 pole.


In combination with electric interlock, the higher safety interlock system can be secured.

- For drawout type, the interlock works at "CONNECTED" position, and in another position the interlock is released, which assures easy maintenance and inspection of the breaker.
- When turning OFF one breaker and then turning ON another breakers, please take an interval 0.5 seconds or more.
- MI for 3 breakers can not be installed by combining with Door Interlock (DI).

### Mounting layout dimensions

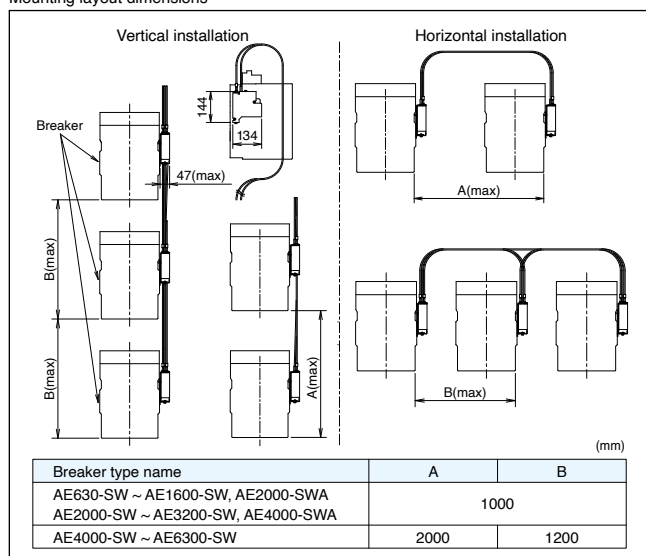

### Interlock combinations

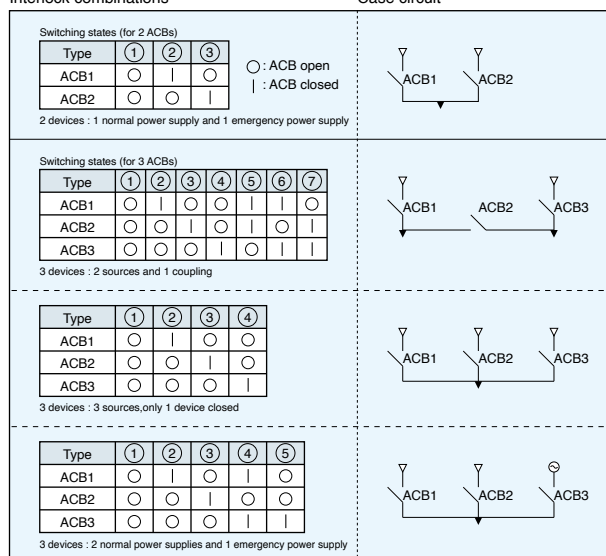

## Condenser trip device (COT)

Please prepare by the customer. Refer to Page 17 for the specifications of combined SHT.

## Dust cover (DUC)

Option



Dust cover prevents the dust or water entering into the panel board from the breaker panel cut. Protection degree is IP54.

# Accessories(for drawout type)


## Drawout interlock (standard equipment)

This is the safety device that prevents insertion and drawout operation. When the breaker is ON, the drawout handle cannot be inserted, and insertion and drawout operation cannot be done unless the OFF button is pressed.



## Position lock (standard equipment)

This is the device that locks automatically the drawout mechanism at "TEST" or "CONNECTED" positions during insertion and drawout operation. When the lock plate is pushed in, lock is released and operation can be continued.

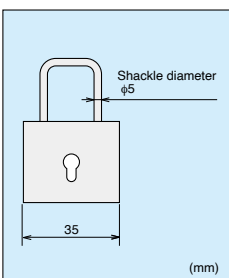

Outline dimensions (reference)

## Padlock

\* This padlock should be supplied by customer.

A padlock can be arranged at the lock plate. Thereby, it is possible to prevent the connection position from being changed unnecessarily. As for outline dimensions of the padlock, please refer to the left figure.

## Operating position of drawout type

**CONNECTED position**

- Both main and control circuits are connected.
- Normal in use condition.
- Lock plate is protruding

**TEST position**

- Main circuit is disconnected, but the control circuit is connected.
- The breaker operation can be tested with the door closed.
- Lock plate is protruding

**DISCONNECTED position**

- Both main and control circuits are disconnected.
- The door can be closed.
- The lock plate does not protrude. (If it does protrude, press it in before performing the drawout operation.)

**DRAWOUT position**

- This is the position for removing the breaker.
- The breaker is drawn out of the cradle on the extension rails.

Ground terminal is on right side of the cradle.

## Cell switch (CL)



This is the switch to show the drawout position (CONNECTED, TEST, and DISCONNECTED) of the breaker. An arbitrary combination up to 4 pieces is available.



Operating sequence

Switch function	Drawout position of breaker	Disconnected			Connected
		DISCONNECT	TEST	CONNECT	
Display position of drawout operation		●	●	●	
Switch function	CL-C (CONNECTED)	OFF	OFF	OFF	ON
	CL-T (TEST)	OFF	ON	OFF	OFF
	CL-D (DISCONNECTED)	ON	OFF	OFF	OFF

Note 1: The setting can be changed by customer later.  
A preliminary setting of CL at factory shipment is as follows.  
CL1:1C CL2:1C1D CL3:1C1T1D CL4:2C1T1D

Switch rating

Voltage (V)		Current (A)	
		Resistive load	Inductive load
AC	250	10	10
	125		
DC	250	3	1.5
	125	10	6
	30	10	10
Maximum contacts		4	

Standard pattern

	CL-C	CL-T	CL-D
CL1	1	-	-
CL2	1	-	1
CL3	1	1	1
CL4	2	1	1

## Shorting b-contact (SBC)


Option



When moving the breaker from the connected to the test positions, this contact is used to short circuit auxiliary switch (AXb), thus maintaining the correct sequence of operation of the external control circuit. When ordering, SBC with the same number of contacts as auxiliary switches (AXb) will be provided. SBC can be provided for all AX b contacts. At the time of shipment from factory, SBC is already connected to control circuit terminal block.

Only one more crimp terminal can be added on contact, overlapping with SBC's contact on Terminal: 11~51.

Operating sequence

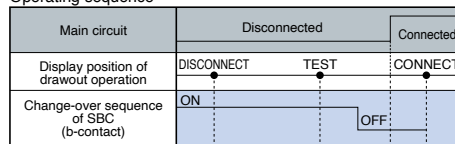

Switch rating

Voltage (V)	Current (A)	
	Resistive load	Inductive load
AC (50/60Hz)	250	10
	125	3
DC	250	0.2
	125	0.4
	30	4

Refer to the Min. load range graph in Page 18.

## Lifting hook (HP)

Option



This is the metal fitting to suspend the main body when the breaker is removed from the drawout cradle. The fixed type breaker is equipped with HP as standard.

This is attached to the left and right sides of the main body to suspend it. One set contains two products.

## Safety shutter (SST)

Option



The safety shutters cover the conductors (cradle side) and prevent contact with them when the breaker is drawn out.

## Safety shutter lock (SST-Lock)

Option



This kit is used to lock the safety shutter of a drawout breaker in the closed position when the breaker is drawn out of its cradle. It can be locked using two padlocks (padlocks to be supplied by the customer). (See page 21 for allowable padlock dimensions.)

## Mis-insertion preventer (MIP)

Option



This prevents other breakers unspecified from inserting into the cradle, and 5 patterns in maximum are available.

Not available for AE4000-SW~AE6300-SW


## Test jumper (TJ)

Option



With the breaker taken out of its cradle, this device enables the breaker to be electrically opened and closed, and the operating sequence to be checked. The standard cable length is 3m. A 5m extension cable is also available.

# Electronic trip relay (Feature)

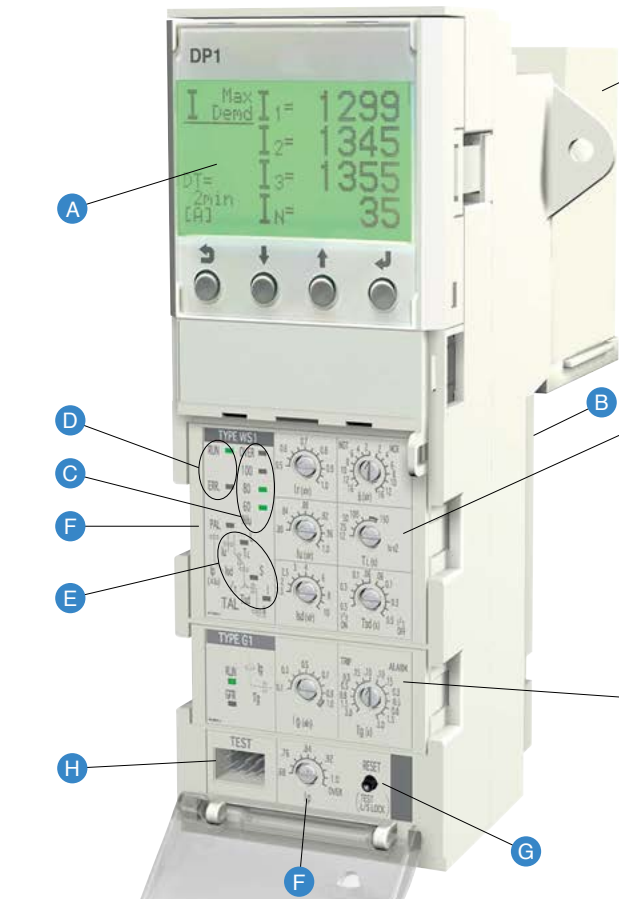

- A Display (option)**  
Several measuring data (current, voltage, power etc) and alarms can be displayed with this module.
- B Extension module (option)**  
This module is required to install VT unit, display module and each interface unit.
- C Load current LED (standard)**  
This indicator shows the actual current-carrying level.
- D RUN and ERR. LED (standard)**  
This indicator displays the ETR situation (Run or Error)
- E Trip indicator LED (standard)**  
This indicator displays the trip cause. (Self-holding type) If output contact for this Trip indicator is required, Power supply module should be selected from P3, P4 or P5.

- 3 Power supply module**  
This module provides the control power source for Trip indicator LED and Additional function modules like EX1, DP1, etc..  
Please select a Power supply type from P1 to P5, which include Power supplies with output contact or with SSR output contact for 200V DC.  
(The Over current protection and Ground fault protection (GFR)\* can work with power from Internal CT, even if Control power source is off. )  
Note\*) For Ground fault protection, it works under the rated current (In) setting of 0.2-1.0 without Control power source.
- 1 Main setting module**  
This module provides the characteristic setting function of Over current protection according to application. The modules for general use (WS) and for generator protection use (WM) have the setting dials for LTD, STD and INST operating characteristics. And the module for special use (WB) has setting dials for INST only.  
4 pole breaker provides Neutral 100% protection as standard, which becomes 50% protection when Optional setting module "N5" is installed.
- 2 Optional setting module (option)**  
With each optional setting modules, the following functions can be added respectively. G1, N5, E1, AP cannot be installed at the same time.  
G1: Ground fault protection  
N5: Neutral pole 50% protection  
E1: Earth leakage protection in combination with ZCT  
AP: 2nd Additional Pre-alarm

- F Pre-alarm (PAL LED and Current setting dial) (standard)**  
This indicator displays the Pre-Alarm situation when the setting current is exceeded. If output contact for this Pre-alarm is required, Power supply module should be selected from P3, P4 or P5. And by adding the Optional setting module "AP", 2nd Pre-alarm can be added.
- G RESET button (standard)**  
With this Reset button, Trip indicator, Display data like fault cause and fault current and Pre-alarm are reseted. When Power supply module P3, P4 or P5 is equipped, the resetting from Control circuit terminal becomes possible. Additionally, this Reset button provides a lock function of LTD and STD characteristics on the INST testing with Mitsubishi Tester "Y-2005".
- H TEST terminal (standard)**  
This Test terminal is used for the field testing of characteristics with Mitsubishi Tester "Y-2005" (refer to Page 38).


## OCR alarm (AL) (standard)

When tripped by Over current, Ground fault (GFR) and Earth leakage (ER), this device outputs alarm signal. There are two types of OCR alarms. One is Automatic reset type with 30ms one pulse output (standard) and the other is Manual reset type with self-holding (optional). For details, refer to Page 18.

## Neutral pole overcurrent protection (NP) (standard)

When Harmonics in load current become higher, the current on Neutral pole may exceed the rated current. This Neutral pole overcurrent protection prevents the troubles caused by higher Harmonics.

## Electronic trip relay (ETR) Type designation breakdown

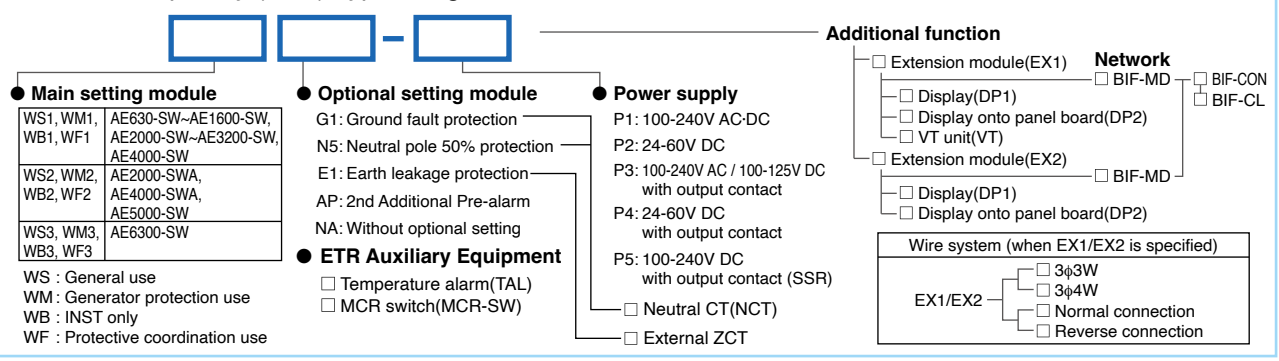

### Characteristic table

① \ ②	NA Nothing	G1 Ground fault	E1 Earth leakage	AP 2nd additional Pre-alarm	N5 Neutral pole 50% protection
<b>WS</b> General use LTD+STD+ INST/MCR					
<b>WM</b> Generator protection use LTD+STD+ INST/MCR					
<b>WB</b> Special use INST/MCR					
<b>WF</b> Protective coordination use LTD+STD+ INST/MCR					

### Power supply module ③

Type	Rated Voltage (V)	Applicable Voltage range (V)	Criterion for Power requirement (VA)	Alarm output
P1	100-240 AC-DC	85-264 AC-DC	15	—
P2	24-60 DC	18-72 DC	10	—
P3	100-240 AC 100-125 DC	85-264 AC 85-138 DC	15	6 output contacts
P4	24-60 DC	18-72 DC	10	6 output contacts
P5	100-240 DC	85-264 DC	15	6 output contacts (SSR)

Note1: Over current protection and ground fault protection operates without control power source.  
 Note2: The power supply module has a built-in switching power supply. If this may cause interference to nearby communication equipment, install a noise filter on the input side.  
 Note3: Factory setting of 6 output contacts is as follows.

①	②	③	④	⑤	⑥
LTD	STD/INST	G1/E1/AP	PAL	TAL	ERR
Self-holding	Self-holding	Refer to lower table	Automatic reset	Automatic reset	Automatic reset

ETR dial set	G1	E1	AP
TRIP side	Self-holding	Self-holding	—
ALARM side	Automatic reset	Automatic reset	Automatic reset

Self-holding:  
The output is maintained until it resets.  
 Automatic reset:  
The output will be reset if it backs to normal condition.


#### Contact capacity (Type P3 and P4)

Voltage (V)		Current (A)	
		Resistive load cosφ=1.0	Inductive load cosφ=0.4 L/R=0.7
AC (50/60Hz)	240	1	0.5
	120	1	1
DC	125	0.1	0.05
	30	1	1

#### Current capacity (Type P5)

Voltage (V)	Normal current (A)	Peak inrush current (A)	ON resistance (Ω) (max.)
AC (50/60Hz)	240	0.1	0.3
	120	0.1	0.3
DC	240	0.1	0.3
	30	0.1	0.3

### CT rating table

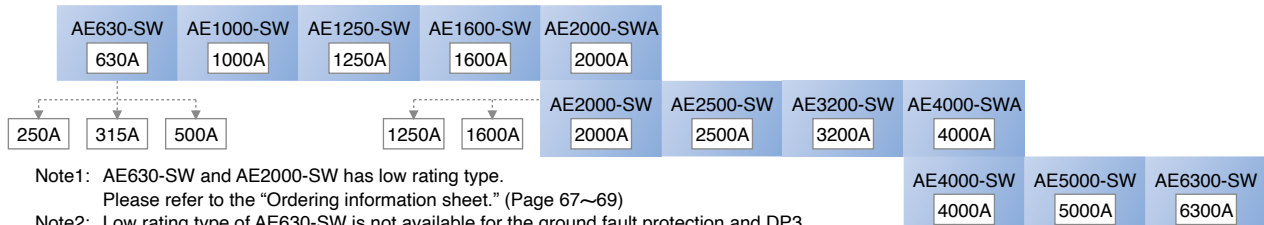

Note1: AE630-SW and AE2000-SW has low rating type. Please refer to the "Ordering information sheet." (Page 67~69)  
 Note2: Low rating type of AE630-SW is not available for the ground fault protection and DP3.  
 Note3: As for details of ratings, refer to page 13 and page 14.

### Electronic trip relay (ETR) for WS relay with Ampere Meter and Fault Memory (DP3)

■ With ETR

Type  -  ; DP3



#### Main setting

WS1	AE630-SW~AE1600-SW, AE2000-SW~AE3200-SW, AE4000-SW
WS2	AE2000-SWA, AE4000-SWA, AE5000-SW
WS3	AE6300-SW

WS : General use

#### Optional setting

G1: Ground fault protection  
 NA: Without optional setting

#### ETR Auxiliary Equipment

MCR switch (MCR-SW)

#### Power supply

P1: 100-240V AC-DC  
 P2: 24-60V DC  
 P3: 100-240V AC / 100-125V DC with output contact  
 P4: 24-60V DC with output contact  
 P5: 100-240V DC with output contact (SSR)


Connection  
 3φ3W  
 3φ4W

Neutral CT (NCT)


Note : For DP3, refer to page 27 on details.



## ■ Operating characteristic curve (for general use : WS)

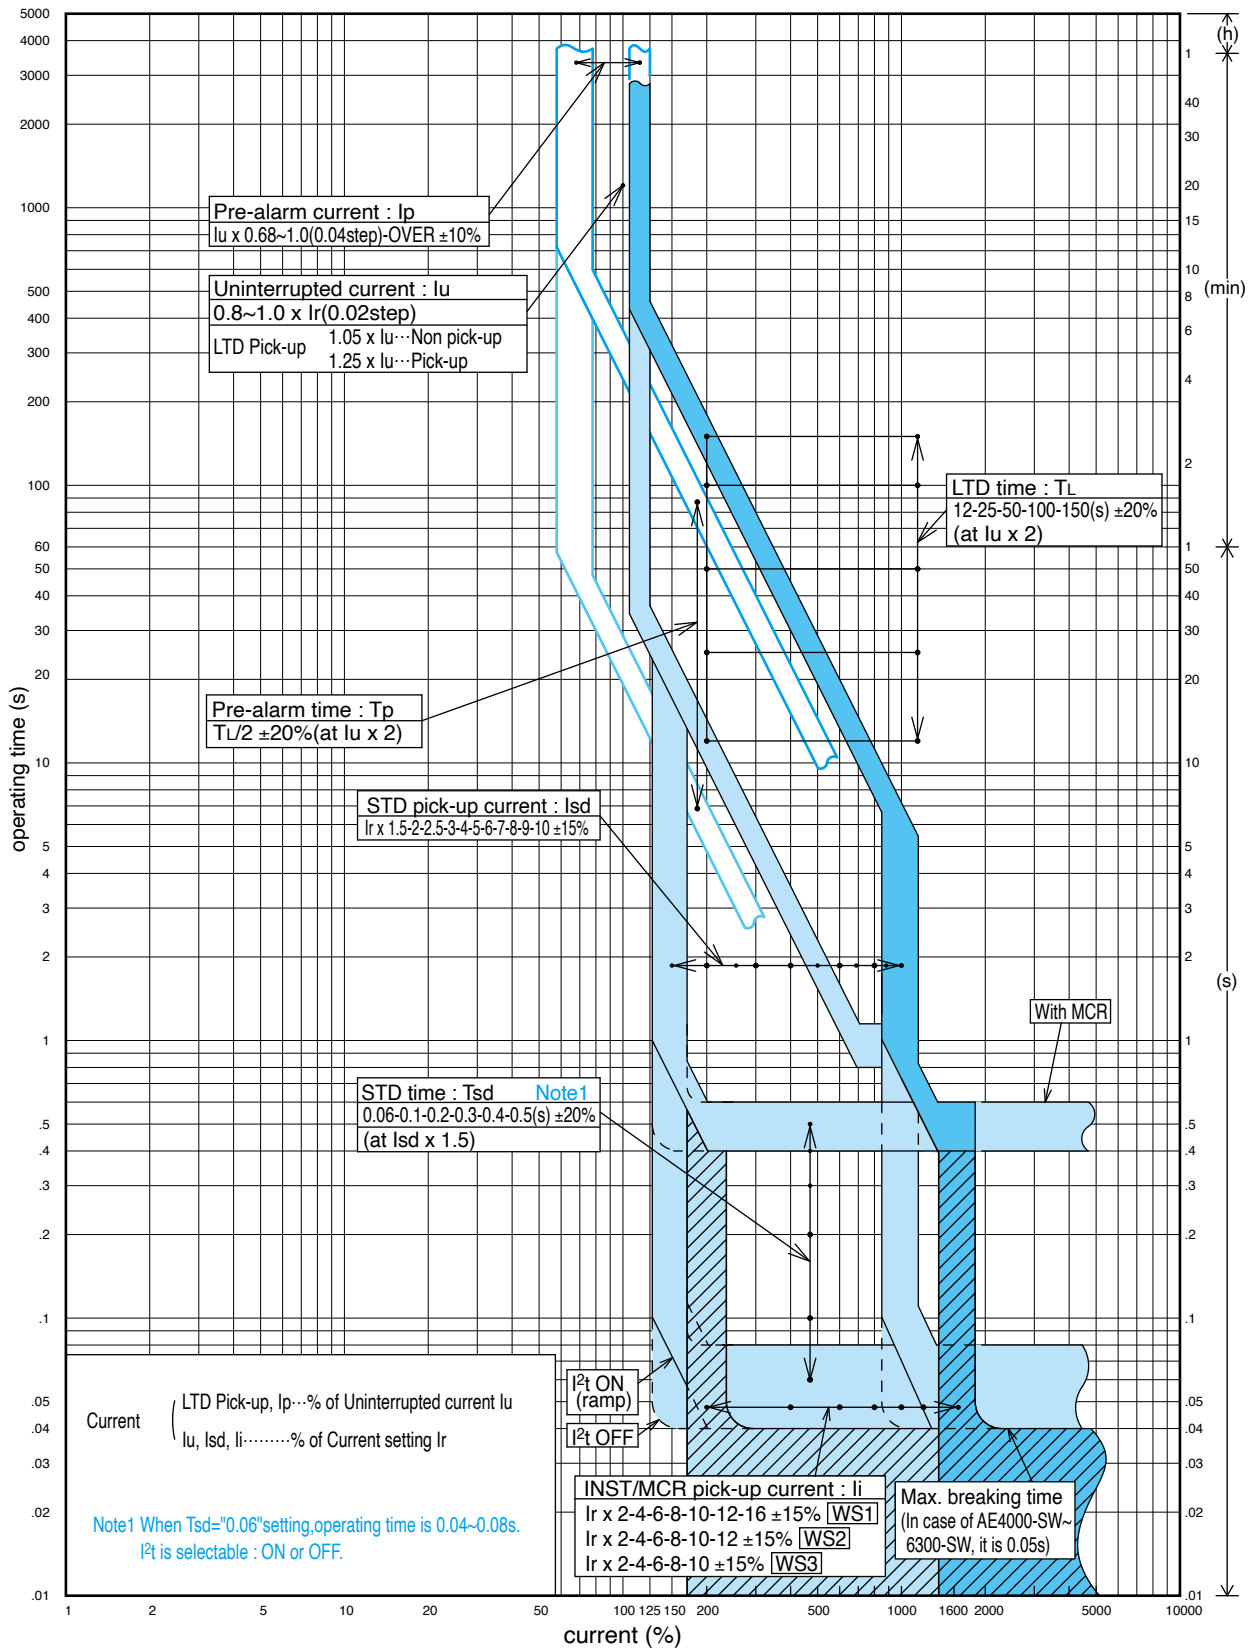


# Electronic trip relay ( for general use : WS relay with Ampere Meter ) and Fault Memory "DP3"

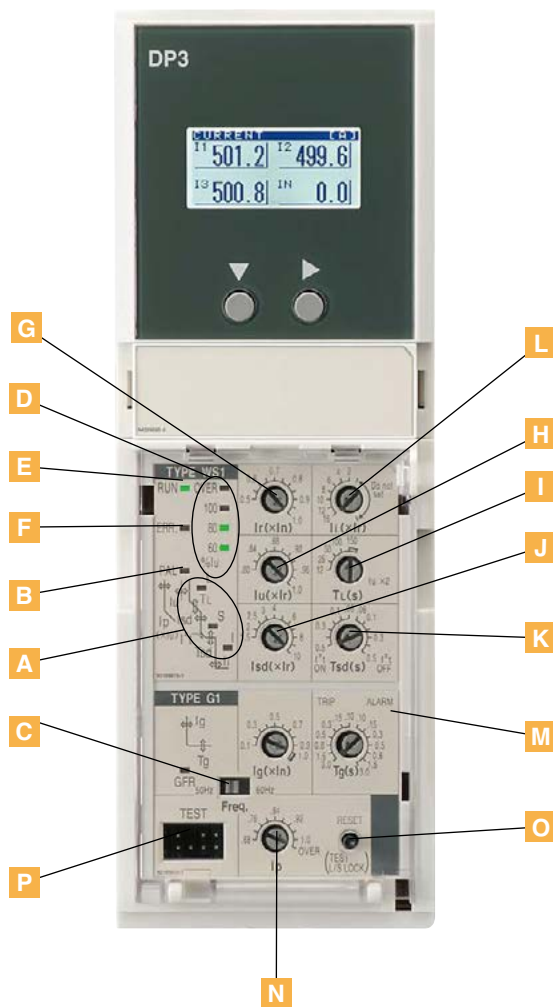

- A** Trip indicator LED
- B** Pre-alarm LED
- C** Frequency selector switch
- D** Load current LED
- E** RUN LED
- F** ERR. LED
- G** Current setting dial
- H** Uninterrupted current setting dial
- I** LTD time setting dial
- J** STD pick-up setting dial
- K** STD time setting dial
- L** INST/MCR pick-up current setting dial
- M** Optional setting (P.35)
- N** Pre-alarm current setting dial
- O** RESET button (TEST L/S LOCK button)
- P** TEST terminal

Note: The figure shows WS1 type with DP3 that equipped with G1.  
For optional setting, only G1 and MCR are available for WS relay with DP3.

## Relation of setting dial

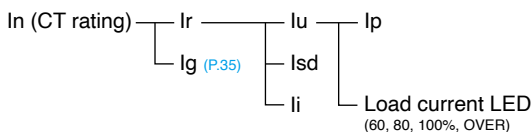


## Adjustable setting range

No.	Setting item	Mark	Adjustable setting range	Accuracy	Factory default value
<b>G</b>	Current setting	Ir	0.5 ~ 1.0 (0.05step) x In (CT rating)	—	1.0
<b>H</b>	Uninterrupted current	lu	0.8 ~ 1.0 x Ir (0.02step), Pick-up current : 1.15 x lu	1.05 x lu--Non Pick-up 1.25 x lu--Pick-up	1.0
<b>I</b>	LTD time	TL	12-25-50-100-150s at lu x 2	± 20%	150
<b>J</b>	STD pick-up current	Isd	1.5-2-2.5-3-4-5-6-7-8-9-10 x Ir	± 15%	10
<b>K</b>	STD time	Tsd	<u>0.5</u> -0.4-0.3-0.2-0.1-0.06-0.06-0.1-0.2-0.3-0.4-0.5s (I <sup>2</sup> t ON) (I <sup>2</sup> t OFF) at Isd x 1.5	± 20% It operates in the range between 0.04 and 0.08s when the time set at 0.06s.	0.5 (I <sup>2</sup> t ON)
<b>L</b>	INST/MCR pick-up current	li	AE630-SW~AE1600-SW AE2000-SW~AE3200-SW AE4000-SW <u>16-12-10-8-6-4-2-2-4-6-8-10-12-16</u> x Ir (INST) (MCR) WS1	± 15%	WS1...16 (INST)
			AE2000-SWA, AE4000-SWA AE5000-SW <u>12-10-8-6-4-2-2-4-6-8-10-12</u> x Ir (INST) (MCR) WS2		WS2...12 (INST)
			AE6300-SW <u>10-8-6-4-2-2-4-6-8-10</u> x Ir (INST) (MCR) WS3		WS3...10 (INST)
<b>N</b>	Pre-alarm current	Ip	lu x 0.68 ~ 1.0 (0.04step) -OVER	± 10%	OVER
—	Pre-alarm time	Tp	1/2 TL at lu x 2 (after 1/2 TL, PAL contact output turns on.)	± 20%	—


The table and the figure include both optional display and MCR.  
For WS relay, Pre-alarm current "OVER" setting is lu x 1.15.  
The table includes MCR (option). If MCR is not included, there is no MCR setting position.

# Operating characteristic curve (for general use : WS relay with Ampere Meter and Fault Memory "DP3")

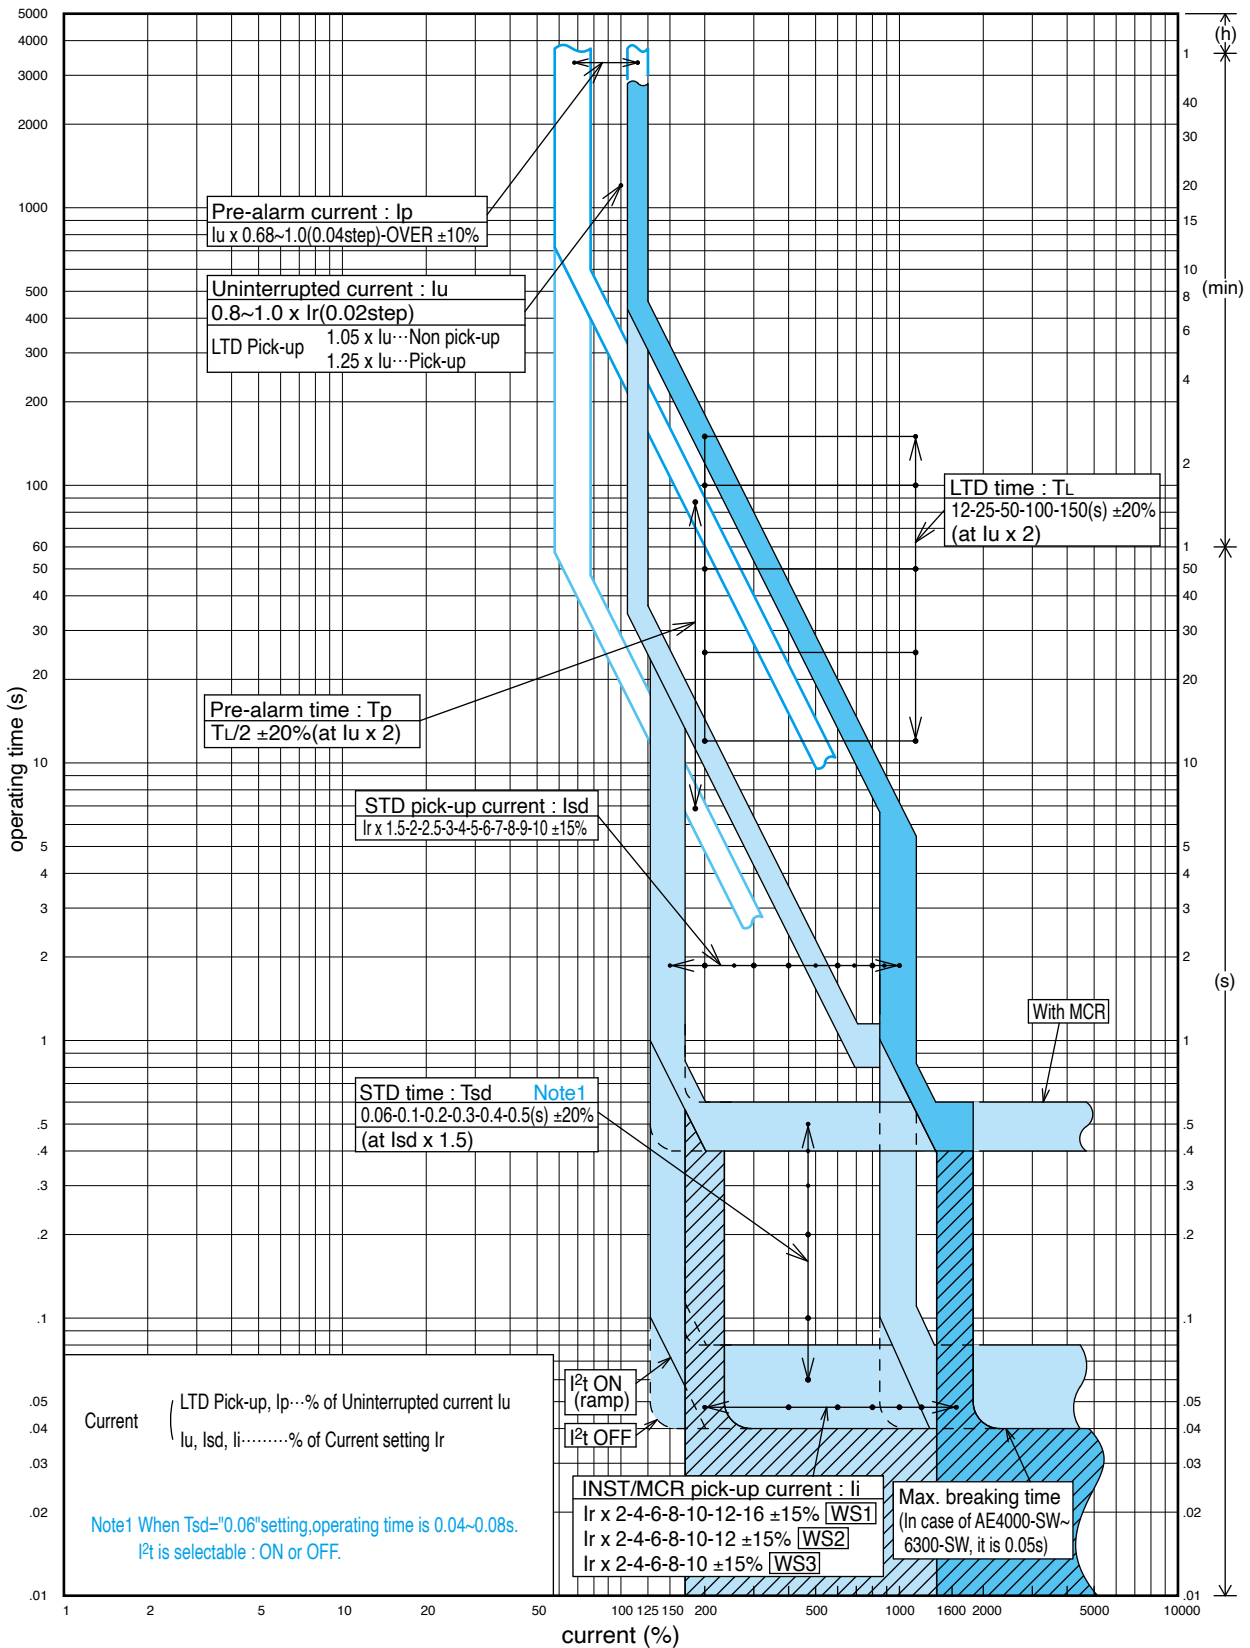




## ■ Operating characteristic curve (for generator protection use : WM)

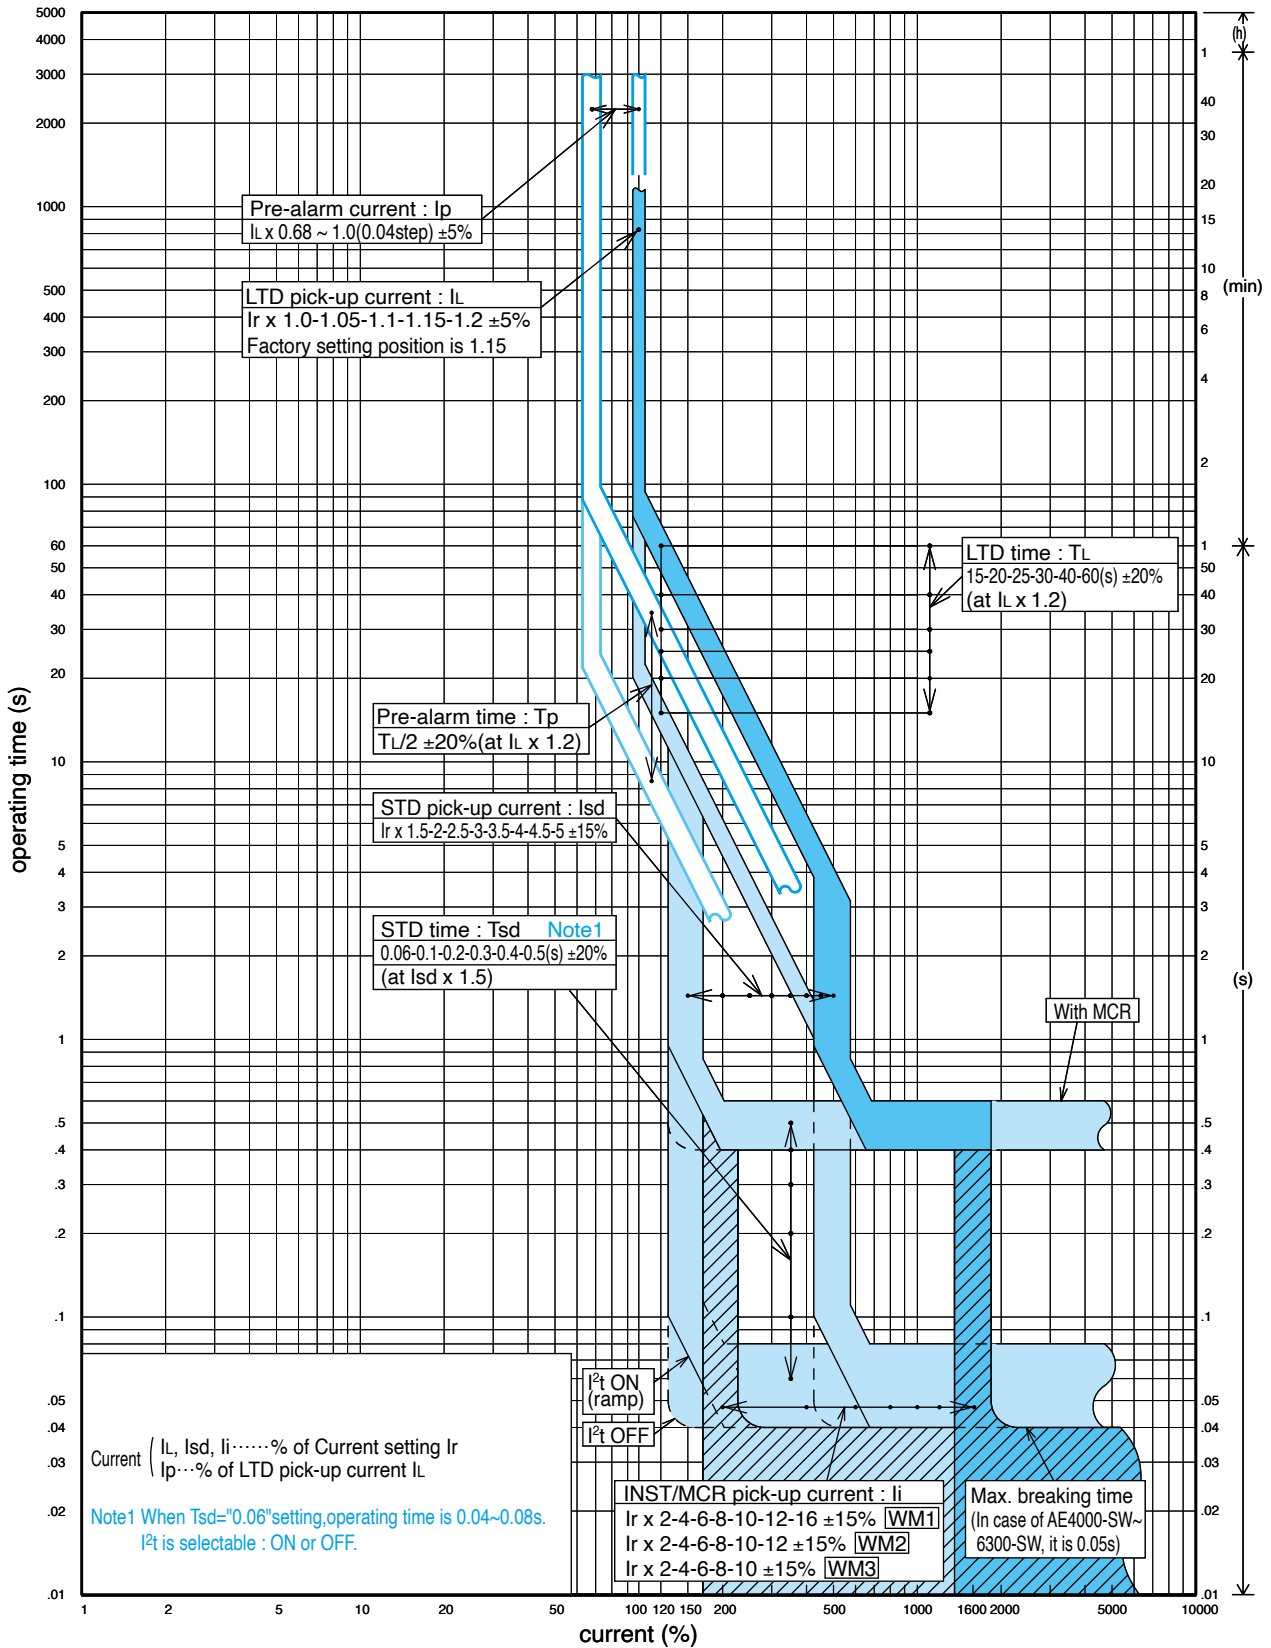

# Electronic trip relay (for special use : WB)


This WB relay is effective for the combination with the external OCR without severely decreasing the breaking capacity.  
 Actually, if breaker is combined with the external OCR only without WB relay, its breaking capacity comes to be reduced drastically. (e.g. For AE1600-SW, it's reduced to 25kA.)

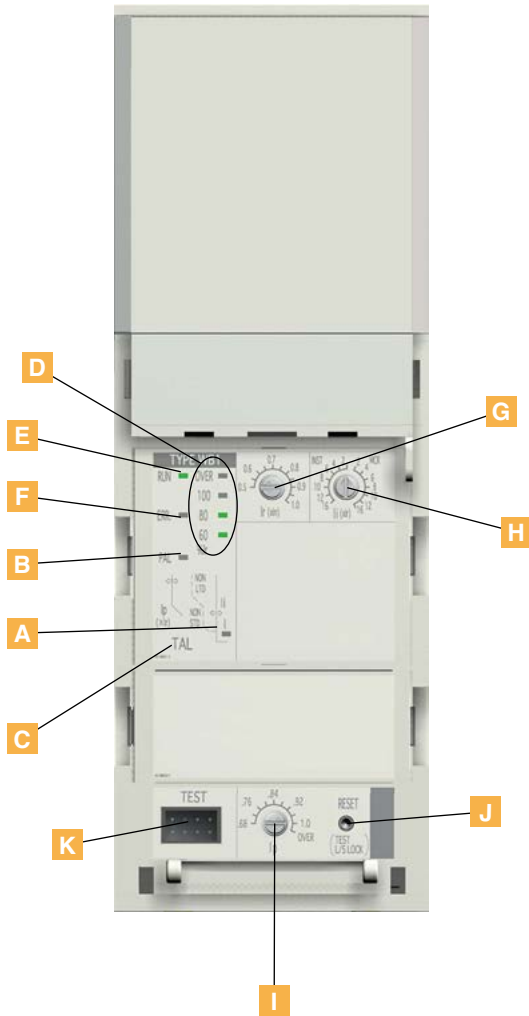

- A** Trip indicator LED
- B** Pre-alarm LED
- C** Temperature alarm LED
- D** Load current LED
- E** RUN LED
- F** ERR. LED
- G** Current setting dial
- H** INST/MCR pick-up current setting dial
- I** Pre-alarm current setting dial
- J** RESET button
- K** TEST terminal

Note: The figure shows WB1 type with MCR switch.  
 MCR is optional equipment.

### Relation of setting dial

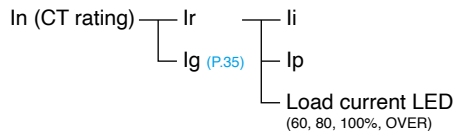


### Adjustable setting range

No.	Setting item	Mark	Adjustable setting range	Accuracy	Factory default value	
<b>G</b>	Current setting	$I_r$	$0.5 \sim 1.0$ (0.05step) $\times I_n$ (CT rating)	—	1.0	
<b>H</b>	INST/MCR pick-up current	$l_i$	AE630-SW~AE1600-SW AE2000-SW~AE3200-SW AE4000-SW	$\frac{16-12-10-8-6-4-2-2-4-6-8-10-12-16}{(INST) \quad (MCR)} \times I_r$ WB1	$\pm 15\%$	WB1...16 (INST)
			AE2000-SWA, AE4000-SWA AE5000-SW	$\frac{12-10-8-6-4-2-2-4-6-8-10-12}{(INST) \quad (MCR)} \times I_r$ WB2		WB2...12 (INST)
			AE6300-SW	$\frac{10-8-6-4-2-2-4-6-8-10}{(INST) \quad (MCR)} \times I_r$ WB3		WB3...10 (INST)
<b>I</b>	Pre-alarm current	$I_p$	$I_r \times 0.68 \sim 1.0$ (0.04step) —OVER	$\pm 10\%$	OVER	
—	Pre-alarm time	$T_p$	75s at $I_r \times 2$ (after 75s, PAL contact output turns on.)	$\pm 20\%$	—	

The table and the figure include both optional display and MCR.  
 For WB relay, when Pre-alarm current  $I_p$  is set at "OVER", the  $I_p$  value is " $I_r \times 1.15$ ".  
 The table includes MCR (option). If MCR is not included, there is no MCR setting position.

## ■ Operating characteristic curve (for special use : WB)

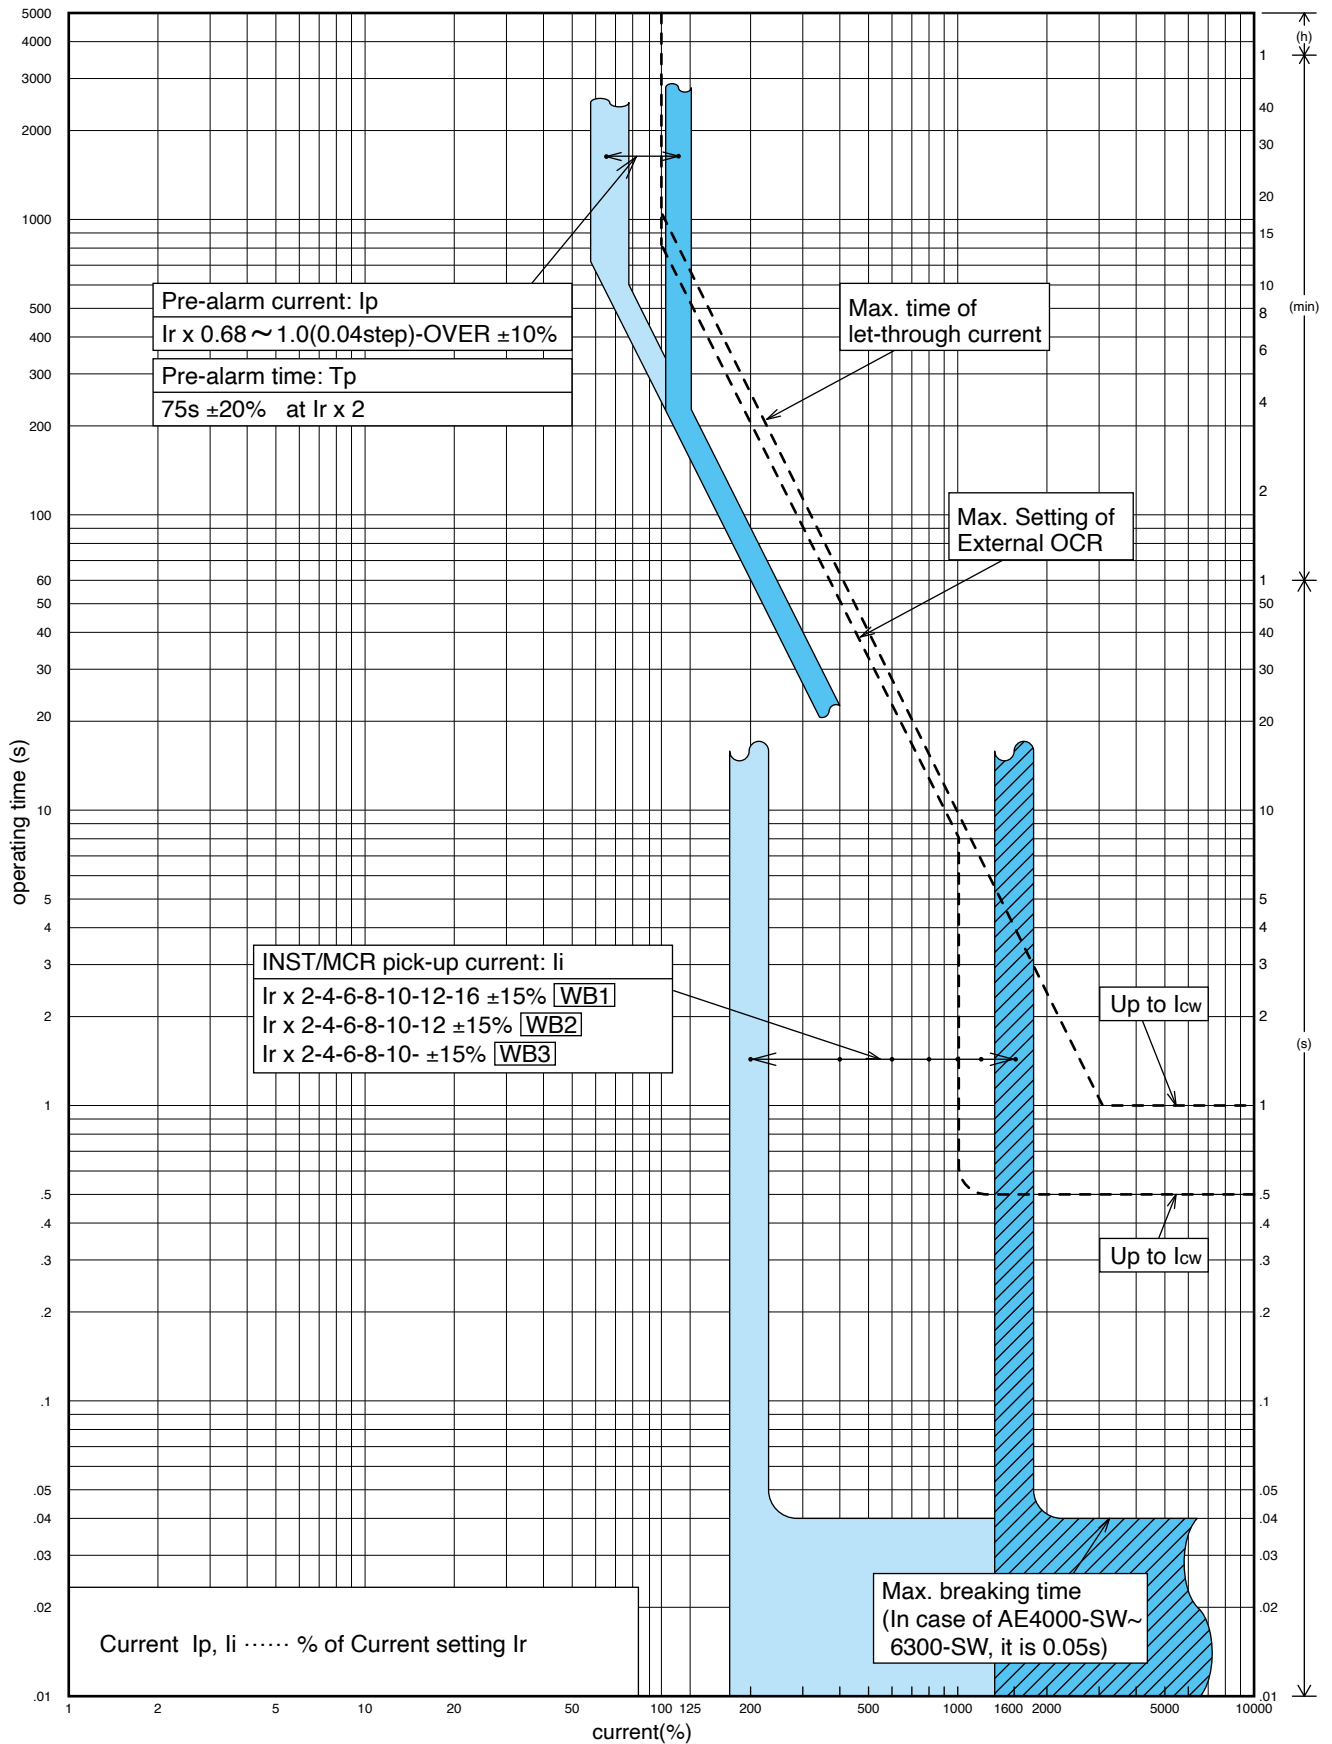


# Electronic trip relay (for protective coordination use : WF)

WF relay incorporates five kinds of LTD characteristics.


Protective coordination with upstream OCRs and/or Fuses can be more easily achieved.

## Operating characteristic curve


[LTD curve setting "a=2"]

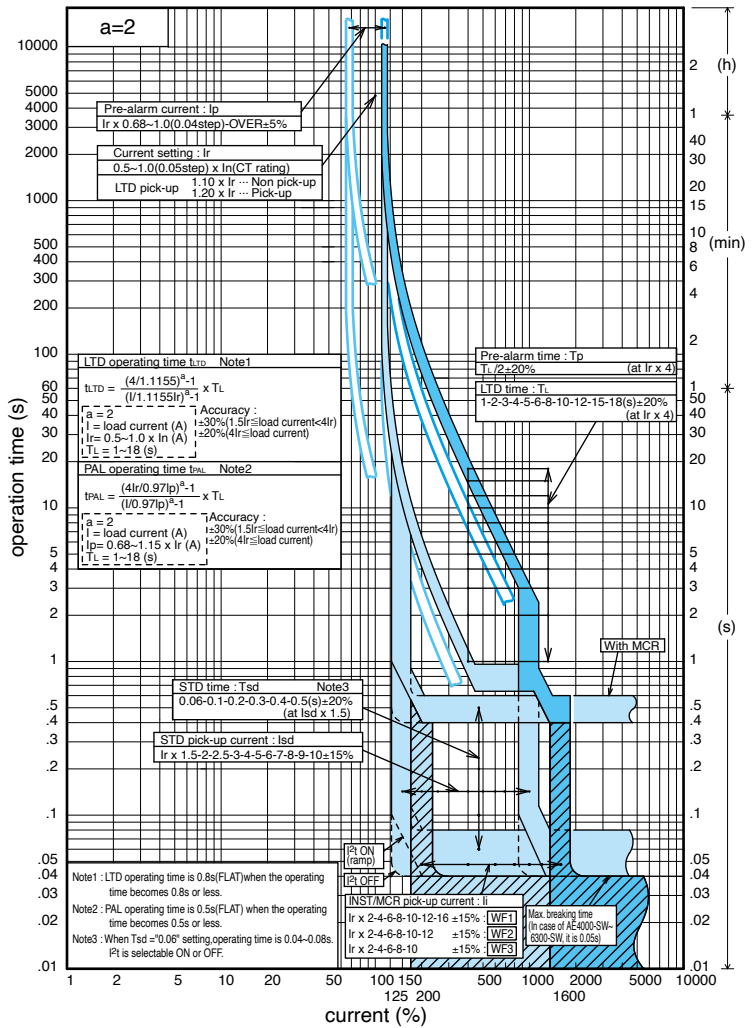

The selectable characteristics are the following five curves.

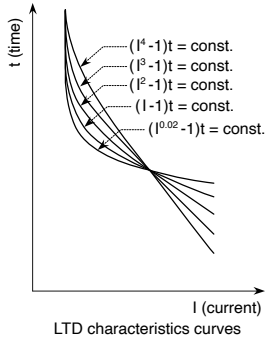


LTD curve can be selected by the LTD curve setting dial.

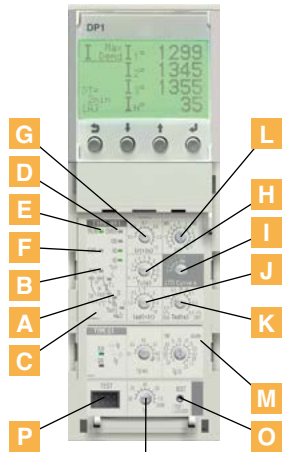

- A** Trip indicator LED
- B** Pre-alarm LED
- C** Temperature alarm LED
- D** Load current LED
- E** RUN LED
- F** ERR. LED
- G** Current setting dial
- H** LTD time setting dial
- I** LTD curve setting dial
- J** STD pick-up setting dial
- K** STD time setting dial
- L** INST/MCR pick-up current setting dial
- M** Optional setting module (P.35-37)
- N** Pre-alarm current setting dial
- O** RESET button (TEST L/S LOCK button)
- P** TEST terminal

Note: The figure shows WF1 type with G1 module, Display (DP1) and MCR switch. G1, DP1 and MCR are optional equipments.

### Relation of setting dial




### Adjustable setting range

No.	Setting item	Mark	Adjustable setting range	Accuracy	Factory default value
<b>G</b>	Current setting	Ir	0.5 ~ 1.0 (0.05step) x In (CT rating) LTD pick-up current : 1.15 x Ir	1.10 x Ir...Non Pick-up 1.20 x Ir...Pick-up	1.0
<b>H</b>	LTD time	T <sub>L</sub>	1-2-3-4-5-6-8-10-12-15-18s at Ir x 4	$\pm 30\%$ (1.5Ir ≤ load current < 4Ir) $\pm 20\%$ (4Ir ≤ load current)	18
<b>I</b>	LTD curve setting	a	0.02-1-2-3-4	—	2
<b>J</b>	STD pick-up current	I <sub>sd</sub>	1.5-2-2.5-3-4-5-6-7-8-9-10 x Ir	$\pm 15\%$	10
<b>K</b>	STD time	T <sub>sd</sub>	0.5-0.4-0.3-0.2-0.1-0.06-0.06-0.1-0.2-0.3-0.4-0.5s (I <sup>2</sup> t ON) (I <sup>2</sup> t OFF) at I <sub>sd</sub> x 1.5	$\pm 20\%$ It operates in the range between 0.04 and 0.08s.	0.5 (I <sup>2</sup> t ON)
<b>L</b>	INST/MCR pick-up current	li	AE630-SW~AE1600-SW AE2000-SW~AE3200-SW AE4000-SW 16-12-10-8-6-4-2-2-4-6-8-10-12-16 x Ir (INST) (MCR) WF1 AE2000-SWA, AE4000-SWA AE5000-SW 12-10-8-6-4-2-2-4-6-8-10-12 x Ir (INST) (MCR) WF2 AE6300-SW 10-8-6-4-2-2-4-6-8-10 x Ir (INST) (MCR) WF3	$\pm 15\%$	WF1...16 (INST) WF2...12 (INST) WF3...10 (INST)
<b>N</b>	Pre-alarm current	I <sub>p</sub>	Ir x 0.68 ~ 1.0 (0.04step) -OVER	$\pm 5\%$	OVER
—	Pre-alarm time	T <sub>p</sub>	1/2 T <sub>L</sub> at Ir x 4 (after 1/2 T <sub>L</sub> , PAL contact output turns on.)	$\pm 30\%$ (1.5Ir ≤ load current < 4Ir) $\pm 20\%$ (4Ir ≤ load current)	—


The table and the figure include both optional display and MCR.  
For WF relay, when Pre-alarm current I<sub>p</sub> is set at "OVER", the I<sub>p</sub> value is "Ir x 1.15".  
The table includes MCR (option). If MCR is not included, there is no MCR setting position.

## ■ Operating characteristic curve (for protective coordination use : WF)


[LTD curve setting "a=0.02"]

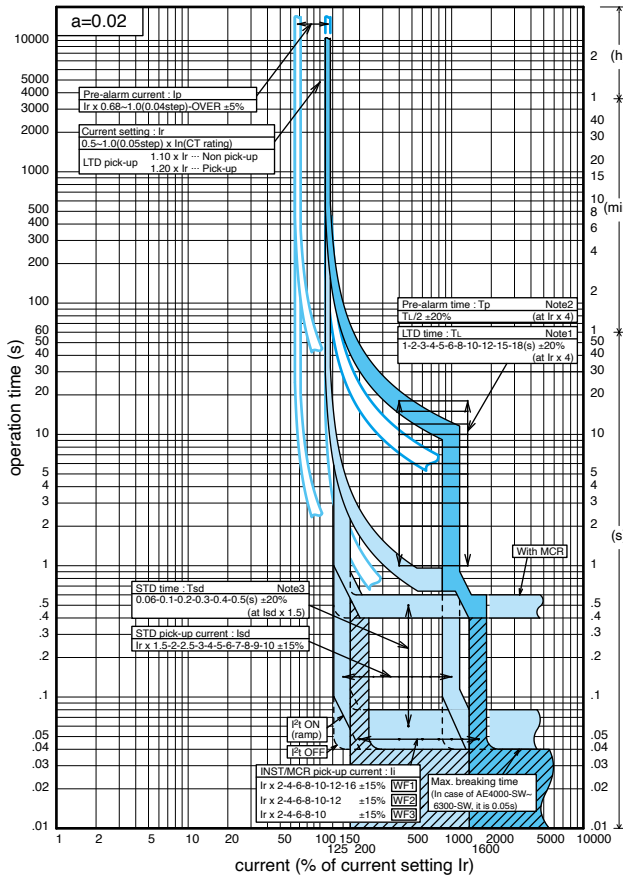


[LTD curve setting "a=1"]

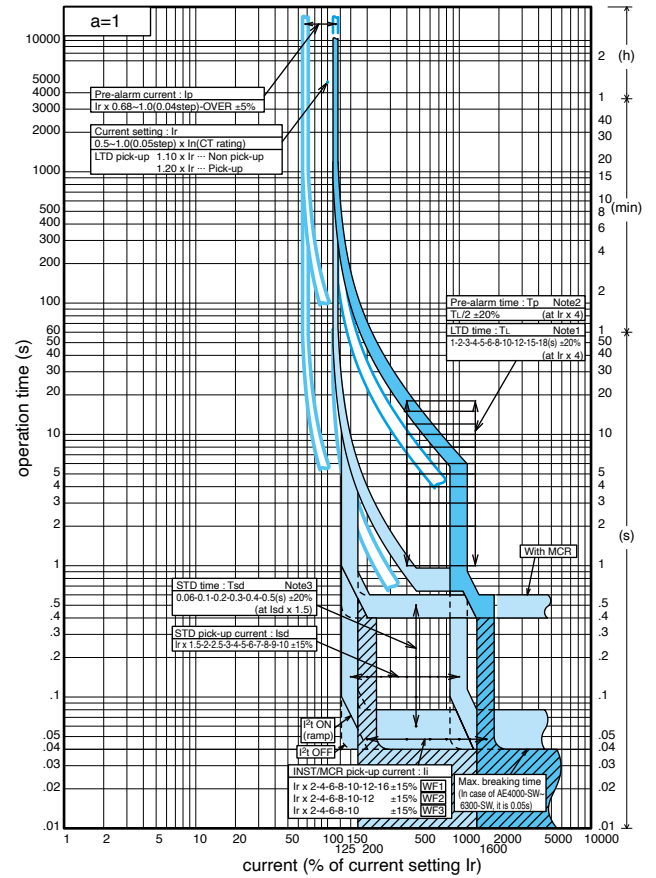

[LTD curve setting "a=3"]

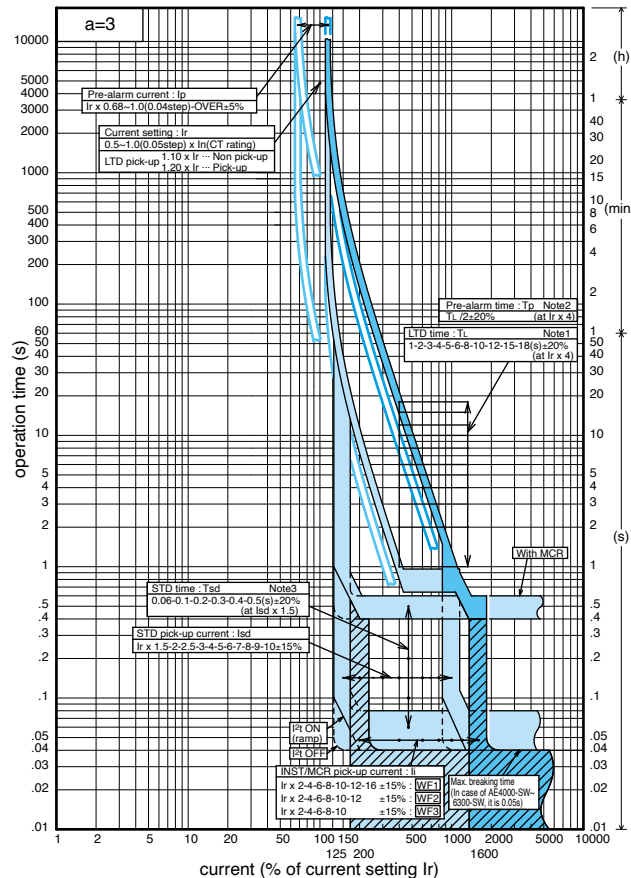

[LTD curve setting "a=4"]

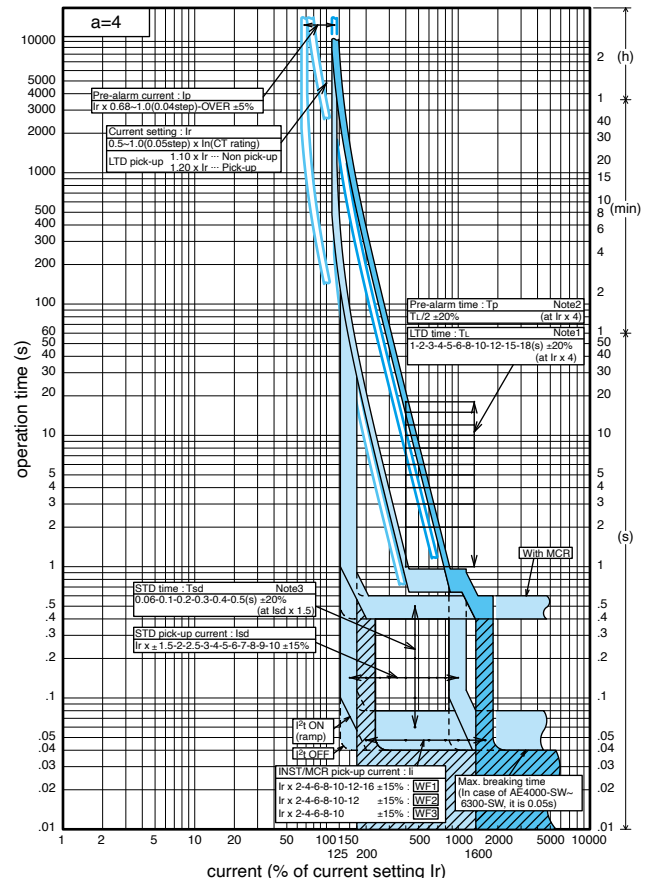

Note 1: LTD operating time  $t_{LTD}$  is calculated by the following equations.

$$t_{LTD} = \frac{(4/1.1155)^a - 1}{(1/1.1155)^a - 1} \times T_L$$

$\begin{cases} a = \text{LTD curve setting} \\ I = \text{load current (A)} \\ I_r = 0.5 - 1.0 \times \ln(A) \\ T_L = 1 - 18 \text{ (s)} \end{cases}$

The accuracy of operating time is  $\pm 30\%$  ( $1.5I_r \leq \text{load current} < 4I_r$ ) or  $\pm 20\%$  ( $4I_r \leq \text{load current}$ ). LTD operating time is 0.8s (FLAT) when the operating time becomes 0.8s or less.

Note 3: When  $T_{sd} = "0.06"$  setting, operating time is 0.04-0.08s.  
It is selectable : ON or OFF.

Note 2: PAL operating time  $t_{PAL}$  is calculated by the following equations.

$$t_{PAL} = \frac{(4/1.097)^a - 1}{(1/1.097)^a - 1} \times \frac{T_L}{2}$$

$\begin{cases} a = \text{LTD curve setting} \\ I = \text{load current (A)} \\ I_r = 0.5 - 1.0 \times \ln(A) \\ I_p = 0.68 - 1.15 \times I_r \text{ (A)} \\ T_L = 1 - 18 \text{ (s)} \end{cases}$

The accuracy of operating time is  $\pm 30\%$  ( $1.5I_r \leq \text{load current} < 4I_r$ ) or  $\pm 20\%$  ( $4I_r \leq \text{load current}$ ). PAL operating time is 0.5s (FLAT) when the operating time becomes 0.5s or less.

# Electronic trip relay

## Accessories

### Ground fault protection (GFR) Option



With the earth-fault release (GFR) equipped Electronic trip relay (ETR) and the breaker's built-in Current sensor coil, arc earth-fault protection for several hundred amperes is possible. Switching between earth-fault release and earth-fault alarm is available. In alarm mode, no trip operation occurs. If  $I_g$  is set to 0.2 or higher it functions without control power; if  $I_g$  is set to 0.1, control power is required.

Setting item	Mark	Adjustable setting range	Accuracy	Factory default value
GFR pick-up current	$I_g$	0.1-0.2-0.3-0.4-0.5-0.6-0.7-0.8-0.9-1.0 x $I_n$	±20%	1.0
GFR time	$T_g$	TRIP	±20%*	3s (TRIP)
		ALARM (at 1.5 x $I_g$ )		
alarm output	—	TRIP side : Self-holding/ALARM side : Automatic reset	—	TRIP side (Self-holding)

\*: Operates in the range of 0.04s to 0.1s when  $T_g$  is set to 0.1.


(Note) Ground fault protection for AE630-SW low rating types (250A, 315A, and 500A) is not available.

### Neutral CT (NCT) Option




The Neutral CT is used for ground fault protection when the 3 pole breaker is used on a 3 phase 4 wires system and for over current protection on N phase. Please use this CT in combination with ground fault protection (GFR). As for outline dimensions, refer to page 58. The length of the cable (attached) for NCT is 2m.

GFR function block diagram (In case of 4pole breaker)

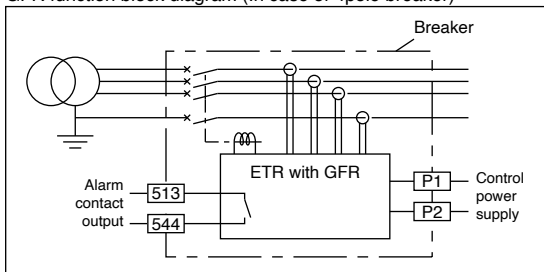

Block diagram with NCT function

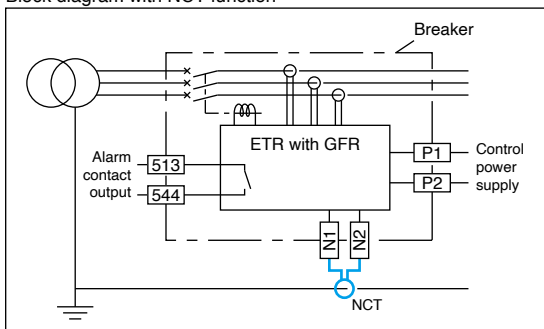


NCT type name

NCT type name	Breaker type name / CT rating
NCT06	AE630-SW 630A
NCT10	AE1000-SW 1000A
NCT12	AE1250-SW 1250A AE2000-SW 1250A
NCT16	AE1600-SW 1600A AE2000-SW 1600A
NCT20	AE2000-SWA 2000A AE2000-SW 2000A
NCT25	AE2500-SW 2500A
NCT32	AE3200-SW 3200A
NCT40	AE4000-SWA 4000A AE4000-SW 4000A
NCT50	AE5000-SW 5000A
NCT63	AE6300-SW 6300A

Refer to Outline dimensions in page 58.

Ground fault protection characteristics

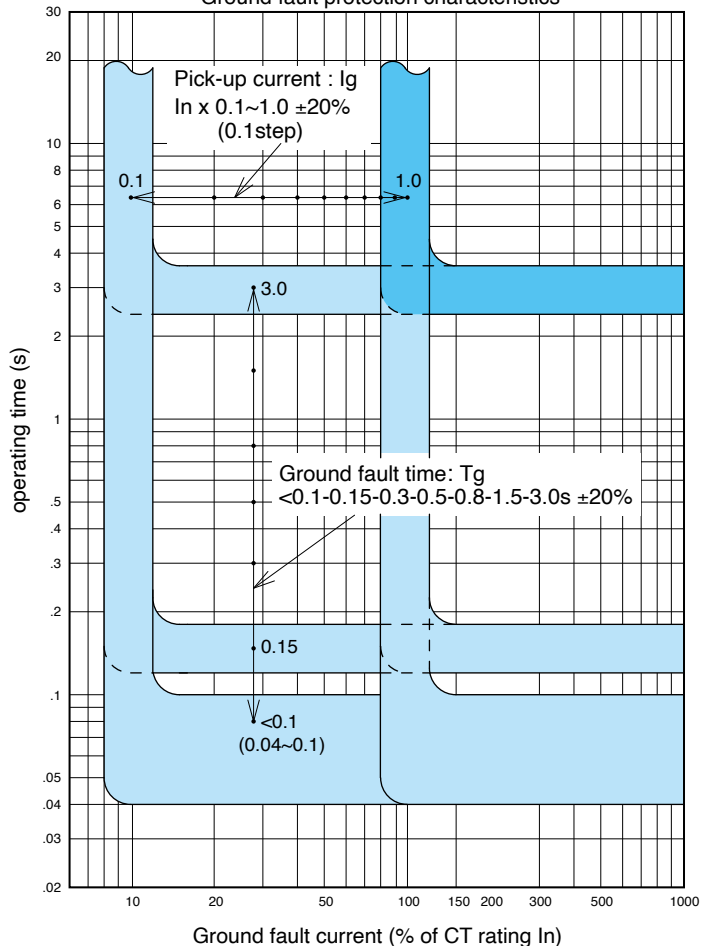

## Earth leakage protection (ER)

Option




By combining the Electronic trip relay (ETR) with earth leakage protection (ER) and an External ZCT, earth leakage protection is possible. The function can be set to earth leakage trip or earth leakage alarm. When set to earth leakage alarm, no trip will occur even if leakage current above the sensitivity flows, making this suitable for circuits that require continuous power. A dedicated 2 m cable for External ZCT connection is supplied with the breaker. Note that a control power supply is required for earth leakage protection.

Setting item	Mark	Adjustable setting range	Accuracy	Factory default value
ER pick-up current	$I_{\Delta n}$	1A-2A-3A-5A-10A	0 -30%	10A
ER time	$T_e$	TRIP	$\pm 20\%^*$	3s (TRIP)
		ALARM (at $1.5 \times I_{\Delta n}$ )		
alarm output	—	TRIP side : Self-holding/ALARM side : Automatic reset	—	TRIP side (Self-holding)

\*: Operates in the range of 0.04s to 0.1s when  $T_e$  is set to 0.1.

## External ZCT

Option

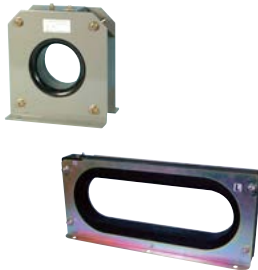

When used with the Electronic trip relay (ETR) equipped with earth leakage protection (ER), this option detects leakage currents on the order of several amperes. Please select from External ZCTs listed in the table below. Available types include a ZCT for load circuits that all load conductors pass through, a ZCT for the transformer ground wire through which the transformer's grounding conductor passes, and a ZCT with primary conductors integrated.

ZCT for load circuit

ZCT type name	Breaker type name
ZCT163	AE630-SW ~ AE1600-SW 3-pole
ZCT323	AE630-SW ~ AE1600-SW 3-pole, 4-pole AE2000-SW ~ AE3200-SW 3-pole
ZCT324	AE2000-SW ~ AE3200-SW 4-pole

As for outline dimensions refer to page 58. Make a choice of suitable ZCT in conformity to the BUSBAR size.

ZCT for transformer ground wire


ZCT type name	Breaker type name / Pole
ZT15B	AE630-SW / 3P, AE1000-SW / 3P
ZT30B	AE1250-SW / 3P, AE1600-SW / 3P
ZT40B	AE2000-SW / 3P, AE2000-SW / 3P
ZT60B	AE2000-SW / 3P, AE2000-SW / 3P
ZT80B	AE2000-SW / 3P, AE2000-SW / 3P
ZT100B	AE2000-SW / 3P, AE2000-SW / 3P

ZCT with primary conductors


ZCT type name	Breaker type name / Pole
ZTA1200A	AE630-SW / 3P, AE1000-SW / 3P
ZTA2000A	AE1250-SW / 3P, AE1600-SW / 3P AE2000-SWA / 3P, AE2000-SW / 3P

Refer to page 58 for Outline dimensions.  
For Breaker type names not listed above, ZCT use is permitted provided the rated current setting ( $I_r$ ) is at or below the ZCT allowable current.

ER function block diagram (for load circuit method)

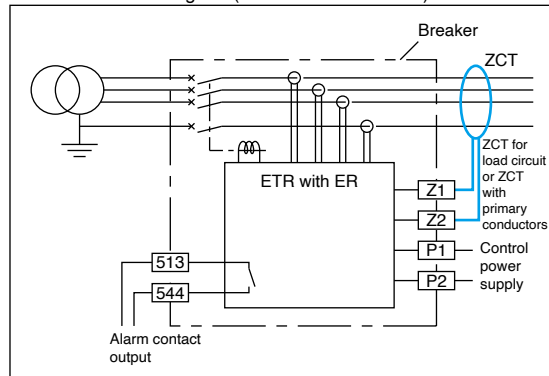


ER function block diagram (transformer ground wire method)

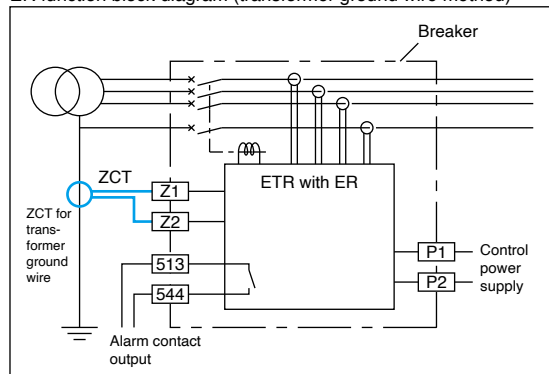

On a circuit containing harmonic content, the zero-phase current transformer (ZCT) of the circuit breaker will be overheated owing to iron loss. Use circuit breakers at a load device leakage current distortion of 5kHz or less and at 3A or less.

Earth leakage protection characteristics

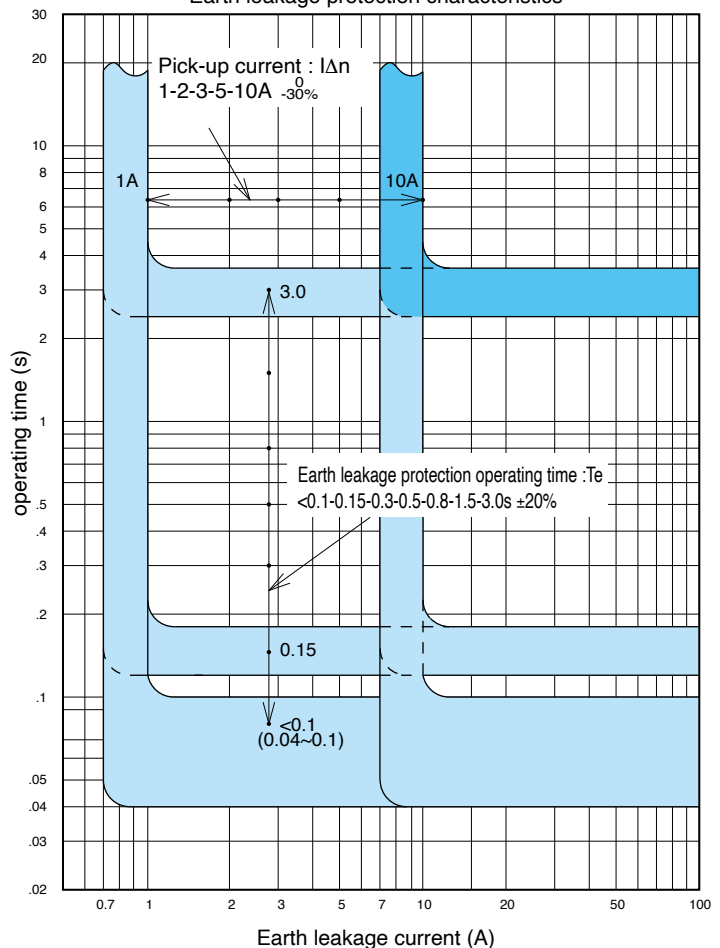

# Electronic trip relay

## Accessories

### 2nd Additional Pre-alarm (AP)

Option




The Pre-Alarm (1st) function is already installed in standard breaker, the 2nd additional Pre-Alarm function can be installed as option, thereby it is possible to monitor (observer) electric circuit in more detail by 2nd additional Pre-Alarm function.

Note that this optional module unit is not available for WB main setting module.

Setting item	Mark	Adjustable setting range	Accuracy	Factory default value
2nd Additional Pre-alarm pick-up current	Ip2	0.5-0.6-0.7-0.8-0.84-0.88-0.92-0.96-1.0 x Iu <b>WS</b>	±10% <b>WS</b>	1.0
		0.5-0.6-0.7-0.8-0.84-0.88-0.92-0.96-1.0 x IL <b>WM</b>	±5% <b>WM</b>	
2nd Additional Pre-alarm time	Tp2	$\frac{0.9-0.8-0.7-0.6-0.5-0.4-0.3 \times T_L}{(x T_L)}$ - $\frac{5-10-15-20-30-40-60s}{(FLAT)}$	±20%	0.9 (x TL)

#### <Pre-alarm timing chart>

PAL LED starts to blink at time when the actual current exceeds the setting current. Then after it passes a half of LTD time (TL), it starts to light and simultaneously the contact output starts. As for its operating time, refer to the Operating characteristic curves in Page 26, 28, 30 and 32.

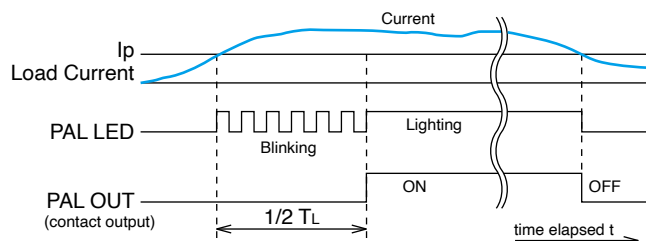

### Neutral pole 50% protection (N5)

Option



When used OA equipment or DC power source that brings the third higher harmonic in 3 phases 4 wires circuit, is sometimes it electrically damages the other peripheral equipments due to the superposition of the third higher harmonic on Neutral pole.

This Neutral Pole 50% Protection (N5) is useful to protect the other peripheral equipments from such an electrical damage and also to prevent some troubles with the Pre-Alarm function.

Neutral pole overcurrent protection (operating at 100% of rated current) is already equipped with ETR as standard features.

But, if the operation at 50% of rated current is required on Neutral pole, it becomes available with this optional module unit.

Note that this optional module unit is not available for WB main setting module.

## MCR switch (MCR-SW)

Option



With this MCR switch, at the time of breaker closing from OFF to ON the INST (Instantaneous) characteristic works, and then after breaker is in closed (ON) position the INST characteristic becomes ineffective. This controlling function of INST characteristic is useful for the protection on the short-circuit fault at the time of closing and also for expanding the selective combination with branch breakers after closed.

The factory default setting of "INST/MCR pick-up current setting dial" is usually at "INST", so if the function of this MCR switch is required, the dial should be changed to "MCR".

## Temperature alarm (TAL)

Option



When temperature detection sensor is installed in the breaker, temperature alarm is operative. When an abnormal main contact temperature is detected, temperature alarm is indicated by LED on main setting module and also the output contact is made energize if power supply with output contact is installed.

It is possible to know temperature rising which is caused by wear of main contact because temperature detection sensor is installed near main contact. When the temperature of main contact goes down to the normal level, temperature alarm turns off automatically.

The addition of extension units allows the temperature measured with temperature detection sensor to be displayed and transmitted.

## Field test device (Y-2005)

Option



The electronic trip relay can be checked by this field test device when the breaker is at the test position or the disconnect position. The breaker will trip when tested with this device.

### Y-2005 specification

Test items	LTD, STD, INST, GFR, PAL
Range of signal output	Voltage signal equivalent to 1%~2500% of Rated current $I_n$ (CT rating)
Dimensions	220mm(W) x 150mm(H) x 340mm(D)
Time counter	0.000 ~ 999.999s
Input voltage	100-240V AC 50/60Hz
Weight	4.8kg

# Electronic trip relay

## Additional functions

By adding the extension module unit in ETR, additional functions like measuring, display and communication become available.

### List of extension unit (Option)


Name	Type	Description
Extension module	EX1/EX2	Base module for display and interface function (indispensable)
Display module (relay attachment)	DP1	Display module for ETR
Display module (panel attachment)	DP2	Display module for panel board
VT unit	VT	Module for measuring voltage, active power and active energy
MODBUS (RS-485) interface unit	BIF-MD	Interface unit for MODBUS (RS-485)
I/O unit	BIF-CON	Module for breaker remote control (Interface unit is required)
Drawout position switch	BIF-CL	Switch for detecting the drawout position of the breaker (Interface unit and I/O unit are required.)

Note: The above extension units are not available for WS relay with DP3.


### Selection samples of additional function modules

(○):required optional modules


Additional function		Name	Extension module		Display	VT unit	Interface unit
			Type	EX1	EX2	DP1 or/and DP2	VT
Load current	Display		○	○	○		
	Communication	MODBUS	○	○			○
	Display & Communication	MODBUS	○	○	○		○
Voltage Power Energy Harmonics current etc.	Display		○		○	○	
	Communication	MODBUS	○			○	○
	Display & Communication	MODBUS	○		○	○	○




DP1 EX1/EX2(inside breaker)



DP2  
(on the Panel)




VT unit  
(placed separately)



BIF-MD  
Interface unit  
(placed separately)

### Electronic trip relay (ETR) Type designation breakdown

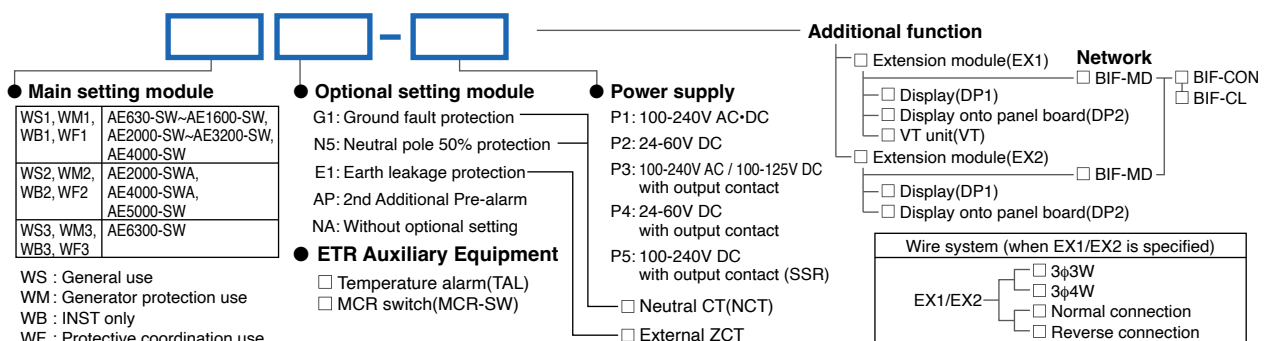

## Extension module (EX1/EX2)

Option



This is the base module that provides various additional functions when combined with Display module (DP1 / DP2), Interface unit (BIF-MD) and VT unit (VT).

### 1 Diverse measurement elements and high measurement accuracy

High-performance ASIC built into EX1 allows for high measurement accuracy and diverse measurement elements such as load current, voltage, power, and harmonic current.

### 2 Simple measurement function

Simply select EX2 and the display or interface unit to support simple measurement of and a transmission function for load current. We can suggest the optimal selections for your application.

### 3 Communication function

With the advanced internal communication function of this EX1/EX2 module, it is achieved rapid transmission of data between ETR and Displays or Interface units. Besides, it can be extended the function by connecting with Max. 2 display modules and 1 interface unit in parallel.

## Display module (DP1/DP2)

Option



This is the module for display and setting of the various information like measured value, trip and alarm status, ETR status for display and output contacts setting etc...

### 1 Multi display of measuring element

It enables to easily monitor the comparison of each measuring element with its multi display (4 phases multi display of load current and voltage) on one screen.

### 2 Two-color back light

Under trip or alarm, back light color changes from green to red automatically, which visually shows an abnormal situation.

### 3 Graphical display

By adopting dot matrix type LCD, graphical display such as bar graph display of load current, harmonic currents and characteristic curve are available.

There are 2 types of display module. One is the ETR attachment type (DP1). The other is the panel attachment type (DP2), which can be connected to extension terminals of control circuit with 2m cable. 2 units of display modules (DP1 and DP2) can be attached on one breaker. (As for outline dimensions of DP2, refer to page 59.)

Note;

- Extension module (EX1/EX2) is required.
- VT unit (VT) is required to display the measured data except load current.

## VT unit (VT)

Option



When used with the extension module (EX1), this unit enables measurement of electrical quantities such as voltage, power, electric energy, and harmonic currents, and provides Undervoltage protection (UV), overvoltage protection (OV), and voltage unbalance protection (UB). It can also detect circuit abnormalities based on the measured voltages to provide protection. These features support detailed energy monitoring. (Outline dimensions are shown on page 60.)

Protection function	Description
Undervoltage protection (UV)	Monitors the circuit voltage, generating an alarm or tripping the breaker when the voltage drops below the set value.
Overvoltage protection (OV)	Monitors the circuit voltage, generating an alarm or tripping the breaker when the voltage exceeds the set value.
Voltage unbalance protection (UB)	Monitors the circuit voltage, generating an alarm or tripping the breaker when the voltage unbalance factor exceeds the set value.

Note;

- The length of the cable attached for VT unit is 2m.
- Undervoltage protection (UV), overvoltage protection (OV) and voltage unbalance protection (UB) are available only when MODBUS is connected.

# Electronic trip relay

## Network

### Interface unit (BIF-MD)

Option



BIF-MD (MODBUS(RS-485))


These Interface units can expand the future possibility in various communication and Intelligent control.

**1 Applicable to various open networks.**

These units are applicable to various open network systems such as MODBUS (RS-485), which can be built in easily.

**2 Intelligent control by Multi-data communication**

It can be the Intelligent control by Multi-data communication from PLC/SCADA to these interface units. These interface units receive the measurement information, setting values, error information and trip and alarm information from PLC/SCADA.

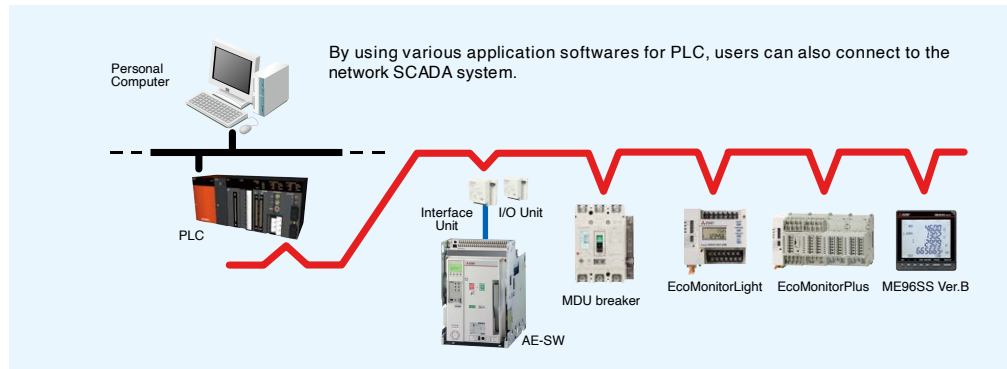

The length of the cable for interface unit is 2m.

Note:

- Extension module (EX1/EX2) is required.
- VT unit (VT) is required to transmit the measured data except load current.

### I/O unit (BIF-CON)

Option



BIF-CON

The Input & Output Controlling Unit (BIF-CON) is available for the remote controlling and the remote monitoring of the breaker condition through the various network systems.

With this BIF-CON unit in addition to the Interface Unit, it becomes possible to control the breaker remotely, like a ON or OFF operations or Spring-charging.

Function	Description	Note
Control	Breaker ON operation	1a contact for Closing coil (CC)
	Breaker OFF operation	1a contact for Shunt trip device (SHT) (not applicable for 380-500V AC rating)
	Spring charge	1a contact for Motor charging (MD)
Monitor	Digital Input (DI) monitoring	Max. 3 contacts

### Drawout position switch (BIF-CL)

Option



BIF-CL

With this Drawout position switch (BIF-CL) in addition to Interface unit and I/O unit (BIF-CON), the remote monitoring of draw-out position becomes available for the breaker draw-out type.

Function	Description	Note
Monitor	Breaker Drawout position	Position : Connect or Test or Disconnect

### Chart of additional functions

○ : can be displayed by DP1/DP2/DP3

● : can be displayed and set by DP1/DP2


Combination sample																		
Type	① ② - ③ ;EX1 ;DP1 ;(DP2) <sup>Note 1</sup>				① ② - ③ ;EX1 ;DP1 ;(DP2) ;VT <sup>Note 1</sup>								① ② - ③ ;EX2 ;DP1 ;(DP2) <sup>Note 11</sup>			① ② - ③ ;DP3		
① Main setting	WS	WM	WB	WF	WS	WM	WB	WF	WS	WM	WB	WS						
② Optional setting	NA	AP	G1	E1	NA	AP	G1	E1	NA	AP	G1	E1	NA	AP	G1	E1	NA	G1
③ Power supply	P1-P5				P1-P5								P1-P5			P1-P5		
<b>Measurement</b>																		
Load current (Accuracy)	○ (±2.5%)				○ (±2.5%)								○ (±5.0%)			○ (±1.5%) <sup>Note 5</sup>		
Leakage current (±15%) <sup>Note 4</sup>	-	-	-	○	-	-	-	○	-	-	-	○	-	-	-	○	-	-
Voltage (±2.5%)	-				○								-			-		
Power (active, reactive, apparent) (±2.5%)	-				○								-			-		
Power factor (±5%)	-				○								-			-		
Energy (active, reactive) (±2.5%)	-				○								-			-		
Harmonics current (Accuracy)	-				○ (±2.5%, 3,5...19th)								-			○ (±3.5%, 3,5,7th) <sup>Note 5</sup>		
Frequency (±2.5%)	-				○								-			-		
Main body temperature (±10°C)	○ <sup>Note 3</sup>				○ <sup>Note 3</sup>								○ <sup>Note 3</sup>			-		
<b>Trip history</b>																		
LTD	○	○	-	○	○	○	-	○	○	○	-	○	○	○	-	○	○	○
STD	○	○	-	○	○	○	-	○	○	○	-	○	○	○	-	○	○	○
INST	○				○								○			○		
GFR	-	-	○	-	-	-	○	-	-	-	○	-	-	-	○	-	-	○
ER	-	-	○	-	-	-	○	-	-	-	○	-	-	-	○	-	-	○
UVT	○ <sup>Note 2</sup>				○ <sup>Note 2</sup>								○ <sup>Note 2</sup>			-		
UV	-				○								-			-		
OV	-				○								-			-		
UB	-				○								-			-		
<b>Alarm history</b>																		
PAL1	○				○								○			○		
PAL2	-	○	-	-	-	○	-	-	-	○	-	-	-	○	-	-	-	-
OVER	○				○								○			○		
GFR	-	-	○	-	-	-	○	-	-	-	○	-	-	-	○	-	-	○
EPAL	-	-	○	-	-	-	○	-	-	-	○	-	-	-	○	-	-	-
ER	-	-	○	-	-	-	○	-	-	-	○	-	-	-	○	-	-	-
TAL	○ <sup>Note 3</sup>				○ <sup>Note 3</sup>								○ <sup>Note 3</sup>			-		
UV	-				○								-			-		
OV	-				○								-			-		
UB	-				○								-			-		
<b>Characteristic setting</b>																		
LTD	○	○	-	○	○	○	-	○	○	○	-	○	○	○	-	○	○	○
STD	○	○	-	○	○	○	-	○	○	○	-	○	○	○	-	○	○	○
INST	○				○								○			-		
PAL1	○				○								○			-		
PAL2	-	○	-	-	-	○	-	-	-	○	-	-	-	○	-	-	-	-
GFR	-	-	○	-	-	-	○	-	-	-	○	-	-	-	○	-	-	-
EPAL	-	-	●	-	-	-	●	-	-	-	●	-	-	-	●	-	-	-
ER	-	-	○	-	-	-	○	-	-	-	○	-	-	-	○	-	-	-
UV	-				●								-			-		
OV	-				●								-			-		
UB	-				●								-			-		
<b>Setting</b>																		
Contact outputs setting change	●				●								●			-		
Date & Time	●				●								●			-		
Demand time	●				●								●			-		
Alarm holding method	●				●								●			-		
Number of operating cycles of the breaker	● <sup>Note 7</sup>				● <sup>Note 7</sup>								● <sup>Note 7</sup>			-		
<b>Reset</b>																		
Trip and alarm information	●				●								●			-		
Measurement information (min. and max. values)	●				●								●			-		
<b>ETR information</b>																		
Main / Optional setting module information	○				○								○			-		
Error information	○				○								○			-		
CT rating (In)	○				○								○			-		
Phase line method	○				○								○			-		
Normal connection or reverse connection	○				○								○			-		
<b>Transmission</b>																		
Communication <sup>Note 6</sup> <sup>Note 8</sup>	MODBUS				MODBUS								MODBUS			-		

Note 1) 2 units of display modules can be attached.  
 Note 2) Display is available only when UVT module is attached.  
 Note 3) Display is available only when temperature detection sensor is attached.  
 Note 4) Include the accuracy of ZCT.

Note 5) This is the accuracy value when WS relay with DP3 is assembled to breaker before factory shipment.  
 Note 6) Interface unit is required for communication function.  
 Note 7) It is possible to display the number of operating cycles detected by ETR, and counter value can be set arbitrarily from the display.  
 Note 8) Number of operating cycles and main body temperature, the items related to Voltage Protection(UV/OV/UB) are only available when MODBUS is selected.

# Electronic trip relay

## Electronic trip relay circuit diagram

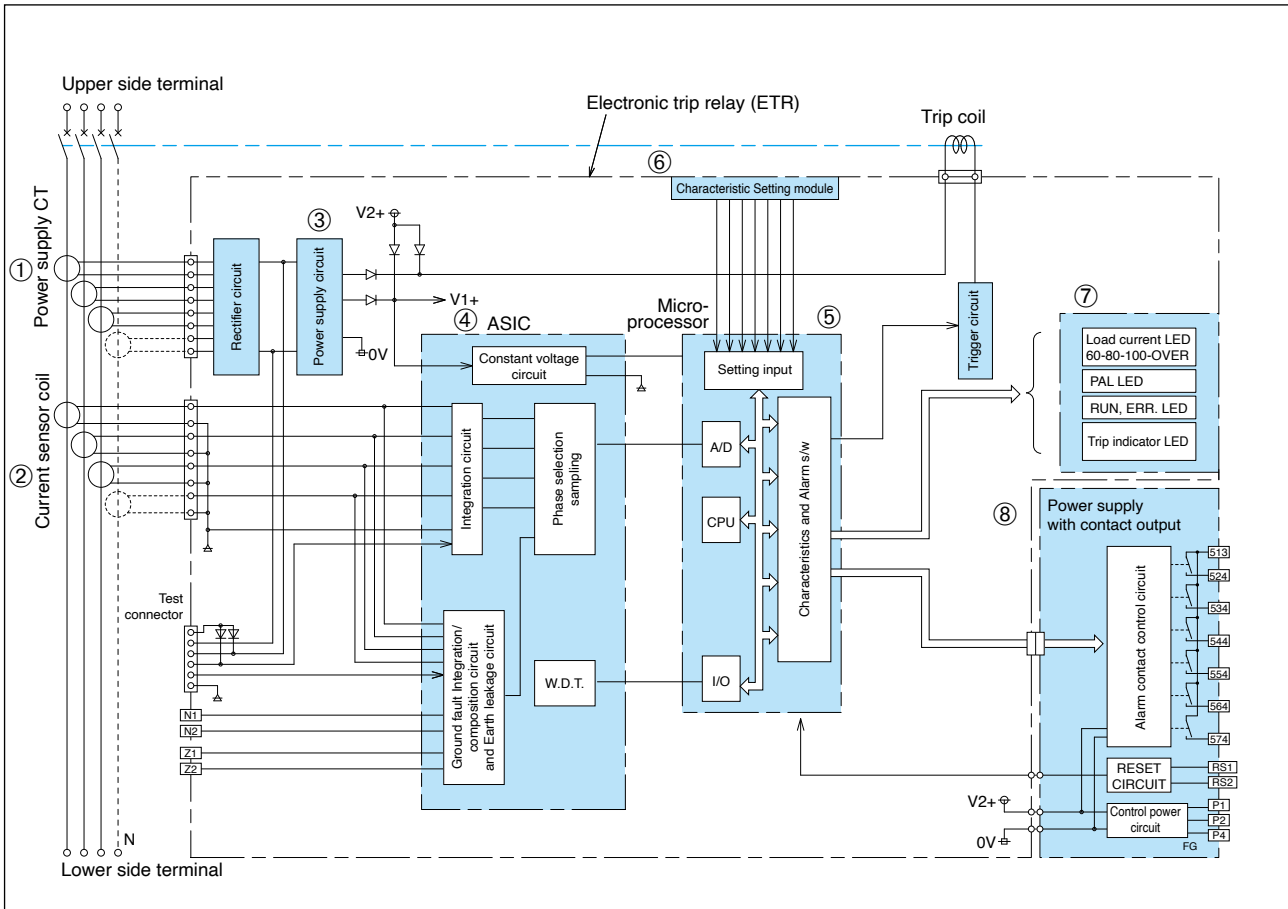

### ① Power supply CT

Energy is supplied for the operation of the overcurrent tripping and ground fault tripping (GFR) function of the electronic trip relay.

### ② Current sensor coil

The current in each phase flowing through the breaker is detected. An air core coil which has good linearity is adopted.

### ③ Power supply circuit

This part converts power supply CT energy to constant voltage for respective circuits in the ETR.

### ④ ASIC

This ASIC amplifies the signal detected by the current sensor coil and the detected signal of ground fault current which is vector composed of the detected signals of each phase.

### ⑤ Microprocessor

The microprocessor integrates each phase current waveform from the ASIC and performs processing for overcurrent protection and others.

### ⑥ Characteristic setting module

The module for the characteristic setting of the ETR.

### ⑦ Several LEDs

The load current LED gives a figure of current in percent by CT energy.

Trip indicator and pre-alarm are indicated by control power supply.

RUN and ERR. LED indicate breaker's condition by control power supply or ten-odd percent of CT energy.


### ⑧ Power supply with contact output

This outputs contact signals of fault cause (including pre-alarm) and other alarms.


A control supply is necessary for this function.

# Setting procedure

Press the screwdriver in the direction of the arrow to open the cover

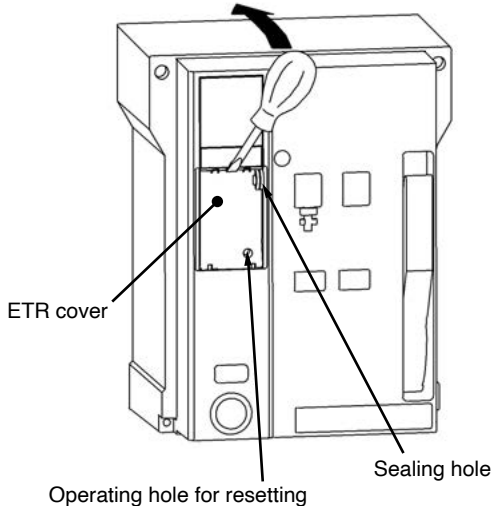

1 Prepare a small flat tipped screwdriver.

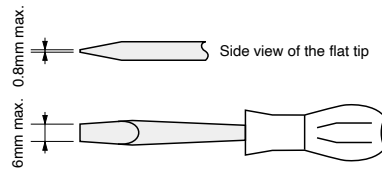

2 Insert the flat tipped screwdriver into the opening of the ETR cover. Then, lightly turn the screwdriver to the upside as shown in the left figure, and the ETR cover will open.

3 There are two kinds of switches for characteristics setting and for trip indicator reset. They should be used as follows.


① Adjustable in steps

Rotary code switch is used. Do not set the switch at points between steps. The setting value is the same when the switch is positioned at the thick line. (Set the switch with a torque of 0.02N·m or below.)

Note) If the switch is set at points between steps, the characteristics setting value will be decided at either end of steps.

② Push-button



This is for temporary operation, and press it with force of 3N or less.

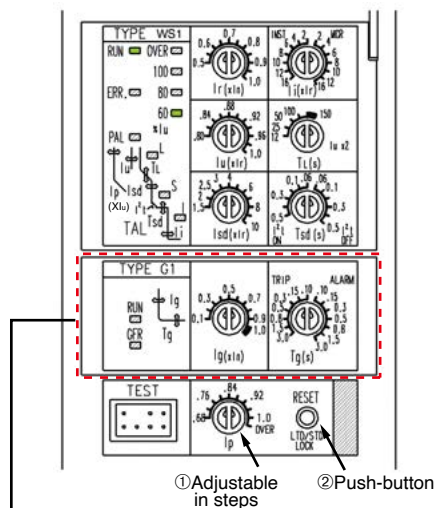


4 For WS relay with DP3, there is a slide type switch (Frequency selector switch) as the left side picture shows.

① Frequency selector switch

Do not set the switch at points between the slide. When operating the switch, use a flat tipped screwdriver of the following size.

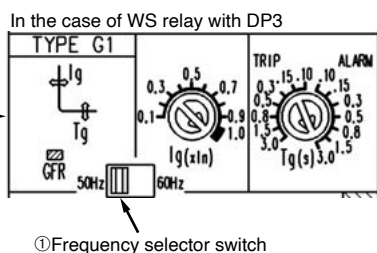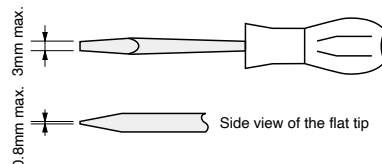

① Frequency selector switch

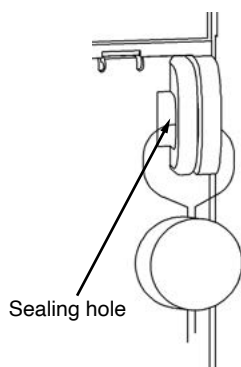


5 When the characteristic is set up, use a device like a field tester, etc to make sure that the required characteristic has been set.

6 At sealing, seal the ETR cover by using the sealing hole at the top of the ETR cover.

# Wiring diagram

● The following diagram shows the case that accessories are fully equipped.

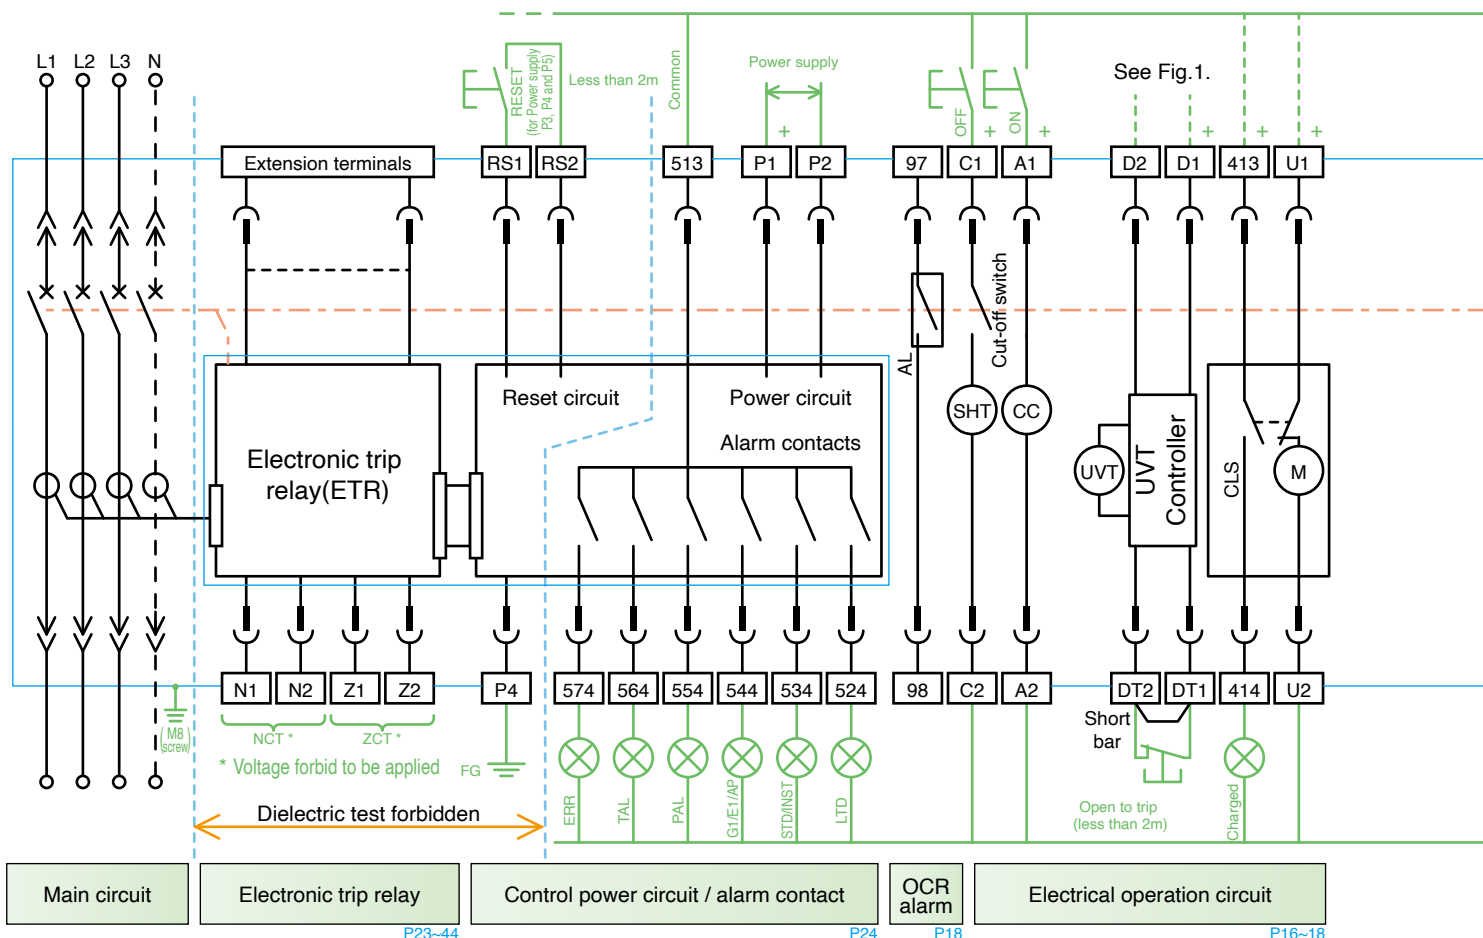

## Terminal description

13	14	~	53	54	Auxiliary switch "a"
11	12	~	51	52	Auxiliary switch "b"
U1	U2				Motor charging
413	414				Charged signal (Normal open)
D1	D2				Voltage input terminal of UVT
DT1	DT2				Trip terminal of UVT (Remote trip)
A1	A2				Closing coil
C1	C2				Shunt trip
97	98				OCR alarm
P1	P2				Power supply for ETR
P4					FG of power supply (FG:Frame Ground)
RS1	RS2				Alarm reset (Trip cause LED, alarm contact)
513	524				Alarm contact for LTD trip
513	534				Alarm contact for STD or INST trip
513	544				Alarm contact for Ground fault, Earth leakage trips or 2nd Pre-alarm contact
513	554				Pre-alarm contact
513	564				Temperature alarm contact
513	574				Error alarm contact
Z1	Z2				For external ZCT
N1	N2				For Neutral CT (NCT)
Extension terminals					For external display DP2
					For Interface unit
					For VT unit

## Accessory symbols

	SHT	Shunt tripping device
	CC	Closing coil
	M	Motor(Motor charging device)
	UVT	UVT coil
	AX	Auxiliary switch
	AL	OCR alarm switch
	CLS	Charge limit switch
	SBC	Shorting b-contact
	CL	Cell switch

- Internal wiring
- External wiring (user's wiring)
- Control circuit connector (drawout type)

### Control circuit terminal block Terminal placement

VT	N1	Z1	RS1	513	564	544	524	P1	97	C1	A1	DT1	D1	413	U1	51	41	31	21	11	53	43	33	23	13
I/F-1	N2	Z2	RS2	P4	574	554	534	P2	98	C2	A2	DT2	D2	414	U2	52	42	32	22	12	54	44	34	24	14

Extended terminal



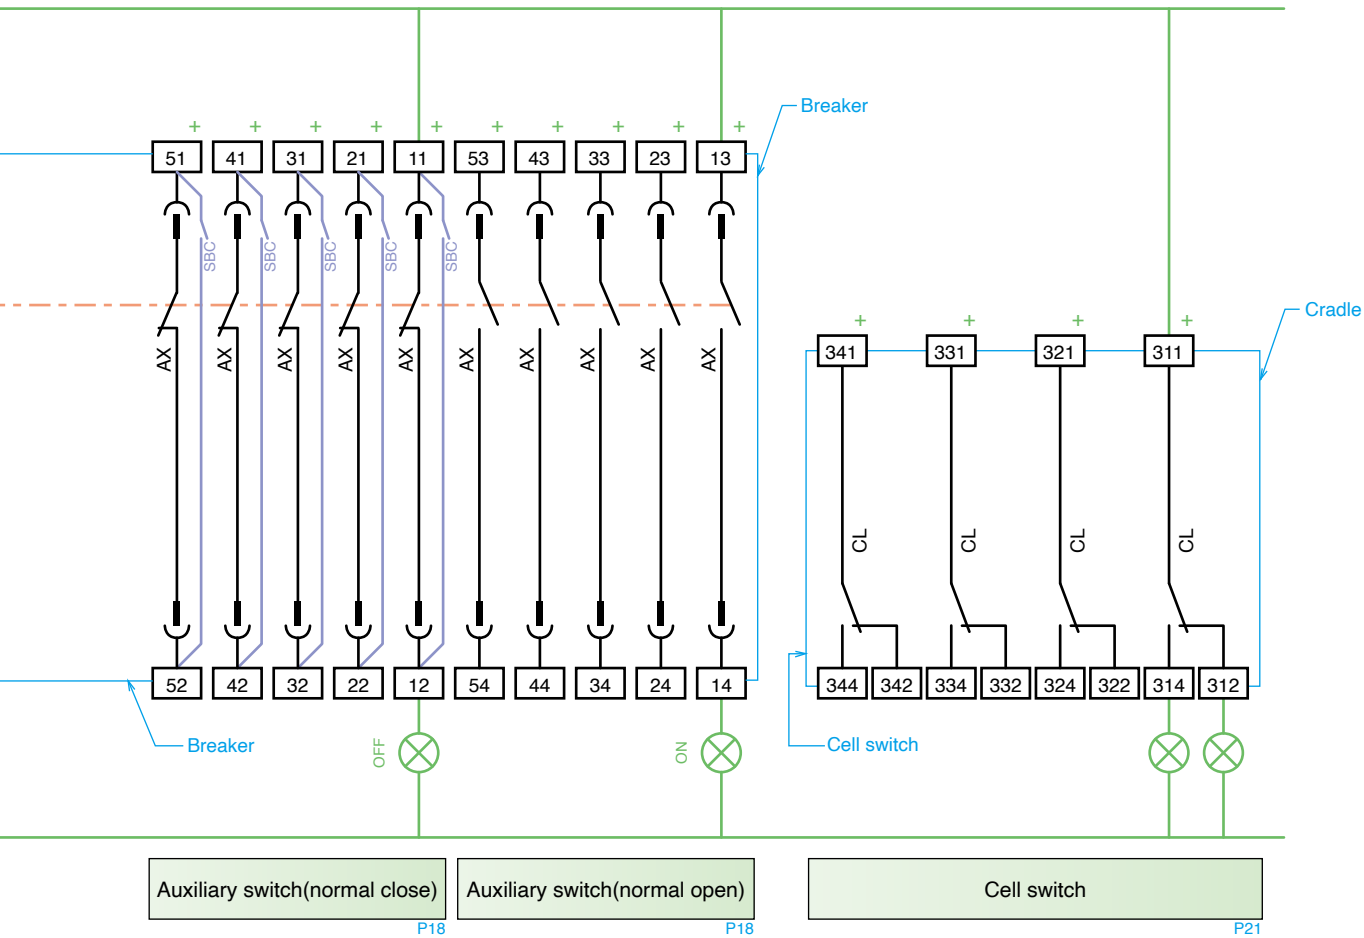


Fig.1  
UVT controller wiring

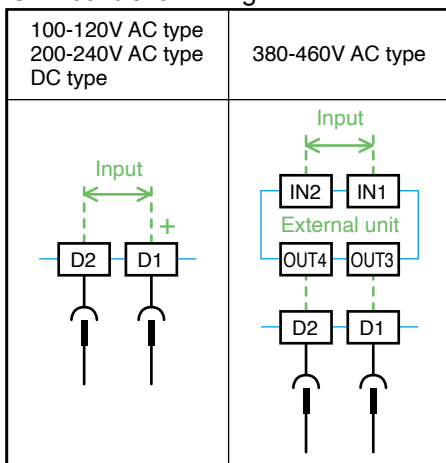

### Control circuit Recommended crimp-type terminals

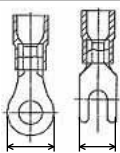

for M3.5 screw  
(wire size 1.25mm<sup>2</sup>~2.0mm<sup>2</sup>)

Max. 7.2mm

#### Note;


- For the drawout type, the cables should have the length which allow the control circuit terminal block to be moved to the left or right by 5mm.
- When a coil load is connected in the same control circuit as the ETR, surge absorbers are required to absorb the surge voltage.
- OCR alarm (AL)  
The contact output of the OCR alarm (standard type AL) is the one-pulse output and the output time is 30ms.  
For this reason, this output needs self-holding circuit.
- For Power supply type P3 and P4, the high sensitive relay used in contact output may cause the chattering noise (wrong output of 1ms level) during ON and OFF operation, depending on the panel placing condition. When it is used in the quick responsive sequence, the filter circuit of a few millisecond (ms) should be provided or the double reading sampling should be implemented.
- Closing coil (CC)  
As CC is one-pulse driven, it is not necessary to insert AXb for burning prevention purposes. Inserting AXb will cause anti-pumping function to be ineffective.
- Under voltage trip device (UVT)  
Use the switch that can open and close 150V DC, 0.5A or more for remote trip.  
Remote trip terminal has short bar at shipment, so remove it before using this function.  
Disconnect the voltage input wires during dielectric testing of main circuit.
- Since some terminals are polarized, the wiring should be done correctly as the polarity shown in the wiring diagram when the control voltage is DC. Auxiliary switch (AX) standard type has no polarity.
- Alarm reset (Terminal: **[RS1]** and **[RS2]**) is available only for power supply type P3, P4 and P5. Shorting the **[RS1]** and **[RS2]** terminals for 0.5 seconds or longer will reset it. The reset push-button switch carries approximately DC 12 V at 5 mA; please use an appropriate switch.  
For power supply type P1 and P2, it can not be reset from the control circuit terminal block (**[RS1]** and **[RS2]**).
- Alarm contacts (Terminal : **[513]**~**[574]**) are available only for power supply type **[P3]**, **[P4]** and **[P5]**. For output contacts, refer to page 24 Note2.
- FG (Terminal: **[P4]**) is the protective earth for power supply (Terminal: **[P1]**, **[P2]**). It is recommended to use this terminal to reduce surge (M8 screw required).
- Shorting b-contact (SBC)  
SBC can be provided for all AX b contacts. At the time of shipment from factory, SBC is already connected to control circuit terminal block. Only one more crimp terminal can be added on contact, overlapping with SBC's contact on Terminal: **[11]**~**[51]**.

# Outline dimensions


## Drawout type AE630-SW, AE1000-SW, AE1250-SW, AE1600-SW

(mm)

### Front view

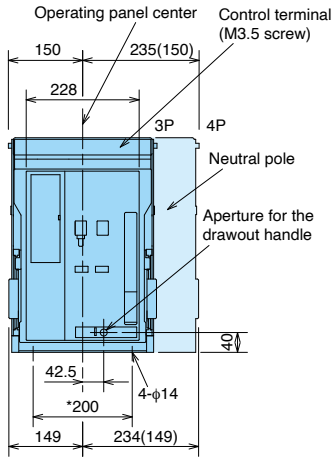


### Side view

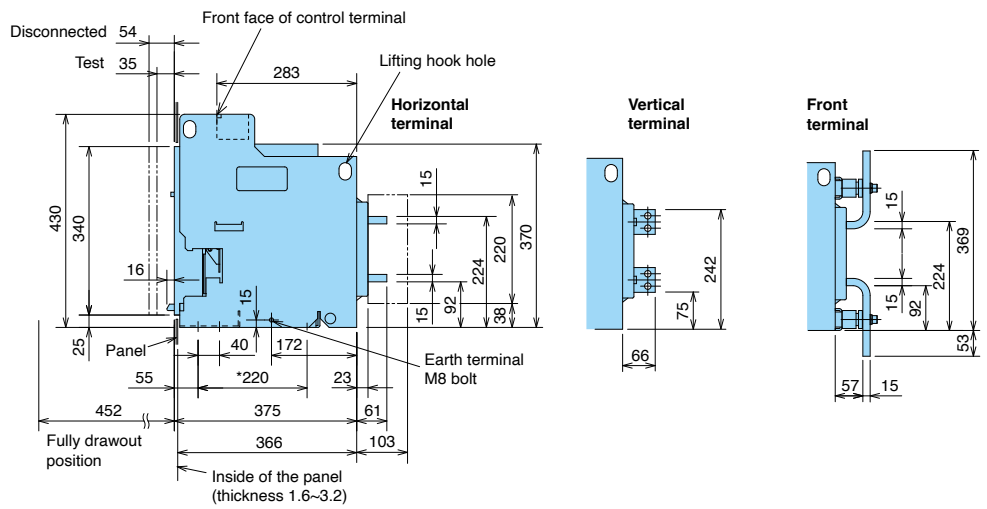


\* : Mounting pitch  
The numerals shown in parentheses are for 3 poles.

### Rear view

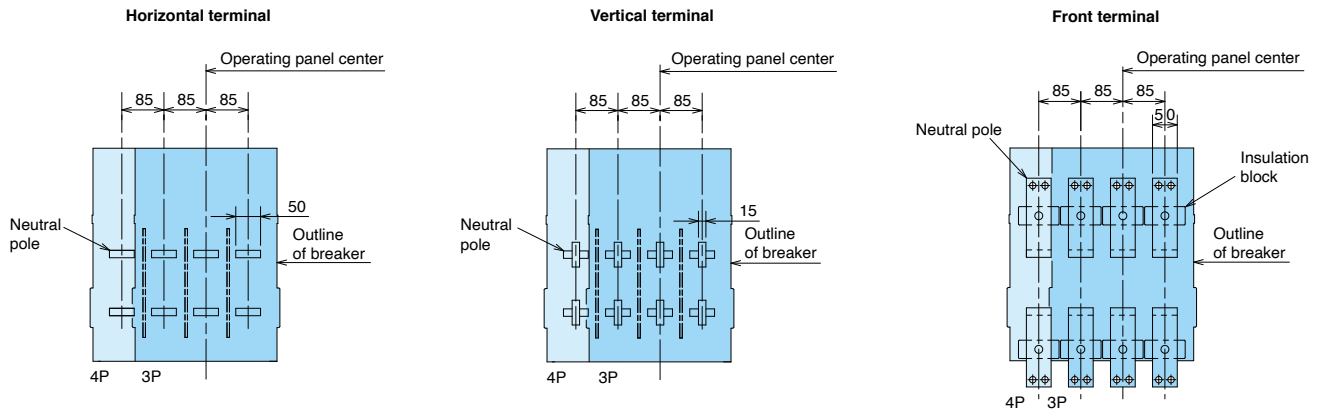


### Main circuit terminal dimension

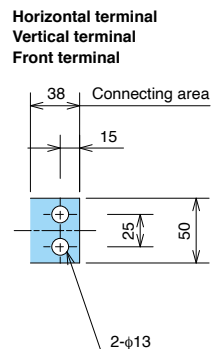

## Drawout type AE2000-SWA


(mm)

Front view


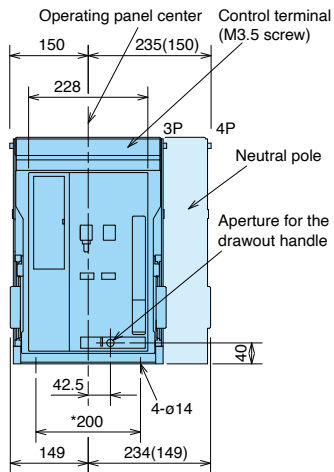


\* : Mounting pitch  
The numerals shown in parentheses are for 3 poles.


Side view

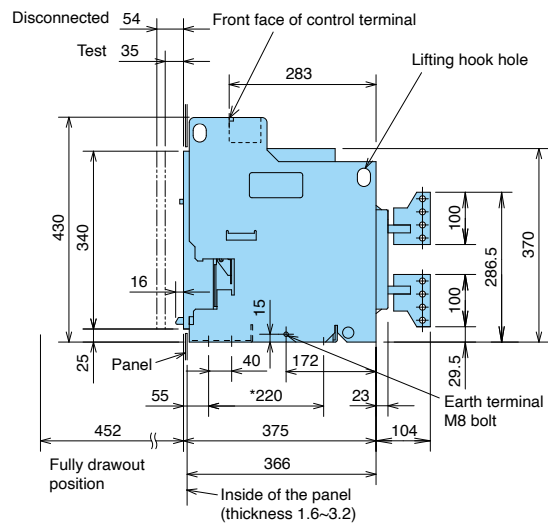

Rear view

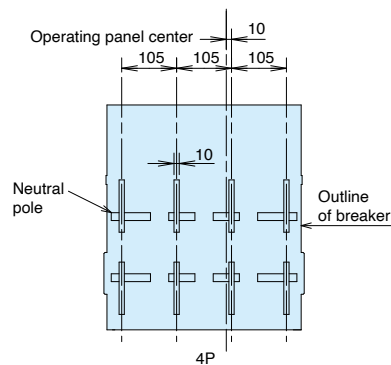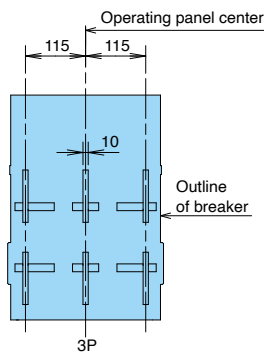

### Main circuit terminal dimension

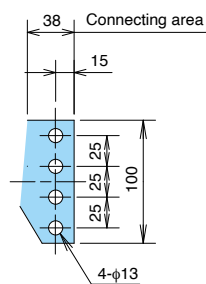


# Outline dimensions


## Drawout type AE2000-SW, AE2500-SW, AE3200-SW

(mm)

Front view

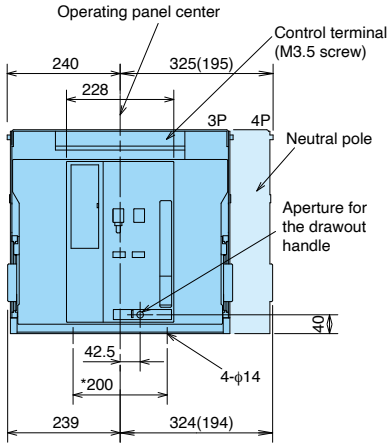


Side view

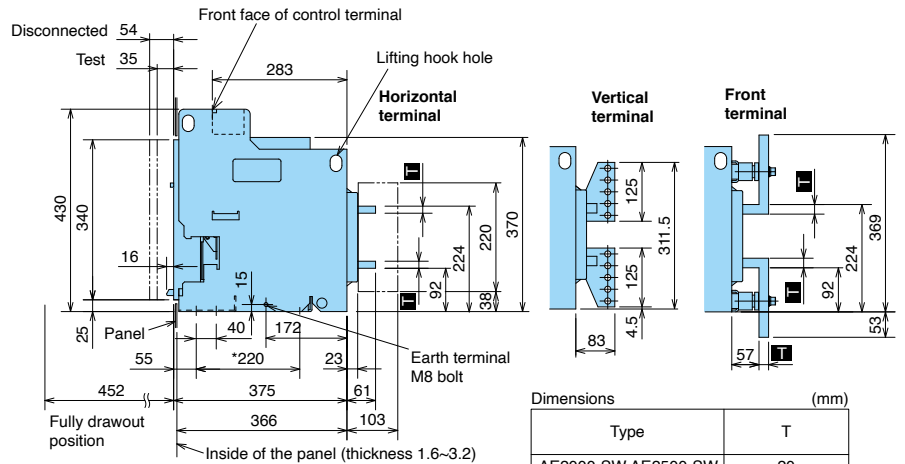


\* : Mounting pitch  
The numerals shown in parentheses are for 3 poles.

Rear view

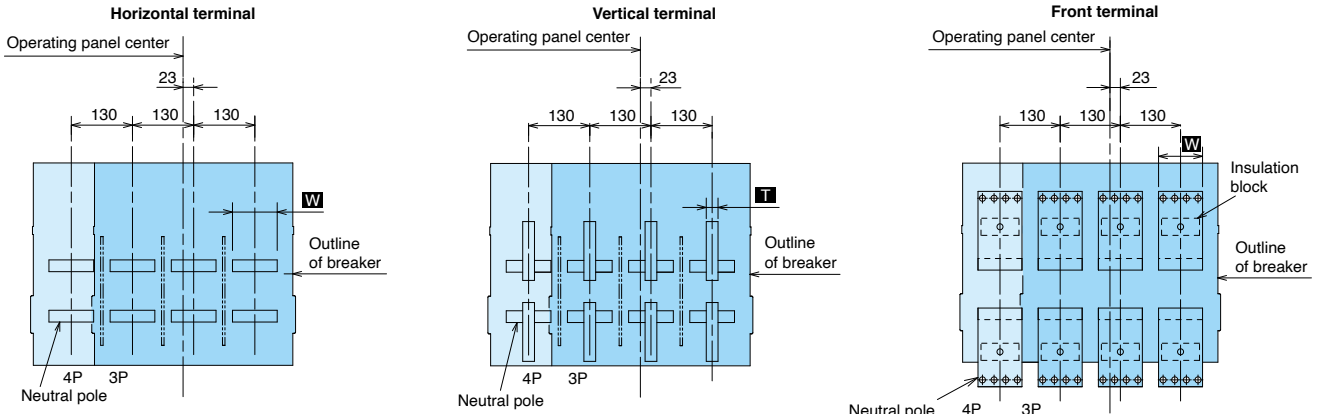

### Main circuit terminal dimensions

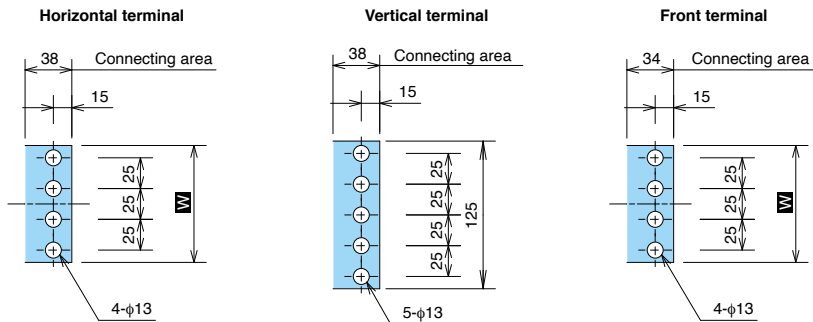

Dimensions (mm)	
Type	W
AE2000-SW AE2500-SW	95
AE3200-SW	103




# Outline dimensions

## Drawout type AE4000-SW, AE5000-SW, AE6300-SW


(mm)

Front view

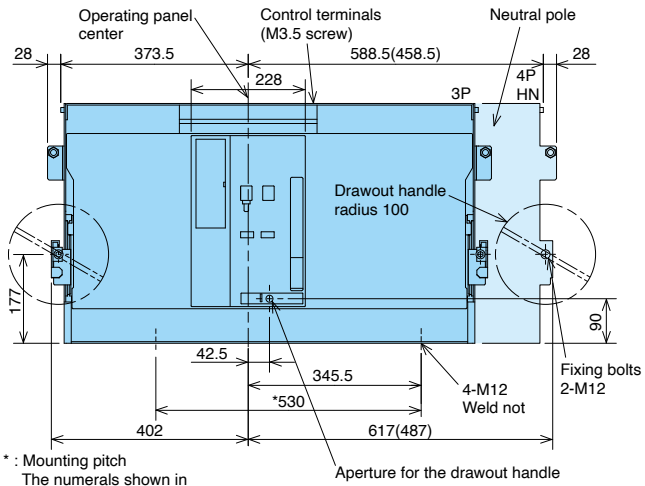


\* : Mounting pitch  
The numerals shown in parentheses are for 3 poles.


Side view

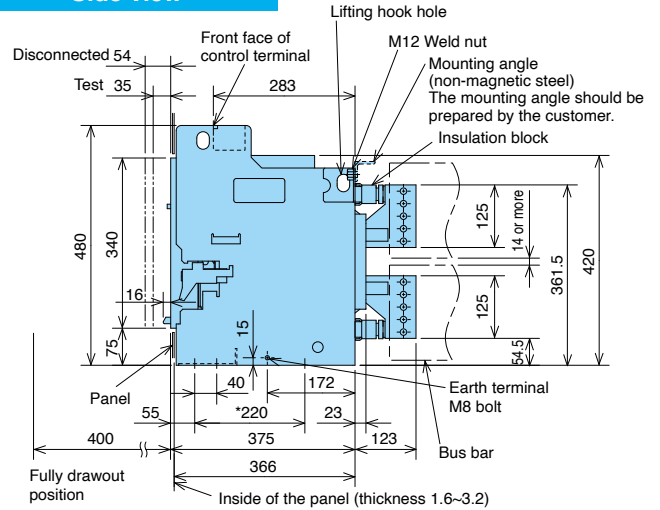

Rear view

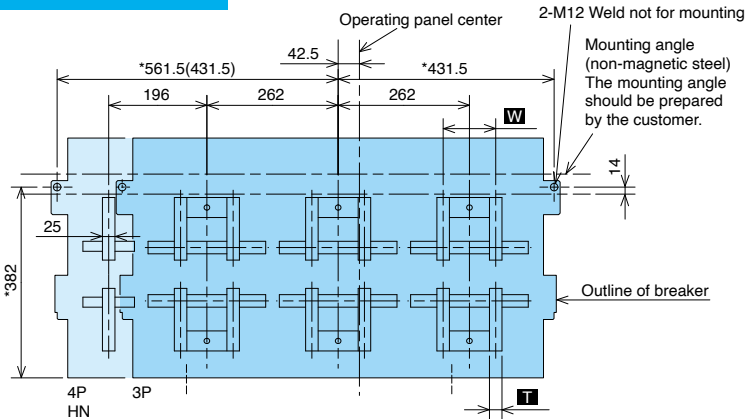


Main circuit terminal dimension

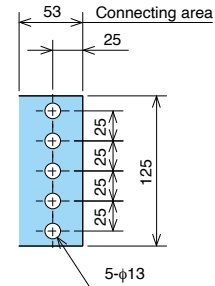

Dimensions		(mm)	
Type		W	T
AE4000-SW	AE5000-SW	100	20
AE6300-SW		105	25


## 4P FN type

Front view

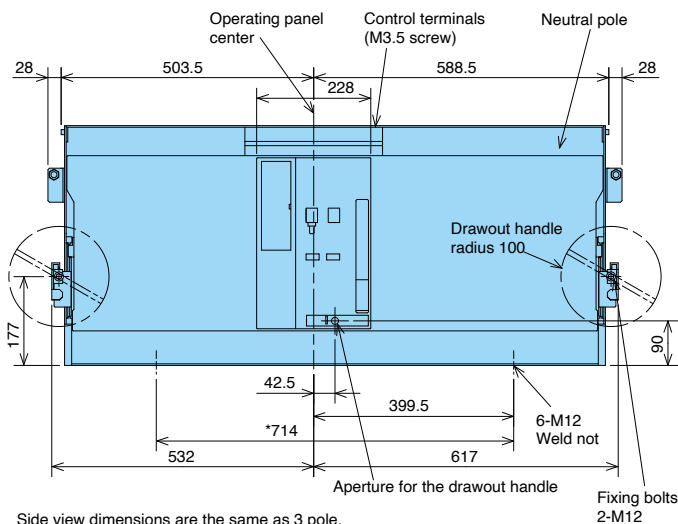

Side view dimensions are the same as 3 pole.


Rear view

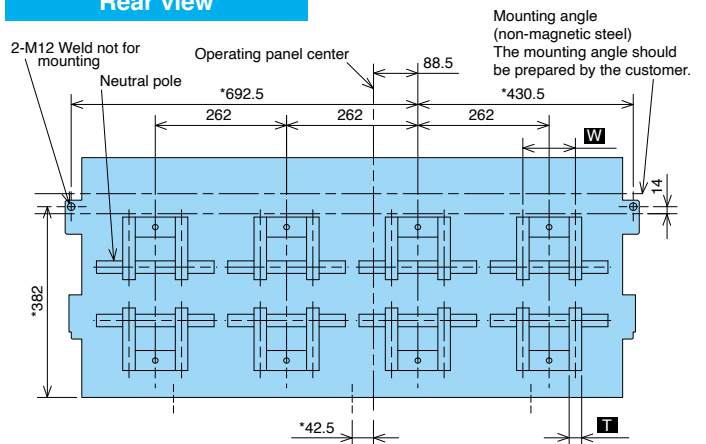


Fixed type AE630-SW, AE1000-SW, AE1250-SW, AE1600-SW

(mm)


Front view

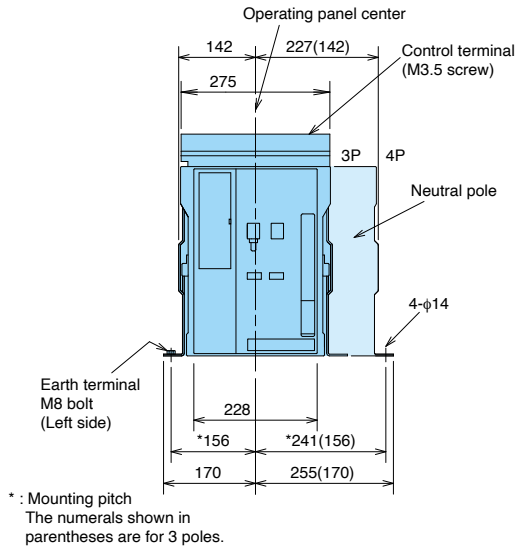


Side view

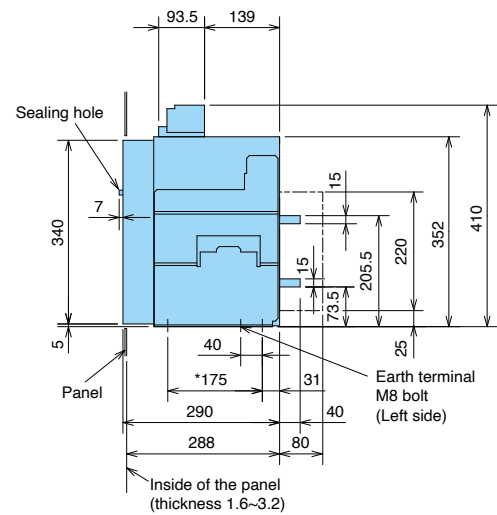

Rear view

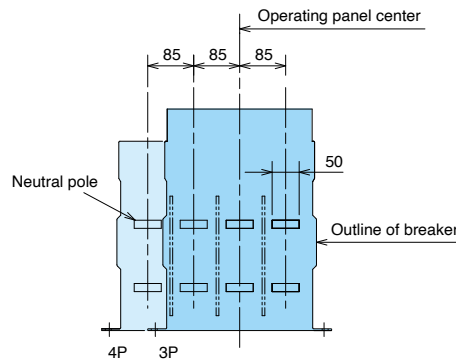


Main circuit terminal dimension

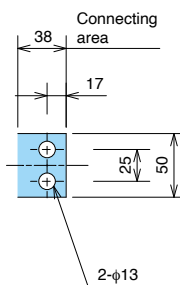

Lifting hooks (HP)

HP is supplied with breaker Fixed type.

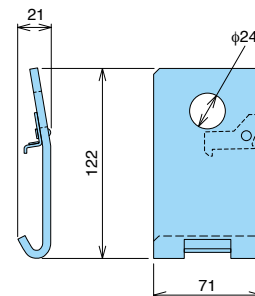


# Outline dimensions

## Fixed type AE2000-SWA


(mm)

Front view


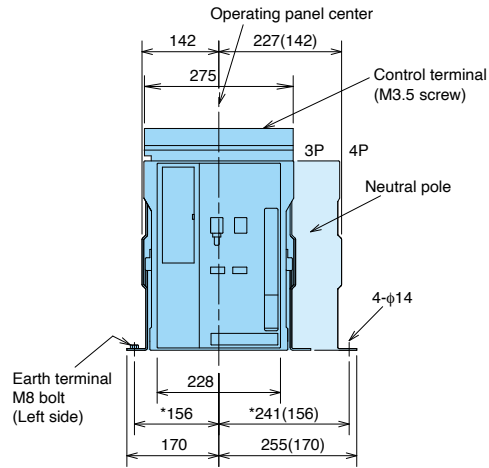


\* : Mounting pitch  
The numerals shown in parentheses are for 3 poles.


Side view

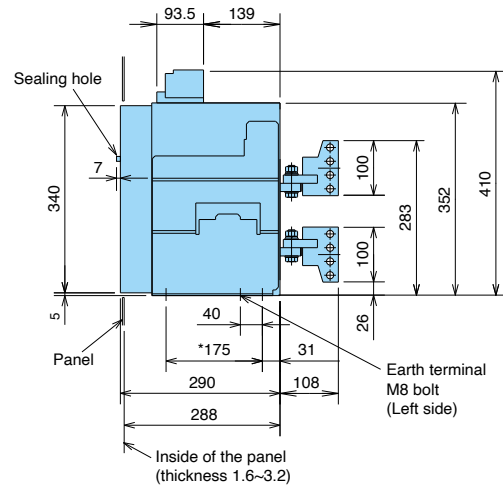

Rear view

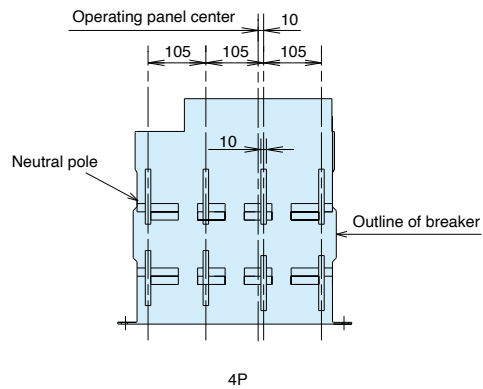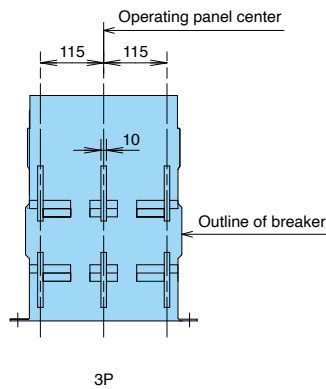

Main circuit terminal dimension

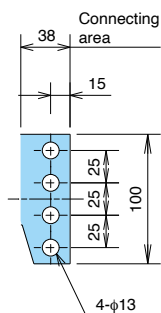

Lifting hooks (HP)


HP is supplied with breaker Fixed type.



Fixed type AE2000-SW, AE2500-SW, AE3200-SW


(mm)

Front view

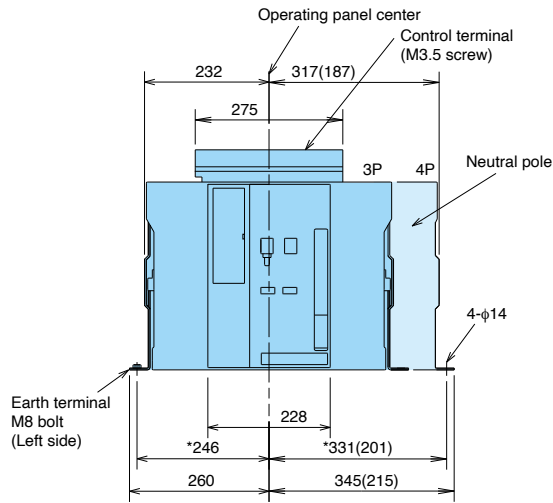


\* : Mounting pitch  
The numerals shown in parentheses are for 3 poles.


Side view

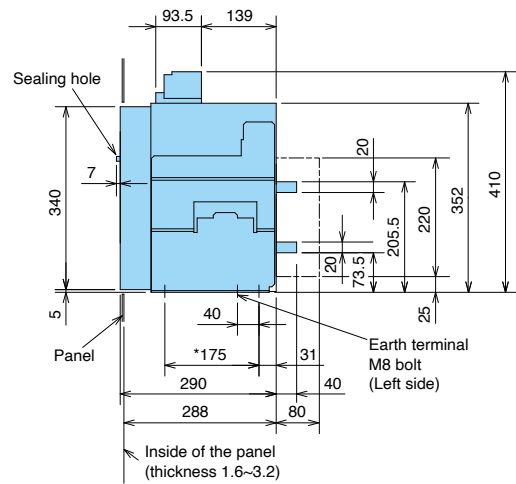

Rear view

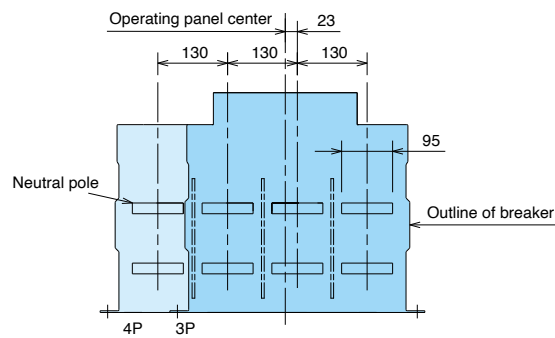


Main circuit terminal dimension

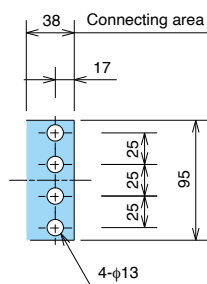

Lifting hooks (HP)

HP is supplied with breaker Fixed type.

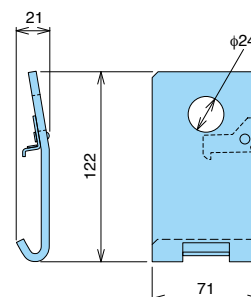


# Outline dimensions

## Fixed type AE4000-SWA


(mm)

### Front view


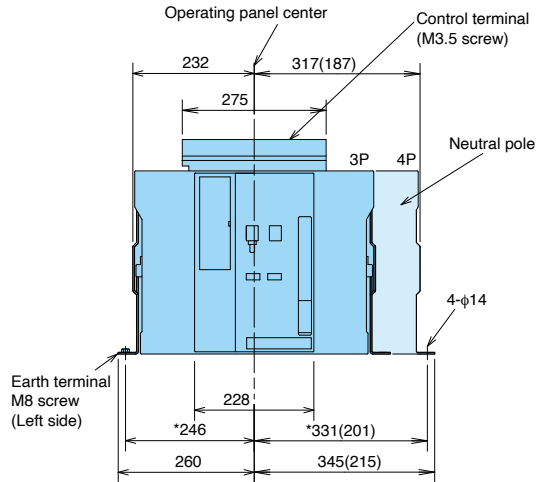


\* : Mounting pitch  
The numerals shown in parentheses are for 3 poles.

### Side view

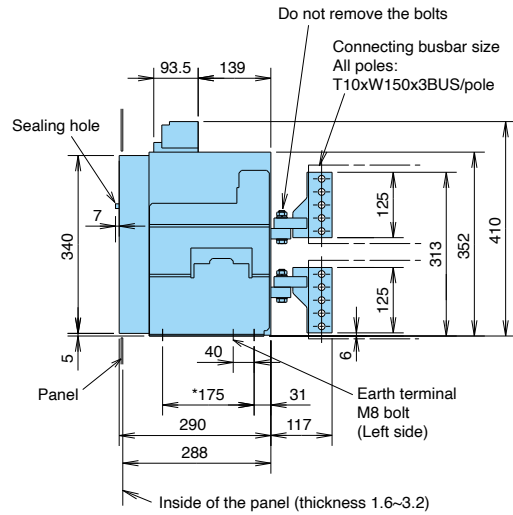


### Rear view

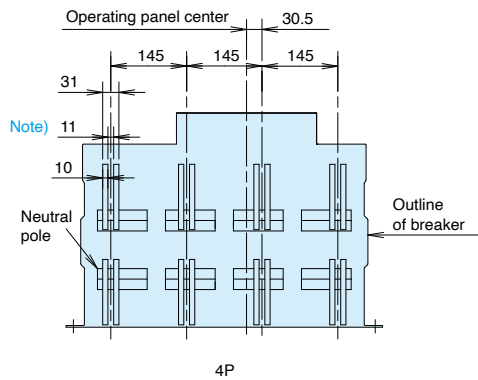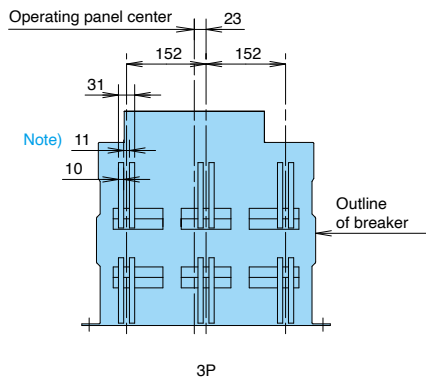


Note) Spacers are not required when fastening connecting conductors (T10). The necessary contact area can be obtained with breaker terminal bent by tightening the screw.

### Main circuit terminal dimension

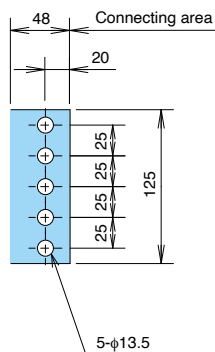

### Lifting hooks (HP)


HP is supplied with breaker Fixed type.

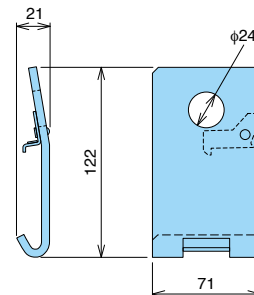

## Fixed type AE400-SW, AE500-SW, AE630-SW


(mm)

Front view

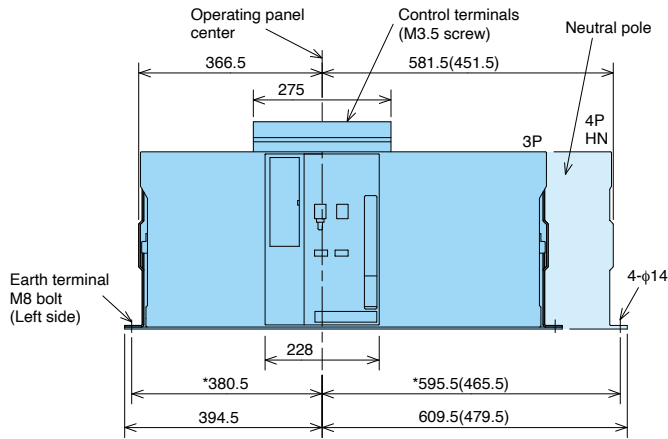


\*: Mounting pitch  
The numerals shown in parentheses are for 3 poles.


Side view

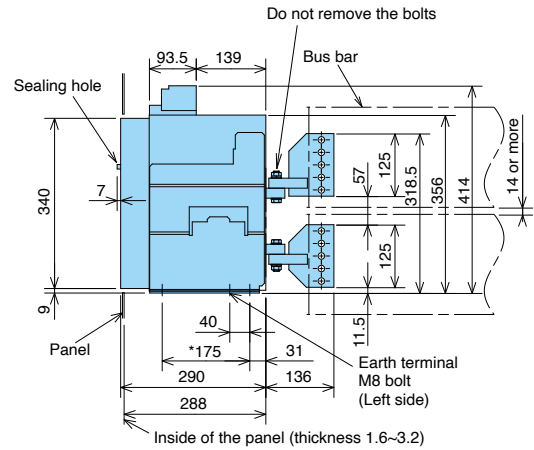

Rear view

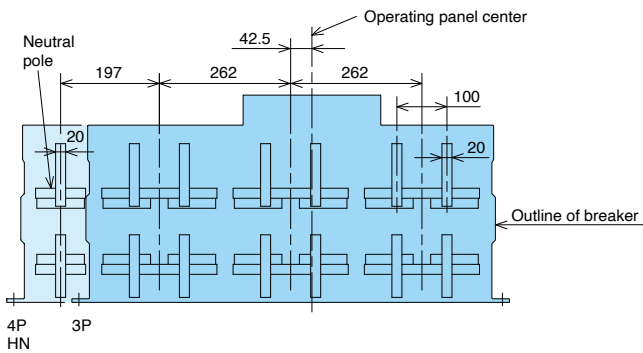


Main circuit terminal dimension

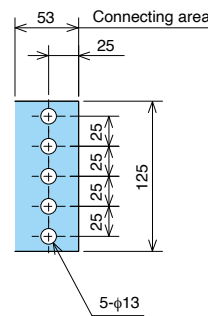


Lifting hooks (HP)

HP is supplied with breaker Fixed type.

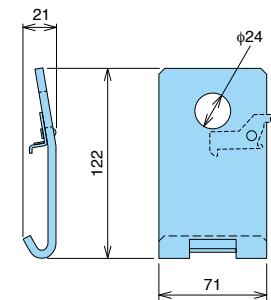


## 4P FN type

Front view

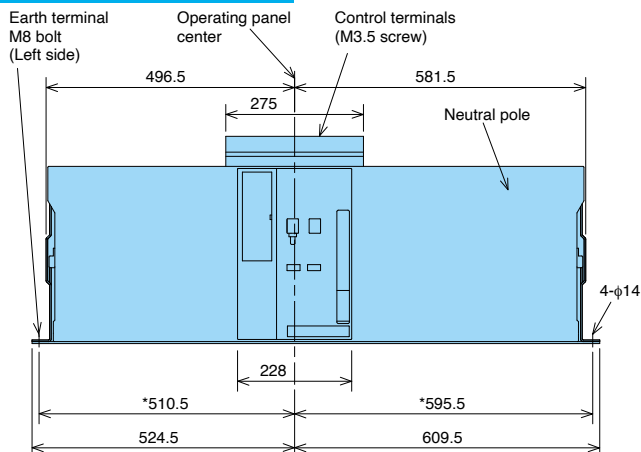

Rear view

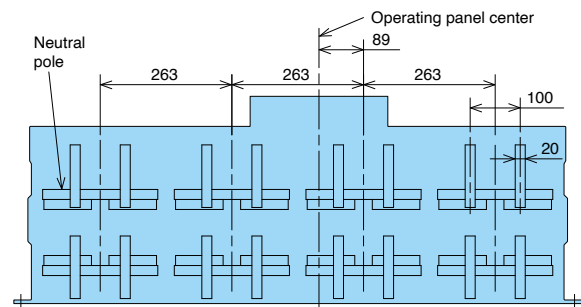


Side view dimensions are the same as 3 pole.


# Outline dimensions

## Panel cut-out, Terminal adapter, Drawout handle, Terminal cover


### Panel cut-out dimensions

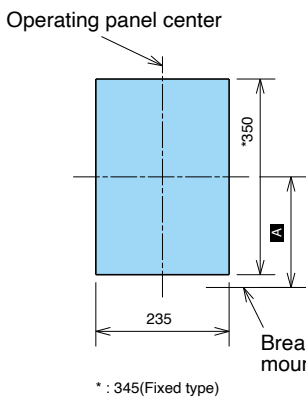

### Door frame panel cut-out dimensions

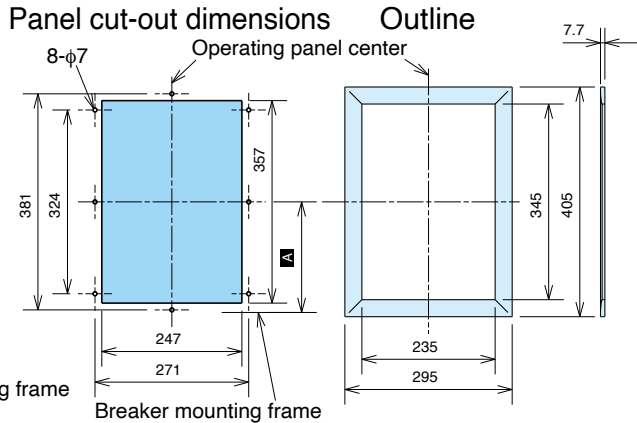


### Drawout handle dimensions

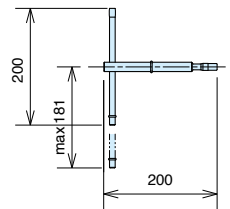

Dimensions		(mm)
Type		A
AE630-SW~AE1600-SW	Fixed Type	175
AE2000-SW~AE3200-SW	Drawout Type	195
AE2000-SWA, AE4000-SWA		
AE4000-SW~AE6300-SW	Fixed Type	179
	Drawout Type	245


### Vertical terminal adapter

#### AE630-SW~AE1600-SW

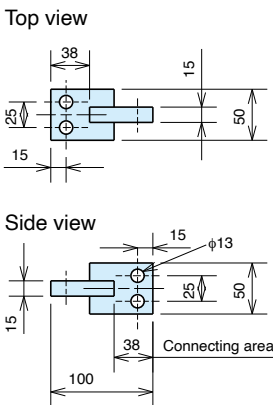


Dimensions		(mm)
Type	T	
AE2000-SW, AE2500-SW	20	
AE3200-SW	25	

#### AE2000-SW~AE3200-SW

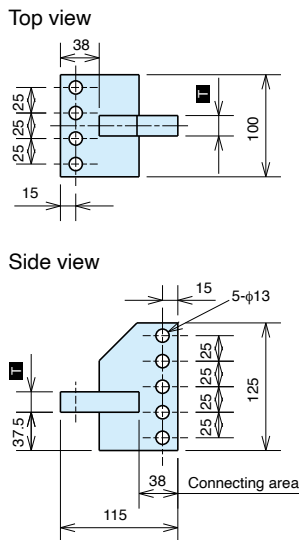


### Front terminal adapter

#### AE630-SW~AE1600-SW

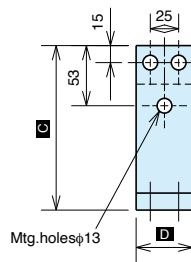

#### AE2000-SW~AE3200-SW

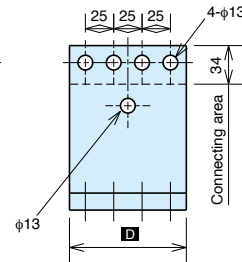


Dimensions		(mm)			
Type		C	D	T	
AE630-SW~AE1600-SW	Fixed type	Up side	258.5	50	15
		Down side	145	50	15
	Drawout type		145	50	15
AE2000-SW, AE2500-SW	Fixed type	Up side	258.5	95	20
		Down side	145	95	20
	Drawout type		145	95	20
AE3200-SW	Fixed type	Up side	258.5	95	25
		Down side	145	95	25
	Drawout type		145	103	25

### Back panel cut-out dimensions


Panel cut dimensions for separating the busbar compartment and the breaker compartment. (mm)

AE630-SW~AE1600-SW, AE2000-SW~AE3200-SW, AE2000-SWA, AE4000-SWA

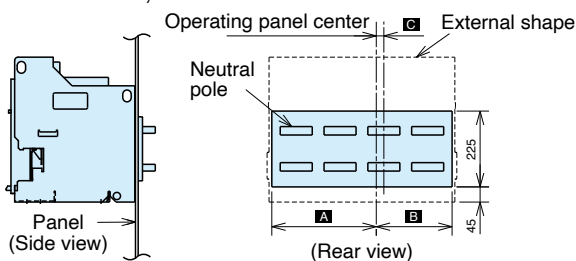

Dimensions*		(mm)		
Type	Pole	Dimensions table		
		A	B	C
AE630-SW~AE1600-SW	3	135	135	0
AE2000-SWA	4	220	135	0
AE2000-SW~AE3200-SW	3	180	225	23
AE4000-SWA	4	310	225	23

AE4000-SW~AE6300-SW

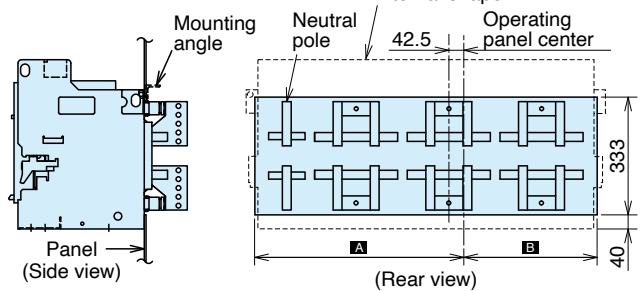

Dimensions*		(mm)	
Type	Pole	Dimensions table	
		A	B
AE4000-SW~AE6300-SW	3	462	377
	4 (HN)	592	377

\* For vertical terminal, the terminal portion will protrude beyond the panel cut dimensions; please accommodate this by splitting and joining panels or by other suitable methods.  
\* For front terminal, the panel cut dimensions are different; please contact us for details.


# Neutral CT (NCT), External ZCT

## Neutral CT (NCT)

630~2000A

2500~4000A


5000, 6300A

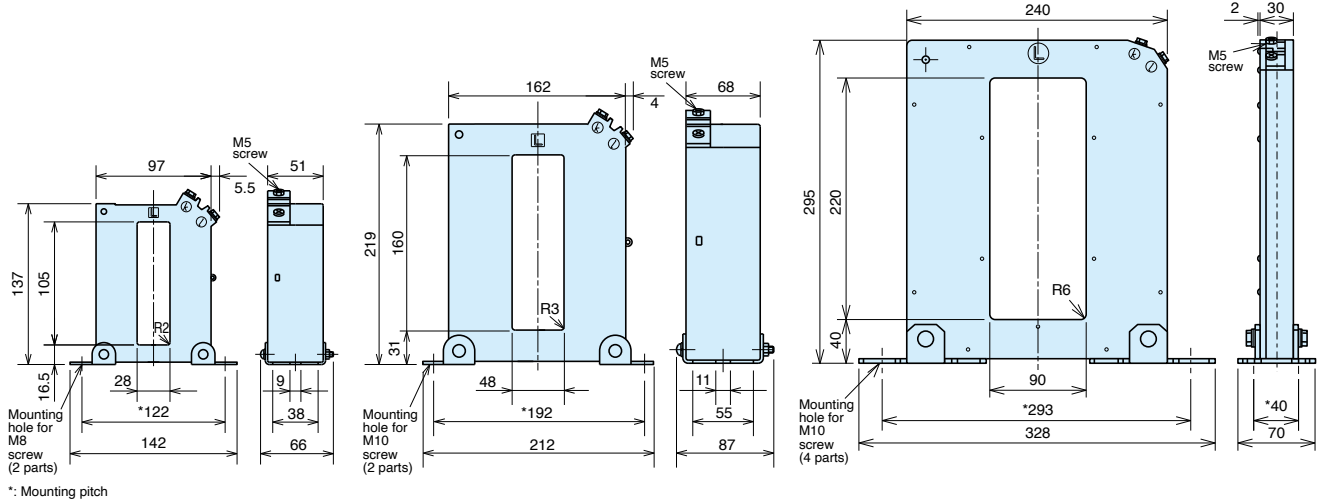

∗: Mounting pitch

## External ZCT for transformer ground wire


## External ZCT for load circuits

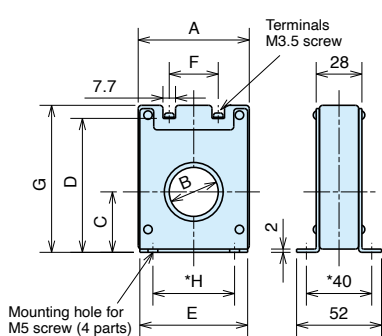

Mounting hole for M5 screw (4 parts)


∗: Mounting pitch

Dimensions	(mm)							
	A	B	C	D	E	F	G	H
ZT15B	48	15	29	62	46	15	70	25
ZT30B	68	30	37	82	66	30	90	50
ZT40B	85	40	43	92	81	40	100	50

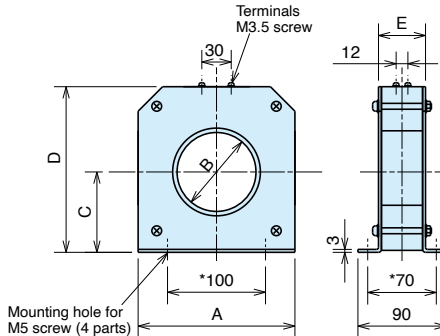

Mounting hole for M5 screw (4 parts)

Dimensions	(mm)				
	A	B	C	D	E
ZT60B	140	60	73	150	46
ZT80B	160	80	82	169	48
ZT100B	185	100	93	190	50

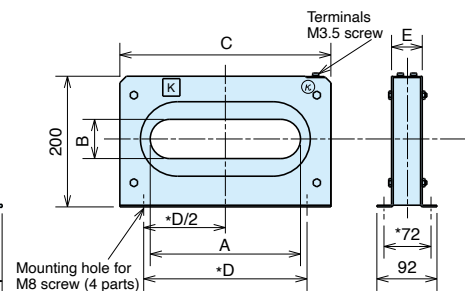

Mounting hole for M8 screw (4 parts)


∗: Mounting pitch

Dimensions	(mm)				
	A	B	C	D	E
ZCT163	230	60	323	250	47
ZCT323	370	108	460	400	47
ZCT324	500	108	600	550	48


## ZCT with primary conductors

ZTA1200A (1200A)

ZTA2000A (2000A)

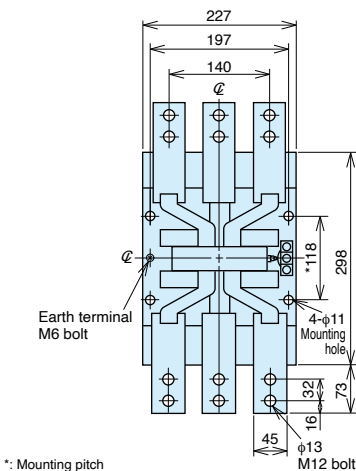


∗: Mounting pitch

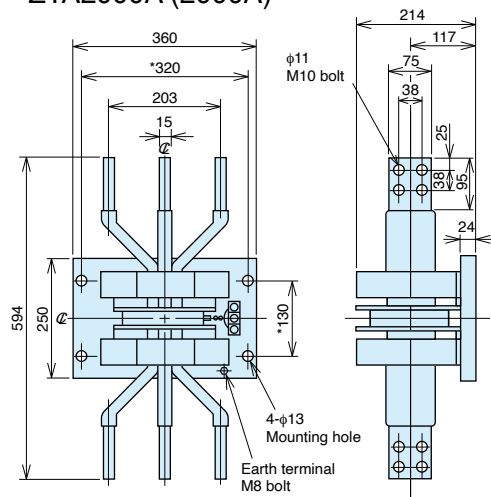

# Outline dimensions

## Terminal cover


### Terminal cover (TTC)

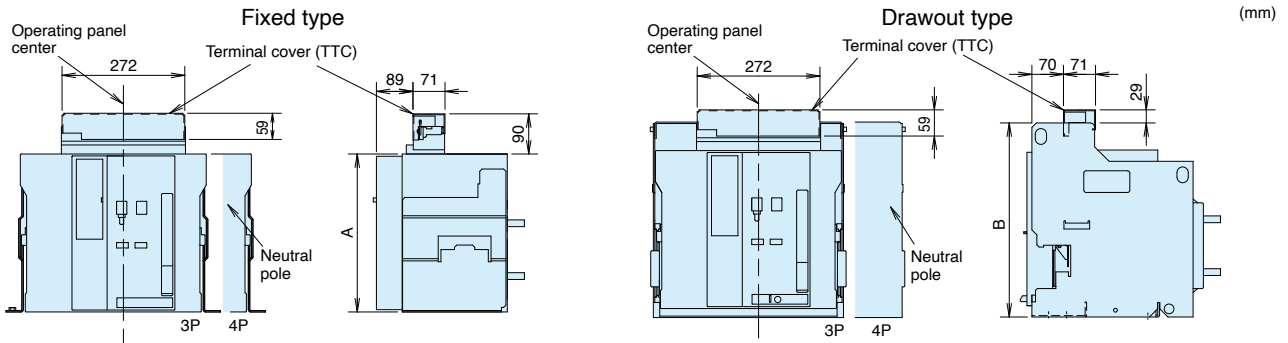

Dimensions		(mm)	
Type		A	B
AE630-SW~AE3200-SW, AE2000-SWA, AE4000-SWA		350	430
AE4000-SW~AE6300-SW		354	480


## UVT external unit

### UVT external unit (380 ~ 460V AC)

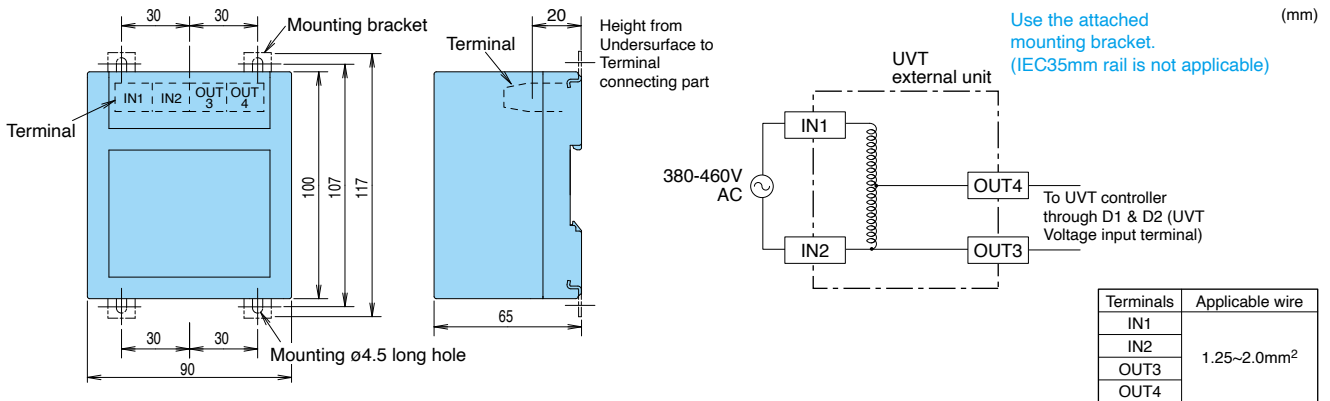


## ETR external units

### Display onto panel board (DP2)

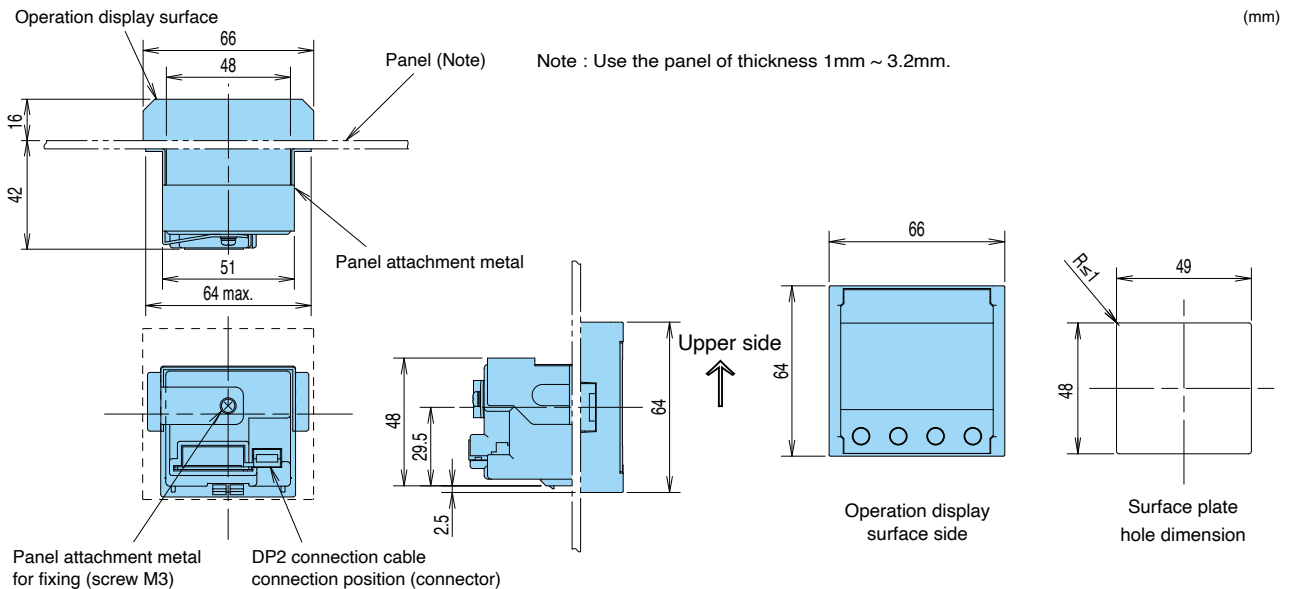



## MODBUS interface unit (BIF-MD)

### Outline dimensions

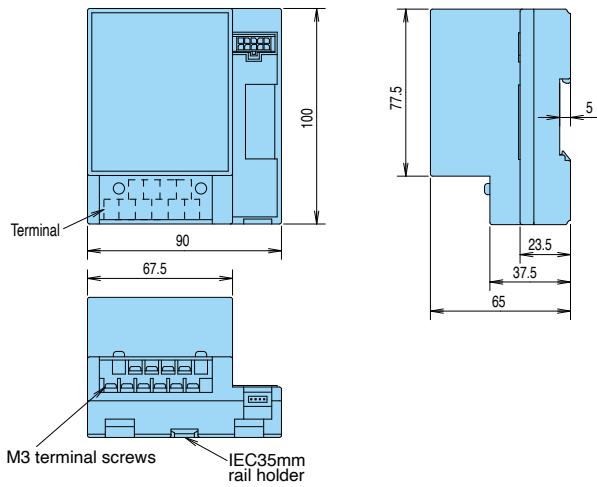

### Installation dimensions


(mm)

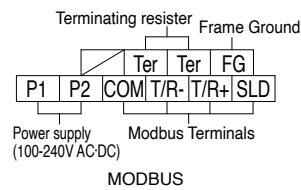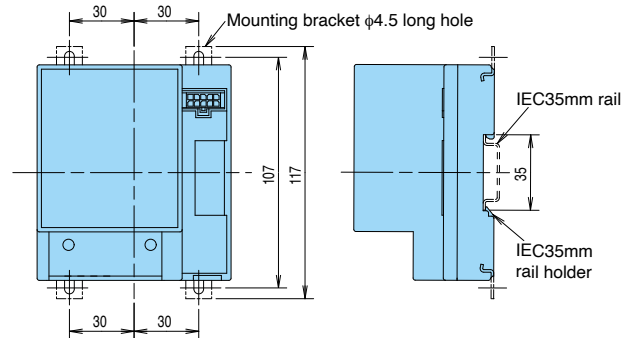

The available crimp-type terminal is the same as I/O unit(BIF-CON).


## I/O unit (BIF-CON)

### Outline dimensions

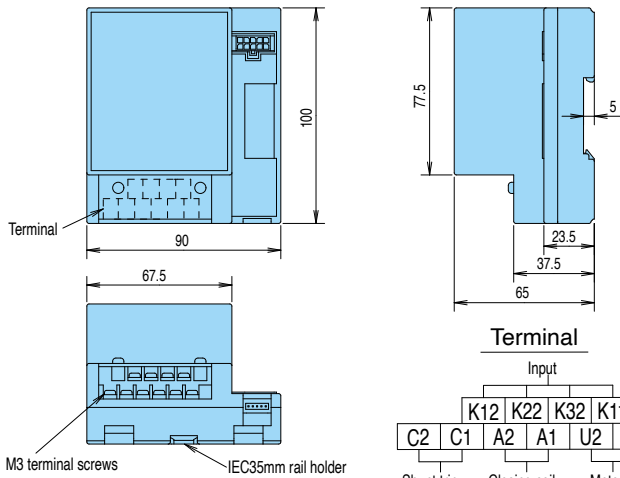


### Installation dimensions


(mm)

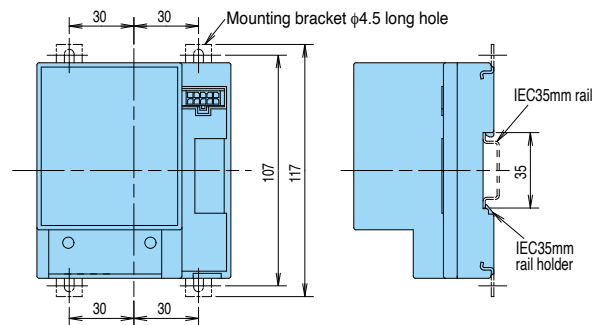

### Terminal

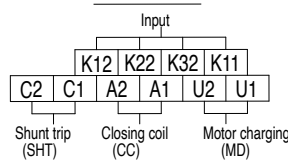


### Crimp-type terminal



These terminals should be connected with wire using crimp-type terminal. The available crimp-type terminal is shown in figure 3.4.


## VT unit (VT)

### Outline dimensions

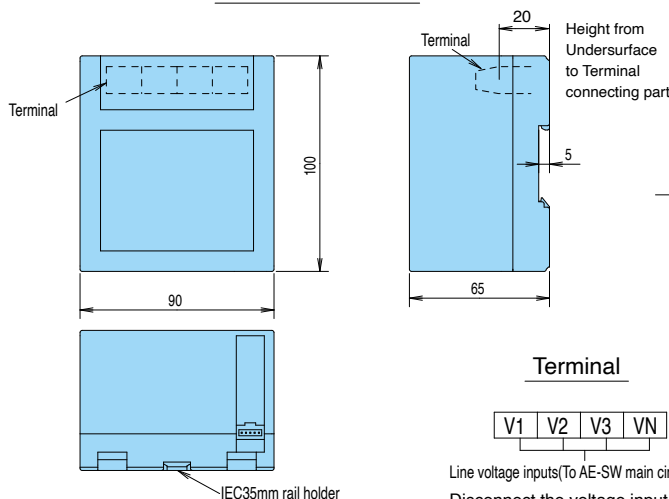


### Installation dimensions

(mm)

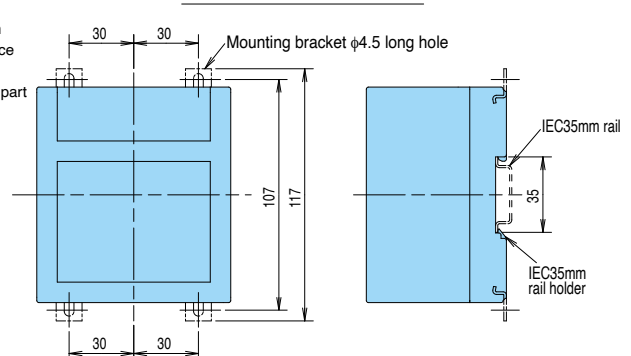

### Terminal



Line voltage inputs (To AE-SW main circuit)  
Disconnect the voltage input wires during dielectric testing of main circuit.

### Connecting wire

Terminals	Recommended wire	
	single core	Twisted core
V1, V2, V3, VN	0.2-6.0mm <sup>2</sup>	0.2-4.0mm <sup>2</sup> (AWG24-10)

Tool: Minus head screw driver  
(Bit size Thickness 0.6mm, Width 3.5mm)

## Pre-cautions when making connections


Use M12 screws (made of copper), spring washers, and small washers to connect to the conductors. Clean the contact surface and securely tighten the screws with a appropriate torque. The connecting area on main circuit terminal of breaker is different depending on the shape of the breaker's terminal. Refer to the outline dimensions of P.47 to P.57.





Appropriate tightening torque

Screw size	Tightening torque(N·m)
M12	45±5

Please secure insulation distances between the conductors basing on the standard for switchgear assemblies like IEC 61439.

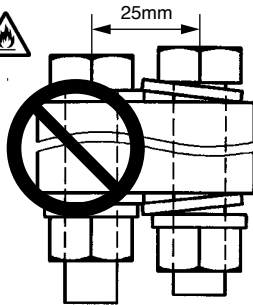

Please use small washer in order that washers don't overlap with each other.

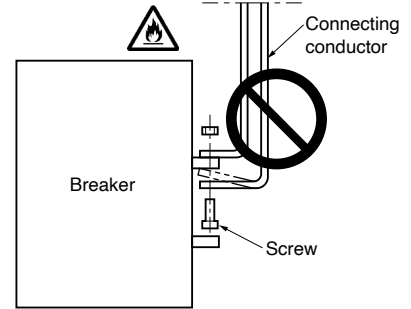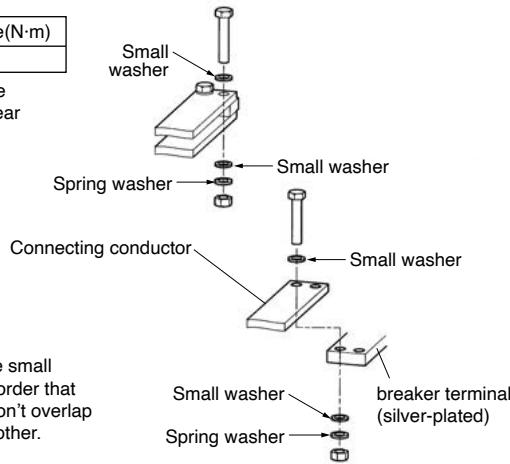


Please tighten screws after checking breaker's terminal and connecting conductor certainly contact with each other. Make sure the conductor doesn't apply the force to breaker's terminal in any direction.

Since fault current flowing through the conductors causes large electromagnetic forces, the conductors should be secured firmly, using the values in the below table as a reference. Max. distance between fixing support and breaker bus bar should be less than 200mm.

Electromagnetic force in N per 1m conductor (in the case of three phase short circuit)

(N)

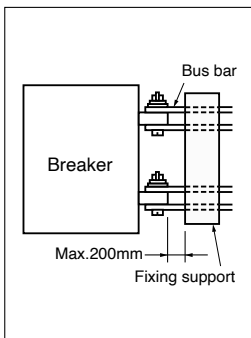


Type	AE630-SW~ AE1600-SW	AE2000-SWA		AE2000-SW~ AE3200-SW	AE4000-SWA				AE4000-SW~ AE6300-SW
		3-Pole	4-Pole		Drawout type		Fixed type		
					3-Pole	4-Pole	3-Pole	4-Pole	
Conductor distance(mm)	85	115	105	130	190	170	152	145	262
Prospective fault current kA(pf)	85	115	105	130	190	170	152	145	262
30(0.2)	7700	5700	6300	5100	3500	3900	4300	4500	2500
42(0.2)	15100	11200	12200	9900	6800	7600	8500	8900	5000
50(0.2)	21400	15800	17300	14000	9600	10700	12000	12600	7000
65(0.2)	36100	26700	29300	23600	16200	18100	20200	21200	11800
75(0.2)	-	-	-	31500	21500	24100	26900	28200	15800
85(0.2)	-	-	-	40400	27600	30900	34500	36200	20000
100(0.2)	-	-	-	55800	38200	42700	47800	50100	27800
130(0.2)	-	-	-	-	-	-	-	-	47000

When selecting conductors to be connected to AE breakers, ensure that they have a sufficient current capacity. Refer to the right table.

Conductor Size(IEC 60947-1; Ambient Temp. 40°C , Open air)

Rated current Max.(A)	Connecting conductors(copper bus bar)		
	Quantity	Conductor size(mm)	Arrangement
630	2	40 x 5	With long surface vertical
1000	2	60 x 5	
1250	2	80 x 5	
1600	2	100 x 5	
2000	3	100 x 5	
2500	4	100 x 5	
3150(3200)*1	3	100 x 10	
	2	150 x 10	
4000 (AE4000-SWA) Drawout type	4	150 x 10	
4000 (AE4000-SWA) Fixed type	3	150 x 10	
4000 (AE4000-SW)	4	100 x 10	
5000	4	150 x 10	
6300	4	200 x 10	

The left table shows the suitable connecting conductor size based on IEC 60947-1, which is assured from the test under Ambient temp. 40°C, Open air and testing configuration as shown in the following drawing.

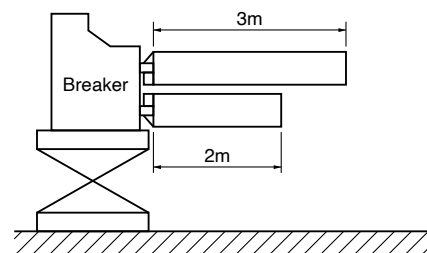


\*1 The temperature rise of rated current 3200A conforms to the requirement of IEC 60947-1 for the connecting conductor size of a rated current 3150A. In case of more than 3200A, conductor sizes are not defined in IEC 60947-1. (Specification by the manufacturer)

## Insulation distance

When a short-circuit current is interrupted, discharged hot gas blows out from the exhaust port of the arc extinguishing chamber, so provide a clearance as shown in the following table by “B”.

Note1: On the fixed type, maintenance is possible with following clearance.

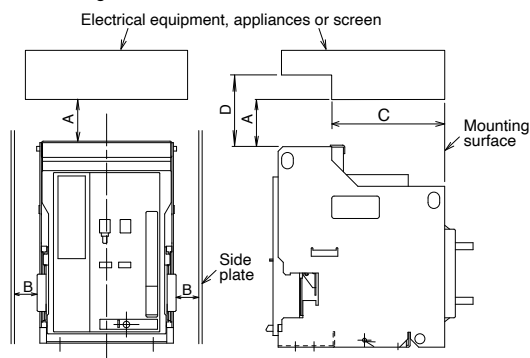

Dimensions		(mm)		
Type		AE630-SW~AE3200-SW AE2000-SWA AE4000-SWA	AE4000-SW~ AE6300-SW	
Applicable voltage		600V AC or less	660V AC, 690V AC	690V AC or less
Fixed type	A	(Note 1) 0	(Note 1) 100	(Note 1) 200
	B	(Note 3) 50	(Note 3) 50	(Note 3) 50
	C	162	162	-
	D	(Note 2) 50	(Note 2) 50	200
Drawout type	A	0	100	200
	B	(Note 3) 50	(Note 3) 50	(Note 3) 50
	C	240	240	-
	D	(Note 2) 50	(Note 2) 50	(Note 2) 200

Note1 : 300mm or more clearance is necessary to inspect the arc-extinguishing chamber and contacts.  
 Note2 : The wiring space required for the control terminal block.  
 Note3 : When using mechanical interlock, door interlock, etc., dimension B becomes larger.

## Service conditions

### 1. Service condition

1. Ambient temperature:
  - 25°C to +70°C (ETR: -20°C to +70°C)
  - (standard ambient temperature: +40°C)
  - ① Standard operation environment:
    - Ambient temperature: -5°C to +40°C
    - And the average over 24 hours must not exceed +35°C.
  - In the operation environments listed for ① above, use the product with the periodic maintenance and inspection described in the instruction manual.
2. Storage temperature: -40°C to +70°C
  - And the average over 24 hours must be within the range of -20°C to +35°C.
  - Before using the product, perform the initial inspection described in the instruction manual.
3. Altitude
  - 2,000m (6,600 feet) or less
4. Environmental conditions
  - ① The air must be clean, and the relative humidity must be 85% or less at max. temp. +40°C. Do not use and store in atmospheres with sulfide gas and ammonia gas etc. ( $H_2S \leq 0.01ppm$ ,  $SO_2 \leq 0.05ppm$ ,  $NH_3 \leq 0.25ppm$ .)
  - ② AE-SW has undergone the following tests. (Except for AE4000-SW ~ AE6300-SW)
    - IEC 60068-2-1: Cold test at -25°C (usage) /-40°C (storage)
    - IEC 60068-2-2: Dry Heat test at +70°C
    - IEC 60068-2-30: Dump heat, cyclic test (+55°C and 95%RH)
    - IEC 60068-2-52: Salt mist, cyclic test/level 2
  - ③ Vibration (Except for AE4000-SW ~ AE6300-SW)
    - AE-SW has undergone the following vibration test.
    - IEC 60068-2-6: 5Hz to 13.2Hz, amplitude of  $\pm 1mm$ , 13.2Hz to 100Hz,  $\pm 0.7g$
5. Installation conditions
  - When installing the AE Series air circuit breaker, refer to the installation instructions in the catalogue and instruction manual.
6. Guideline for replacement
  - Within approx. 15 years. Please refer to the instruction manual.
7. Service period for spare parts:
  - Five years after discontinuation of production. Equipment that has exceeded its useful life (as a guideline for replacement) should be renewed. For discontinued models for which the supply of replacement parts has ended, parts cannot be replaced even if an abnormality is found in the internal parts or accessories during inspection or maintenance.

### 2. Special service conditions

In case of special service condition, service life may become shorter in some cases.

1. Special environmental conditions
  - High/Low temperature and/or corrosive gas
2. High/Low ambient temperature
  - If the ambient temperature exceeds +40°C, the uninterrupted current rating will be reduced. Since the derating value is different depending on the applicable standard, refer to P64.
  - ① Special operation environment:
    - Ambient temperature: +40°C to +60°C (AE4000-SW, AE5000-SW, AE6300-SW)
    - And the average over 24 hours must not exceed +35°C.
  - ② Special operation environment:
    - Ambient temperature: -25°C to -5°C (lower than -5°C), +50°C to +70°C (AE630-SW to AE3200-SW, AE2000-SWA, AE4000-SWA)
  - However, the average temperature over 24 hours must be within the range of 0°C to +35°C (over 0°C).
  - In the operation environments listed for ① and ② above, use the product with the periodic maintenance and inspection described in the instruction manual. Contact us to use the product in the special ambient temperature for ②.
3. High altitude
  - ① Standard operation environment: 2000m or less
  - ② Since the heat radiation rate is reduced for use at the 2,000m or higher, accordingly the operating voltage, continuous current capacity and breaking capacity are derated. Moreover the insulation durability is also decreased owing to the atmospheric pressure.

Corrections to rated voltage and rated current at high altitudes

Altitude	Rated current	Rated voltage
3000m	0.98	0.91
4000m	0.96	0.82
5000m	0.94	0.73

## Precautions for mounting


### ● Standard tightening torque

Screw size	Tightening torque (N·m)
M12	45±5

### ● Earth terminal

Unless there are any special circumstances, connect the earth terminal to the ground.

### ● Mounting direction

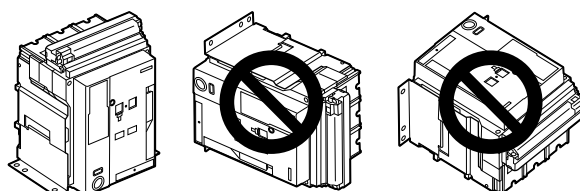

# Technical information

## Internal resistance, reactance and power consumption (per pole)

Type	Connection	Internal resistance (mΩ)	Reactance (mΩ)	Power consumption (W)
AE630-SW	Fixed type	0.020	0.099	8
	Drawout type	0.031	0.147	12
AE1000-SW	Fixed type	0.020	0.095	20
	Drawout type	0.031	0.136	31
AE1250-SW	Fixed type	0.020	0.088	31
	Drawout type	0.031	0.135	48
AE1600-SW	Fixed type	0.020	0.099	51
	Drawout type	0.031	0.129	79
AE2000-SWA	Fixed type	0.020	0.120	80
	Drawout type	0.030	0.161	120
AE2000-SW	Fixed type	0.010	0.076	40
	Drawout type	0.018	0.122	72
AE2500-SW	Fixed type	0.010	0.084	63
	Drawout type	0.018	0.128	113
AE3200-SW	Fixed type	0.009	0.068	92
	Drawout type	0.015	0.096	154
AE4000-SWA	Fixed type	0.011	0.111	176
	Drawout type	0.015	0.106	240
AE4000-SW	Fixed type	0.009	0.070	144
	Drawout type	0.011	0.084	176
AE5000-SW	Fixed type	0.009	0.061	225
	Drawout type	0.011	0.081	275
AE6300-SW	Fixed type	0.008	0.059	318
	Drawout type	0.009	0.080	357

(Note) The above values are applicable for one pole.

The above values are measured values and can be used only for reference.

## Deratings by ambient temperature

### Deratings of Max. rated current by ambient temperature (at brandnew product in vertical connection)

(A)

Standard	Ambient Temperature	AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA	AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA	AE4000-SW	AE5000-SW	AE6300-SW
JIS C 8201-2-1 Ann1 Ann2 IEC 60947-2 (Standard 40°C) NK, LR, DNV GL, BV, ABS, CCS (Standard 45°C)	40°C	630	1000	1250	1600	2000	2000	2500	3200	4000	4000	5000	6300
	45°C	630	1000	1250	1600	2000	2000	2500	3200	4000	4000	5000	6300
	50°C	630	1000	1250	1600	1900	2000	2500	3200	4000	4000	5000	5750
	55°C	630	1000	1250	1550	1800	2000	2450	3000	3800	3900	5000	5500
	60°C	630	1000	1200	1500	1700	2000	2350	2900	3600	3750	4750	5200

### Deratings of Max. rated current by ambient temperature (at brandnew product in horizontal connection)

(A)

Standard	Ambient Temperature	AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SW	AE2500-SW	AE3200-SW
JIS C 8201-2-1 Ann1 Ann2 IEC 60947-2 (Standard 40°C) NK, LR, DNV GL, BV, ABS, CCS (Standard 45°C)	40°C	630	1000	1220	1400	1990	2140	2460
	45°C	630	1000	1160	1340	1900	2040	2350
	50°C	630	1000	1100	1280	1800	1940	2230
	55°C	630	1000	1030	1210	1700	1830	2110
	60°C	630	940	970	1140	1590	1720	1980

### Maximum flowing current with ambient temperature of 65°C and 70°C (horizontal connection/vertical connection)

(A)

Standard	Ambient Temperature	AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA	AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA
IEC 60947-2	65°C	530	880	900	900	1300	1450	1600	1850	2700
	70°C	370	750	800	800	1000	1200	1450	1690	2200

\* AE2000-SWA and AE4000-SWA can only be connected vertically.

### Deratings of Max. rated current by ambient temperature with Extension module, Display and Network (at brandnew product in vertical connection)

(A)

Standard	Ambient Temperature	AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA	AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA	AE4000-SW	AE5000-SW	AE6300-SW
JIS C 8201-2-1 Ann1 Ann2 IEC 60947-2 (Standard 40°C) NK, LR, DNV GL, BV, ABS, CCS (Standard 45°C)	40°C	630	1000	1250	1600	2000	2000	2500	3200	4000	4000	5000	6300
	45°C	630	1000	1250	1600	1900	2000	2500	3200	3800	4000	5000	5750
	50°C	630	1000	1250	1440	1700	2000	2500	2880	3600	3750	4750	5200
	55°C	-	-	-	-	-	-	-	-	-	-	-	-
	60°C	-	-	-	-	-	-	-	-	-	-	-	-

\* The above table shows the maximum rated current per each ambient temperature for both drawout type breaker and fixed type (at brandnew product), when breaker and bus bar are installed in open air.

\* Connection bus bar is according to IEC60947-1. For AE3200-SW, AE4000-SWA, AE4000-SW, AE5000-SW and AE6300-SW, it is required to follow the manufacturer recommended size shown in Page 61.

\* The values mentioned in the table above are calculated basing on the experiment result of JIS C 8201-2 and IEC 60947-2. So, the real values could be different due to configuration within the panel. Therefore, please make sure to confirm the real values basing on assembly's standard like IEC 61439.

\* Necessary to adjust the derating of Max. current taking into account the influences like a fever from other components inside the panel, the heats from conductors and air flows within the panel.

# Technical information

## Discrimination table

AE-SW Series air circuit breakers provide easy selective co-ordination with branch circuit breakers. For selective co-ordinations, refer to the following table.

230VAC (IEC 60947-2)

sym.kA

Branch breaker	Main breaker Icu(kA)	Low-voltage air circuit breaker AE-SW									
		AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA	AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA	
		65	65	65	65	65	85	85	85	85	
NF I S · L · H · NV I S · H	NF32-SV	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	
	NV32-SV	10	9(10)	10	10	10	10	10	10	10	
	NF63-SV NV63-SV	15	9(10)	15	15	15	15	15	15	15	
	NF63-HV NV63-HV	25	9(25)	25	25	25	25	25	25	25	
	NF125-SV NV125-SV	50	9(50)	45(50)	50	50	50	50	50	50	
	NF125-SEV NV125-SEV	85	9(65)	45(65)	50(65)	50(65)	50(65)	85	85	85	85
	NF125-SGV	85	16(65)	45(65)	65	65	65	85	85	85	85
	NF125-LGV	90	16(65)	45(65)	65	65	65	85	85	85	85
	NF125-HV NV125-HV	100	9(65)	50(65)	65	65	65	85	85	85	85
	NF125-HGV	100	16(65)	45(65)	65	65	65	85	85	85	85
	NF160-SGV	85	9.4(65)	25(65)	40(65)	65	65	85	85	85	85
	NF160-LGV	90	9.4(65)	25(65)	40(65)	65	65	85	85	85	85
	NF160-HGV	100	9.4(65)	25(65)	40(65)	65	65	85	85	85	85
	NF250-SV NF250-SEV NV250-SV NV250-SEV	85	9(65)	20(65)	22(65)	42(65)	42(65)	50(85)	85	85	85
	NF250-SGV	85	9.4(65)	25(65)	40(65)	65	65	85	85	85	85
	NF250-LGV	90	9.4(65)	25(65)	40(65)	65	65	85	85	85	85
	NF250-HV NF250-HEV NV250-HV NV250-HEV	100	9(65)	25(65)	40(65)	65	65	85	85	85	85
	NF250-HGV	100	9.4(65)	25(65)	40(65)	65	65	85	85	85	85
	NF400-SW NV400-SW	85	-	-	20(65)	30(65)	30(65)	48(75)	70(75)	85	85
	NF400-SEW NV400-SEW	85	9(65)	15(65)	20(65)	30(65)	30(65)	48(75)	70(75)	85	85
NF400-HEW NV400-HEW	100	9(65)	15(65)	20(65)	30(65)	30(65)	48(75)	70(75)	85	85	
NF400-REW	150	9(65)	15(65)	20(65)	30(65)	30(65)	48(75)	70(75)	85	85	
NF630-SW NF630-SEW NV630-SW NV630-SEW	85	-	-	-	24(65)	24(65)	30(75)	40(75)	60(75)	60(75)	
NF630-HEW NV630-HEW	100	-	15(65)	18(65)	24(65)	24(65)	30(75)	40(75)	60(75)	60(75)	
NF800-SEW NV800-SEW	85	-	-	18(65)	24(65)	24(65)	30(75)	40(75)	60(75)	60(75)	
NF800-HEW NV800-HEW	100	-	-	18(65)	24(65)	24(65)	30(75)	40(75)	60(75)	60(75)	
NF I C · NV I C	NF63-CV NV63-CV	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	
	NF125-CV NV125-CV	30	9(30)	15(30)	18(30)	24(30)	24(30)	30	30	30	
	NF250-CV NV250-CV	36	9(36)	15(36)	18(36)	24(36)	24(36)	36	36	36	
	NF400-CW NV400-CW	50	-	15(50)	20(50)	27(50)	27(50)	42(50)	50	50	50
	NF630-CW NV630-CW	50	-	-	-	24(50)	24(50)	30(50)	40(50)	50	50
	NF800-CEW	50	-	-	18(50)	24(50)	24(50)	30(50)	40(50)	50	50
NF I R · U	NF125-RGV	150	65	65	65	65	85	85	85	85	
	NF125-UV	200	65	65	65	65	85	85	85	85	
	NF250-RGV	150	9(65)	65	65	65	85	85	85	85	
	NF250-UV	200	9(65)	65	65	65	85	85	85	85	
	NF400-UW	200	9(65)	15(65)	18(65)	29(65)	29(65)	48(75)	85	85	85
	NF800-UW	200	-	-	18(65)	24(65)	24(65)	30(75)	37(75)	68(75)	68(75)

Notes \*1 The values in the table represent the max. rated current for both Series AE-SW air circuit breakers and branch breakers, and the selective co-ordination applies when the air circuit breakers instantaneous pick up is set to maximum.

\*2 The numerals shown in parentheses are for AE-SW with MCR. (When set MCR.)

**440VAC (IEC 60947-2)**

sym.kA

Branch breaker	Main breaker Icu(kA)	Low-voltage air circuit breaker AE-SW									
		AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA	AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA	
		65	65	65	65	65	85	85	85	85	
NF I S · L · H · NV I S · H	NF32-SV	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	
	NV32-SV	5	5	5	5	5	5	5	5	5	
	NF63-SV NV63-SV	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	
	NF63-HV NV63-HV	10	9(10)	10	10	10	10	10	10	10	
	NF125-SV NV125-SV	25	7(25)	20(25)	25	25	25	25	25	25	
	NF125-SEV NV125-SEV	36	7(36)	20(36)	25(36)	30(36)	36	36	36	36	
	NF125-SGV	36	9(36)	20(36)	36	36	36	36	36	36	
	NF125-LGV	50	9(50)	20(50)	36(50)	50	50	50	50	50	
	NF125-HV NV125-HV	50	9(50)	30(50)	50	50	50	50	50	50	
	NF125-HGV	65	9(65)	20(65)	36(65)	65	65	65	65	65	
	NF160-SGV	36	9(36)	15(36)	25(36)	36	36	36	36	36	
	NF160-LGV	50	9(50)	15(50)	25(50)	42(50)	42(50)	50	50	50	
	NF160-HGV	65	9(65)	15(65)	25(65)	42(65)	42(65)	65	65	65	
	NF250-SV NF250-SEV NV250-SV NV250-SEV	36	7(36)	14(36)	19(36)	25(36)	25(36)	36	36	36	
	NF250-SGV	36	7(36)	15(36)	25(36)	36	36	36	36	36	
	NF250-LGV	50	7(50)	15(50)	25(50)	42(50)	42(50)	50	50	50	
	NF250-HV NF250-HEV NV250-HV NV250-HEV	65	7(65)	15(65)	25(65)	42(65)	42(65)	65	65	65	
	NF250-HGV	65	7(65)	15(65)	25(65)	42(65)	42(65)	65	65	65	
	NF400-SW NV400-SW	42	-	-	18(42)	24(42)	24(42)	33(42)	42	42	42
	NF400-SEW NV400-SEW	42	9(42)	15(42)	18(42)	24(42)	24(42)	30(42)	39(42)	42	42
NF400-HEW NV400-HEW	65	9(65)	15(65)	18(65)	24(65)	24(65)	30(65)	39(65)	65	65	
NF400-REW	125	9(65)	15(65)	18(65)	24(65)	24(65)	30(75)	39(75)	80	80	
NF630-SW NF630-SEW NV630-SW NV630-SEW	42	-	-	-	24(42)	24(42)	30(42)	37(42)	42	42	
NF630-HEW NV630-HEW	65	-	15(65)	18(65)	24(65)	24(65)	30(65)	37(65)	48(65)	48(65)	
NF800-SEW NV800-SEW	42	-	-	18(42)	24(42)	24(42)	30(42)	37(42)	42	42	
NF800-HEW NV800-HEW	65	-	-	18(65)	24(65)	24(65)	30(65)	37(65)	48(65)	48(65)	
NF I C · NV I C	NF63-CV NV63-CV	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	
	NF125-CV NV125-CV	10	9(10)	10	10	10	10	10	10	10	
	NF250-CV NV250-CV	15	9(15)	15	15	15	15	15	15	15	
	NF400-CW NV400-CW	25	-	15(25)	18(25)	25	25	25	25	25	
	NF630-CW NV630-CW	36	-	-	-	24(36)	24(36)	30(42)	36	36	36
	NF800-CEW	36	-	-	18(36)	24(36)	24(36)	30(42)	36	36	36
NF I R · U	NF125-RGV	125	35(65)	65	65	65	85	85	85	85	
	NF125-UV	200	50(65)	65	65	65	85	85	85	85	
	NF250-RGV	125	9(65)	50(65)	65	65	85	85	85	85	
	NF250-UV	200	9(65)	65	65	65	85	85	85	85	
	NF400-UW	200	9(65)	15(65)	18(65)	29(65)	29(65)	48(75)	85	85	85
	NF800-UW	200	-	-	18(65)	24(65)	24(65)	30(75)	37(75)	68(75)	68(75)

Notes \*1 The values in the table represent the max. rated current for both Series AE-SW air circuit breakers and branch breakers, and the selective co-ordination applies when the air circuit breakers instantaneous pick up is set to maximum.  
\*2 The numerals shown in parentheses are for AE-SW with MCR. (When set MCR.)

# Ordering information

## Ordering information for Mitsubishi AE-SW series air circuit breaker (General use---WS Type, Special use---WB Type, Protective coordination use---WF Type)

Customer(name)	Order No.	Number of units	units
Type	AE <u>1600</u> -SW	AE _____ -SWA	
Number of poles	<input checked="" type="checkbox"/> 3P AE630-SW~ AE4000-SWA	<input type="checkbox"/> 4P AE4000-SW~ AE6300-SW	<input type="checkbox"/> 3P <input type="checkbox"/> 4P HN Note14 <input type="checkbox"/> 4P FN Note14
Current setting I <sub>r</sub>	<u>1600</u> A	CT rating _____ A Note1	
Applicable standard	<input checked="" type="checkbox"/> IEC 60947-2	<input type="checkbox"/> CCC	
Ambient temperature	<input checked="" type="checkbox"/> 40°C(Standard)	<input type="checkbox"/> Others _____ °C Note2	
Connection	<input type="checkbox"/> Fixed type Note3	<input checked="" type="checkbox"/> Drawout type Note3	
Main circuit terminal	<input type="checkbox"/> Horizontal terminal(FIX) (AE630-SW~AE1600-SW/AE2000-SW~AE3200-SW) <input type="checkbox"/> Vertical terminal(FIX-VT) (AE2000-SWA / AE4000-SWA AE4000-SW~AE6300-SW)	<input checked="" type="checkbox"/> Horizontal terminal(DR) <input type="checkbox"/> Vertical terminal(DR-VT) AE2000-SWA / AE4000-SWA AE4000-SW~AE6300-SW <input type="checkbox"/> Front terminal(DR-FT) Note4	<b>Drawout type accessories</b> <input checked="" type="checkbox"/> Cell switch(CL- <u>4</u> : 1 or 2 or 3 or 4) Note5 <input type="checkbox"/> Shorting b-contact(SBC- _____ : 1 or 2 or 3 or 4 or 5) <input type="checkbox"/> Lifting hooks(HP) <input checked="" type="checkbox"/> Safety shutter(SST) <input checked="" type="checkbox"/> Shutter lock(SST-LOCK) <input type="checkbox"/> Mis-insertion preventer(MIP) <input type="checkbox"/> Test jumper(TJ) Note18 <input type="checkbox"/> Vertical terminal adapter(VTA) Can be connected to the Horizontal terminals. <input type="checkbox"/> Front terminal adapter(FTA) Can be connected to the Horizontal terminals. <input type="checkbox"/> Upper side : Vertical Lower side : Horizontal (DR-VH) <input type="checkbox"/> Upper side : Horizontal Lower side : Vertical (DR-HV) Note19

Electronic trip relay(ETR)	Reset type <input checked="" type="checkbox"/> Automatic Reset (Standard) <input type="checkbox"/> Manual Reset (MRE)						
<input checked="" type="checkbox"/> With ETR	Type <u>WS1</u> <u>G1</u> - <u>P1</u>						
<b>Main setting module</b>	<b>Optional setting module</b>						
<table border="1"> <tr> <td>WS1, WB1, WF1</td> <td>AE630-SW~AE1600-SW, AE2000-SW~AE3200-SW, AE4000-SW</td> </tr> <tr> <td>WS2, WB2, WF2</td> <td>AE2000-SWA, AE4000-SWA, AE5000-SW</td> </tr> <tr> <td>WS3, WB3, WF3</td> <td>AE6300-SW</td> </tr> </table> <p>WS : General use WB : INST only WF : Protective coordination use</p>	WS1, WB1, WF1	AE630-SW~AE1600-SW, AE2000-SW~AE3200-SW, AE4000-SW	WS2, WB2, WF2	AE2000-SWA, AE4000-SWA, AE5000-SW	WS3, WB3, WF3	AE6300-SW	<p>G1: Ground fault protection Note6 N5: Neutral pole 50% protection Note7 E1: Earth leakage protection Note8 AP: 2nd Additional Pre-alarm Note16 NA: Without optional setting</p>
WS1, WB1, WF1	AE630-SW~AE1600-SW, AE2000-SW~AE3200-SW, AE4000-SW						
WS2, WB2, WF2	AE2000-SWA, AE4000-SWA, AE5000-SW						
WS3, WB3, WF3	AE6300-SW						
<input type="checkbox"/> BARE without ETR	<b>Power supply</b>						
	<p>P1: 100-240V AC-DC P2: 24-60V DC P3: 100-240V AC / 100-125V DC with output contact P4: 24-60V DC with output contact P5: 100-240V DC with output contact (SSR) <input type="checkbox"/> Neutral CT(NCT) Note8 <input type="checkbox"/> External ZCT ZCT for load circuit ZCT for transformer ground wire ZCT with primary conductors</p>						
	<b>Additional function</b>						
	<input checked="" type="checkbox"/> Extension module(EX1) Network <input checked="" type="checkbox"/> Display(DP1) <input type="checkbox"/> BIF-MD <input type="checkbox"/> Display onto panel board(DP2) <input type="checkbox"/> BIF-CL <input type="checkbox"/> VT unit(VT) <input type="checkbox"/> Extension module(EX2) Note15 <input type="checkbox"/> Display(DP1) <input type="checkbox"/> Display onto panel board(DP2)						
	<b>Wire system (when EX1/EX2 is specified)</b>						
	<input checked="" type="checkbox"/> 3φ3W <input type="checkbox"/> 3φ4W <input checked="" type="checkbox"/> Normal connection : Note12 <input type="checkbox"/> Reverse connection : Note13						

Electrical accessories	<input checked="" type="checkbox"/> Auxiliary switch A and B contacts in the same quantity are used. Max. quantity: 5 each for A and B contacts. <input type="checkbox"/> Standard (AX <u>6</u> : 2 or 4 or 6 or 8 or 10) <input type="checkbox"/> High capacity (HAX _____ : 2 or 4 or 6 or 8 or 10)
	<input checked="" type="checkbox"/> Motor charging (MD) <input checked="" type="checkbox"/> 100-125V AC · DC <input type="checkbox"/> 200-250V AC · DC <input type="checkbox"/> 48V DC Note9
	<input checked="" type="checkbox"/> Closing coil (CC) <input checked="" type="checkbox"/> 100-250V AC · DC <input type="checkbox"/> 24-48V DC
	<input checked="" type="checkbox"/> Shunt trip device (SHT) <input checked="" type="checkbox"/> 100-250V AC · DC <input type="checkbox"/> 380-500V AC <input type="checkbox"/> 24-48V DC
	<input checked="" type="checkbox"/> Under voltage trip device (UVT) Note17 <input checked="" type="checkbox"/> 100-120V AC <input type="checkbox"/> 200-240V AC <input type="checkbox"/> 380-460V AC <input type="checkbox"/> 24V DC <input type="checkbox"/> 48V DC <input type="checkbox"/> 100-110V DC <input type="checkbox"/> 120-125V DC
	Time delay <input checked="" type="checkbox"/> Inst (INST) <input type="checkbox"/> 0.5s (05) <input type="checkbox"/> 3.0s (30) Note: In case of 380-460V AC, the external transformer is attached

Mechanical accessories	<input checked="" type="checkbox"/> Push button cover (BC-L) <input checked="" type="checkbox"/> Counter (CNT) <input type="checkbox"/> Cylinder lock (CYL) <input type="checkbox"/> Door interlock (DI) Note10 <input type="checkbox"/> Terminal cover (TTC) <input checked="" type="checkbox"/> Door frame (DF) <input type="checkbox"/> for 2units (M2) <input type="checkbox"/> Dust cover (DUC) <input type="checkbox"/> monuting pitch (1m) <input checked="" type="checkbox"/> Interphase barrier (BA) Note11 <input type="checkbox"/> monuting pitch (2m) <input type="checkbox"/> Mechanical interlock (MI) <input type="checkbox"/> for 2units (M3) Note10
------------------------	--

- Note 1: For AE630-SW and AE2000-SW Low rating type, please specify CT rating. Refer to Page 13 and Page 24.
- Note 2: There is a case to be derated by ambient temperature. Refer to Page 64. Specify LSP-N1459 for use in an environment with a temperature in the range of -5°C to -25°C or +50°C to +70°C. (lower than -5°C)
- Note 3: As for the terminal for AE2000-SWA, AE4000-SWA and AE4000-SW~AE6300-SW, Vertical terminal type only is available. (FIX-VT or DR-VT)
- Note 4: Refer to Page 15 and Page 47~49.
- Note 5: This setting is available for change by customer later. A preliminary setting of CL at factory shipment is as follows.  
CL1: 1C CL2: 1C1D CL3: 1C1T1D CL4: 2C1T1D
- Note 6: Not available for AE630-SW with CT rating : 250A or 315A or 500A.
- Note 7: Not available for WB1, WB2 and WB3 Main setting module.  
N5 optional setting module is used for 3 phase 4 wires system. (4 Pole breaker or 3 pole breaker with Neutral CT)
- Note 8: Neutral CT is required for Ground fault or Neutral pole protection, when 3 Pole breaker is used for 3 phase 4 wires system.
- Note 9: 48V DC are not available for AE4000-SWA 4P and AE4000-SW~AE6300-SW.
- Note 10: The combined installation of DI and MI3 is not available.
- Note 11: Some module types are not provided BA. Refer to Page19.
- Note 12: Power Supply comes from the top terminals.
- Note 13: Power Supply comes from the bottom terminals.
- Note 14: Current capacity of the neutral poles  
HN: 50% of the rated current  
FN: 100% of the rated current (See page 51, 56 for the outline and dimensions.)
- Note 15: Not available for WF1, WF2 and WF3 Main setting module.
- Note 16: Not available for WB1, WB2 and WB3 Main setting module.
- Note 17: When the ambient temperature is 60 °C, the UVT controller will be installed externally. Please inquire at the time of order.
- Note 18: If a 5 m cable extension is required, please specify when ordering.

Remark
Order Issuer

# Ordering information for Mitsubishi AE-SW series air circuit breaker (General use---WS Type, Special use---WB Type, Protective coordination use---WF Type)

<b>Customer(name)</b>		<b>Order No.</b>		<b>Number of units</b>		<b>units</b>	
<b>Type</b>		AE _____ -SW		AE _____ -SWA			
<b>Number of poles</b>		<input type="checkbox"/> 3P <input type="checkbox"/> 4P <small>AE630-SW~AE4000-SWA</small>		<input type="checkbox"/> 3P <input type="checkbox"/> 4P HN <small>Note14</small> <small>AE4000-SW~AE6300-SW</small>		<input type="checkbox"/> 4P FN <small>Note14</small>	
<b>Current setting I<sub>r</sub></b>		_____ A		<b>CT rating</b>		_____ A <small>Note1</small>	
<b>Applicable standard</b>		<input type="checkbox"/> IEC 60947-2		<input type="checkbox"/> CCC			
<b>Ambient temperature</b>		<input type="checkbox"/> 40°C(Standard)		<input type="checkbox"/> Others _____ °C <small>Note2</small>			
<b>Connection</b>		<input type="checkbox"/> Fixed type <small>Note3</small>		<input type="checkbox"/> Drawout type <small>Note3</small>			
<b>Main circuit terminal</b>		<input type="checkbox"/> Horizontal terminal(FIX) <small>(AE630-SW~AE1600-SW/AE2000-SW~AE3200-SW)</small>		<input type="checkbox"/> Horizontal terminal(DR)			
		<input type="checkbox"/> Vertical terminal(FIX-VT) <small>(AE2000-SWA/AE4000-SWA/AE4000-SW~AE6300-SW)</small>		<input type="checkbox"/> Vertical terminal(DR-VT) <small>AE2000-SWA/AE4000-SWA/AE4000-SW~AE6300-SW</small>			
				<input type="checkbox"/> Front terminal(DR-FT) <small>Note4</small>			

**Drawout type accessories**  
 Cell switch(CL- : 1 or 2 or 3 or 4) Note5  
 Shorting b-contact(SBC- : 1 or 2 or 3 or 4 or 5)  
 Lifting hooks(HP)  
 Safety shutter(SST)  
      Shutter lock(SST-LOCK)  
 Mis-insertion preventer(MIP)  
 Test jumper(TJ) Note18

Vertical terminal adapter(VTA)    Can be connected to the Horizontal terminals.  
 Front terminal adapter(FTA)

Upper side : Vertical    Lower side : Horizontal (DR-VH) Note19  
 Upper side : Horizontal    Lower side : Vertical (DR-HV)

<b>Electronic trip relay(ETR)</b>		<b>Reset type</b>		<input type="checkbox"/> Automatic Reset (Standard)		<input type="checkbox"/> Manual Reset (MRE)	
<input type="checkbox"/> With ETR Type <span style="border: 1px solid black; padding: 2px;">  </span> - <span style="border: 1px solid black; padding: 2px;">  </span>				<b>Additional function</b>		<b>Network</b>	
<b>Main setting module</b> WS1, WB1, WF1    AE630-SW~AE1600-SW, AE2000-SW~AE3200-SW, AE4000-SW WS2, WB2, WF2    AE2000-SWA, AE4000-SWA, AE5000-SW WS3, WB3, WF3    AE6300-SW WS : General use WB : INST only WF : Protective coordination use		<b>Optional setting module</b> G1: Ground fault protection <small>Note6</small> N5: Neutral pole 50% protection <small>Note7</small> E1: Earth leakage protection <small>Note16</small> AP: 2nd Additional Pre-alarm <small>Note16</small> NA: Without optional setting		<b>Power supply</b> P1: 100-240V AC-DC P2: 24-60V DC P3: 100-240V AC / 100-125V DC with output contact P4: 24-60V DC with output contact P5: 100-240V DC with output contact (SSR) <input type="checkbox"/> Neutral CT(NCT) <small>Note8</small> <input type="checkbox"/> External ZCT ZCT for load circuit ZCT for transformer ground wire ZCT with primary conductors		<input type="checkbox"/> Extension module(EX1) <input type="checkbox"/> BIF-MD <input type="checkbox"/> BIF-CON <input type="checkbox"/> Display(DP1) <input type="checkbox"/> BIF-CL <input type="checkbox"/> Display onto panel board(DP2) <input type="checkbox"/> VT unit(VT) <input type="checkbox"/> Extension module(EX2) <small>Note15</small> <input type="checkbox"/> Display(DP1) <input type="checkbox"/> Display onto panel board(DP2)	
<input type="checkbox"/> BARE without ETR				Wire system (when EX1/EX2 is specified) EX1/EX2 <input type="checkbox"/> 3φ3W <input type="checkbox"/> 3φ4W <input type="checkbox"/> Normal connection : <small>Note12</small> <input type="checkbox"/> Reverse connection : <small>Note13</small>			

<b>Electrical accessories</b>	
<input type="checkbox"/> Auxiliary switch    A and B contacts in the same quantity are used. Max. quantity: 5 each for A and B contacts. <input type="checkbox"/> Standard (AX : 2 or 4 or 6 or 8 or 10) <input type="checkbox"/> High capacity (HAX : 2 or 4 or 6 or 8 or 10)	
<input type="checkbox"/> Motor charging (MD) <input type="checkbox"/> 100-125V AC · DC <input type="checkbox"/> 200-250V AC · DC <input type="checkbox"/> 48V DC <small>Note9</small>	
<input type="checkbox"/> Closing coil (CC) <input type="checkbox"/> 100-250V AC · DC <input type="checkbox"/> 24-48V DC	
<input type="checkbox"/> Shunt trip device (SHT) <input type="checkbox"/> 100-250V AC · DC <input type="checkbox"/> 380-500V AC <input type="checkbox"/> 24-48V DC	
<input type="checkbox"/> Under voltage trip device (UVT) <small>Note17</small> <input type="checkbox"/> 100-120V AC <input type="checkbox"/> 200-240V AC <input type="checkbox"/> 380-460V AC    Time delay <input type="checkbox"/> 24V DC <input type="checkbox"/> Inst (INST) <input type="checkbox"/> 48V DC <input type="checkbox"/> 0.5s (05) <input type="checkbox"/> 100-110V DC <input type="checkbox"/> 3.0s (30) <input type="checkbox"/> 120-125V DC <small>Note: In case of 380-460V AC, the external transformer is attached</small>	

<b>Mechanical accessories</b>	
<input type="checkbox"/> Push button cover (BC-L) <input type="checkbox"/> Counter (CNT) <input type="checkbox"/> Cylinder lock (CYL) <input type="checkbox"/> Door interlock (DI) <small>Note10</small> <input type="checkbox"/> Terminal cover (TTC) <input type="checkbox"/> Door frame (DF) <input type="checkbox"/> for 2units (MI2) <input type="checkbox"/> Dust cover (DUC) <input type="checkbox"/> mounting pitch (1m) <input type="checkbox"/> Interphase barrier (BA) <small>Note11</small> <input type="checkbox"/> mounting pitch (2m) <input type="checkbox"/> Mechanical interlock (MI) <input type="checkbox"/> for 2units (MI3) <small>Note10</small>	

- Note 1:** For AE630-SW and AE2000-SW Low rating type, please specify CT rating. Refer to Page 13 and Page 24.
- Note 2:** There is a case to be derated by ambient temperature. Refer to Page 64. Specify LSP-N1459 for use in an environment with a temperature in the range of -5°C to -25°C or +50°C to +70°C. (lower than -5°C)
- Note 3:** As for the terminal for AE2000-SWA, AE4000-SWA and AE4000-SW~AE6300-SW, Vertical terminal type only is available. (FIX-VT or DR-VT)
- Note 4:** Refer to Page 15 and Page 47~49.
- Note 5:** This setting is available for change by customer later. A preliminary setting of CL at factory shipment is as follows.  
 CL1: 1C    CL2: 1C1D    CL3: 1C1T1D    CL4: 2C1T1D
- Note 6:** Not available for AE630-SW with CT rating : 250A or 315A or 500A.
- Note 7:** Not available for WB1, WB2 and WB3 Main setting module.  
 N5 optional setting module is used for 3 phase 4 wires system. (4 Pole breaker or 3 pole breaker with Neutral CT)
- Note 8:** Neutral CT is required for Ground fault or Neutral pole protection, when 3 Pole breaker is used for 3 phase 4 wires system.
- Note 9:** 48V DC are not available for AE4000-SWA 4P and AE4000-SW~AE6300-SW.
- Note 10:** The combined installation of DI and MI3 is not available.
- Note 11:** Some module types are not provided BA. Refer to Page 19.
- Note 12:** Power Supply comes from the top terminals.
- Note 13:** Power Supply comes from the bottom terminals.
- Note 14:** Current capacity of the neutral poles  
 HN: 50% of the rated current  
 FN: 100% of the rated current (See page 51, 56 for the outline and dimensions.)
- Note 15:** Not available for WF1, WF2 and WF3 Main setting module.
- Note 16:** Not available for WB1, WB2 and WB3 Main setting module.
- Note 17:** When the ambient temperature is 60 °C, the UVT controller will be installed externally. Please inquire at the time of order.
- Note 18:** If a 5 m cable extension is required, please specify when ordering.

Remark
Order Issuer

# Ordering information

## Ordering information for Mitsubishi AE-SW series air circuit breaker (Generator protection use---WM Type)

<b>Customer(name)</b>	<b>Order No.</b>	<b>Number of units</b>	<b>units</b>
<b>Type</b>	AE _____ -SW	AE _____ -SWA	
<b>Number of poles</b>	<input type="checkbox"/> 3P AE630-SW~ AE4000-SWA	<input type="checkbox"/> 4P AE4000-SW~ AE6300-SW	<input type="checkbox"/> 3P <input type="checkbox"/> 4P HN <i>Note14</i> <input type="checkbox"/> 4P FN <i>Note14</i>
<b>Current setting I<sub>r</sub></b>	_____ A <i>Note1</i>		
<b>Applicable standard</b>	<input type="checkbox"/> LR <input type="checkbox"/> BV <input type="checkbox"/> DNV GL <input type="checkbox"/> ABS <input type="checkbox"/> CCS <input type="checkbox"/> IEC 60947-2		
<b>Ambient temperature</b>	<input type="checkbox"/> 40°C(Standard) <input type="checkbox"/> Others _____ °C <i>Note2</i>		
<b>Connection</b>	<input type="checkbox"/> Fixed type <i>Note3</i> <input type="checkbox"/> Drawout type <i>Note3</i>		
<b>Main circuit terminal</b>	<input type="checkbox"/> Horizontal terminal(FIX) <small>(AE630-SW~AE1600-SW/AE2000-SW~AE3200-SW)</small>		<input type="checkbox"/> Horizontal terminal(DR)
	<input type="checkbox"/> Vertical terminal(FIX-VT) <small>(AE2000-SWA / AE4000-SWA / AE4000-SW~AE6300-SW)</small>		<input type="checkbox"/> Vertical terminal(DR-VT) <small>AE2000-SWA / AE4000-SWA / AE4000-SW~AE6300-SW</small>
			<input type="checkbox"/> Front terminal(DR-FT) <i>Note4</i>

**Drawout type accessories**

Cell switch(CL-  : 1 or 2 or 3 or 4) *Note5*

Shorting b-contact(SBC-  : 1 or 2 or 3 or 4 or 5)

Lifting hooks(HP)

Safety shutter(SST)

Shutter lock(SST-LOCK)

Mis-insertion preventer(MIP)

Test jumper(TJ) *Note17*

---

Vertical terminal adapter(VTA) Can be connected to the Horizontal terminals.

Front terminal adapter(FTA)

---

Upper side : Vertical Lower side : Horizontal (DR-VH)

Upper side : Horizontal Lower side : Vertical (DR-HV) *Note19*

**Electronic trip relay(ETR)**

With ETR

Type

**Reset type**  Automatic Reset (Standard)  Manual Reset (MRE)

**Main setting module**

WM1	AE630-SW~AE1600-SW, AE2000-SW~AE3200-SW, AE4000-SW
WM2	AE2000-SWA, AE4000-SWA, AE5000-SW
WM3	AE6300-SW

WM : Generator protection use

**Optional setting module**

G1: Ground fault protection *Note6*

N5: Neutral pole 50% protection *Note7*

E1: Earth leakage protection

AP: 2nd Additional Pre-alarm

NA: Without optional setting

**Power supply**

P1: 100-240V AC-DC

P2: 24-60V DC

P3: 100-240V AC / 100-125V DC with output contact

P4: 24-60V DC with output contact

P5: 100-240V DC with output contact (SSR)

Neutral CT(NCT) *Note8*

External ZCT

ZCT for load circuit

ZCT for transformer ground wire

ZCT with primary conductors

**Additional function**

Extension module(EX1)

Display(DP1)

Display onto panel board(DP2)

VT unit(VT)

Extension module(EX2)

Display(DP1)

Display onto panel board(DP2)

**Network**

BIF-MD

BIF-CON

BIF-CL

**Wire system (when EX1/EX2 is specified)**

EX1/EX2  3φ3W

3φ4W

Normal connection : *Note12*

Reverse connection : *Note13*

Specify a setting value, if required.

LTD pick-up current : I<sub>L</sub> \_\_\_\_\_

LTD time : T<sub>L</sub> \_\_\_\_\_

STD pick-up current : I<sub>sd</sub> \_\_\_\_\_

STD time : T<sub>sd</sub> \_\_\_\_\_

INST pick-up current: I<sub>i</sub> \_\_\_\_\_

Pre-alarm current: I<sub>p</sub> \_\_\_\_\_

Others ( \_\_\_\_\_ )

**Electrical accessories**

Auxiliary switch *A and B contacts in the same quantity are used. Max. quantity: 5 each for A and B contacts.*

Standard (AX  : 2 or 4 or 6 or 8 or 10)

High capacity (HAX  : 2 or 4 or 6 or 8 or 10)

Motor charging (MD)

100-125V AC · DC

200-250V AC · DC

48V DC *Note9*

Closing coil (CC)

100-250V AC · DC

24-48V DC

Shunt trip device (SHT)

100-250V AC · DC

380-500V AC

24-48V DC

Under voltage trip device (UVT) *Note16*

100-120V AC

200-240V AC

380-460V AC

24V DC

48V DC

100-110V DC

120-125V DC

**Time delay**

Inst (INST)

0.5s(05)

3.0s(30)

*Note: In case of 380-460V AC, the external transformer is attached*

**Mechanical accessories**

Push button cover (BC-L)

Counter (CNT)

Cylinder lock (CYL)

Door interlock (DI) *Note10*

Terminal cover (TTC)

Door frame (DF)

Dust cover (DUC)

Interphase barrier (BA) *Note11*

Mechanical interlock (MI)

for 2units (MI2)

mounting pitch (1m)

mounting pitch (2m)

for 2units (MI3) *Note10*

- Note1:* Please specify current setting (I<sub>r</sub>) from the specification table. Refer to Page 13 and 14.
- Note2:* There is a case to be derated by ambient temperature. Refer to Page 64. Specify LSP-N1459 for use in an environment with a temperature in the range of -5°C to -25°C or +50°C to +70°C. (lower than -5°C)
- Note3:* As for the terminal for AE2000-SWA, AE4000-SWA and AE4000-SW~AE6300-SW, Vertical terminal type only is available. (FIX-VT or DR-VT)
- Note4:* Refer to Page 15 and Page 47~49.
- Note5:* This setting is available for change by customer later. A preliminary setting of CL at factory shipment is as follows.  
CL1: 1C CL2: 1C1D CL3: 1C1T1D CL4: 2C1T1D
- Note6:* Not available for AE630-SW with CT rating : 250A or 315A or 500A.
- Note7:* N5 optional setting module is used for 3 phase 4 wires system. (4 Pole breaker or 3 pole breaker with Neutral CT)
- Note8:* Neutral CT is required for Ground fault or Neutral pole protection, when 3 Pole breaker is used for 3 phase 4 wires system.
- Note9:* 48V DC are not available for AE4000-SWA 4P and AE4000-SW~AE6300-SW.
- Note10:* The combined installation of DI and MI3 is not available.
- Note11:* Some module types are not provided BA. Refer to Page19.
- Note12:* Power Supply comes from the top terminals.
- Note13:* Power Supply comes from the bottom terminals.
- Note14:* Current capacity of the neutral poles  
HN: 50% of the rated current  
FN: 100% of the rated current (See page 51, 56 for the outline and dimensions.)
- Note15:* AE4000-SW~AE6300-SW don't apply to CCS marine approval.
- Note16:* When the ambient temperature is 60°C, the UVT controller will be installed externally. Please inquire at the time of order.
- Note17:* If a 5 m cable extension is required, please specify when ordering.

Remark

---

Order Issuer

--	--	--	--

# Ordering information for MITSUBISHI AE-SW series air circuit breaker (General use---WS relay with Ampere Meter and Fault Memory "DP3")

<b>Customer(name)</b>		<b>Order No.</b>		<b>Number of units</b>		<b>units</b>	
<b>Type</b>		AE _____ -SW		AE _____ -SWA			
<b>Number of poles</b>		<input type="checkbox"/> 3P <input type="checkbox"/> 4P <small>AE630-SW~AE4000-SWA</small>		<input type="checkbox"/> 3P <input type="checkbox"/> 4P HN <small>AE4000-SW~AE6300-SW</small>		<input type="checkbox"/> 4P FN <small>Note9</small>	
<b>Current setting I<sub>r</sub></b>		_____ A		<b>CT rating</b>		_____ A <small>Note1</small>	
<b>Applicable standard</b>		<input type="checkbox"/> IEC60947-2 <input type="checkbox"/> CCC					
<b>Ambient temperature</b>		<input type="checkbox"/> 40°C(Standard) <input type="checkbox"/> Others _____ °C <small>Note2</small>					
<b>Connection</b>		<input type="checkbox"/> Fixed type <small>Note3</small> <input type="checkbox"/> Drawout type <small>Note3</small>					
<b>Main circuit terminal</b>		<input type="checkbox"/> Horizontal terminal(FIX) <small>(AE630-SW~AE1600-SWA/AE2000-SW~AE3200-SW)</small>		<input type="checkbox"/> Horizontal terminal(DR)		<input type="checkbox"/> Vertical terminal(DR-VT) <small>AE2000-SWA/AE4000-SWA/AE5000-SW/AE6300-SW</small>	
		<input type="checkbox"/> Vertical terminal(FIX-VT) <small>(AE2000-SWA/AE4000-SWA/AE5000-SW/AE6300-SW)</small>		<input type="checkbox"/> Front terminal(DR-FT) <small>Note4</small>			

**Drawout type accessories**  
 Cell switch(CL-  : 1 or 2 or 3 or 4) Note4  
 Shorting b-contact(SBC-  : 1 or 2 or 3 or 4 or 5)  
 Lifting hooks(HP)  
 Safety shutter(SST)  
      Shutter lock(SST-LOCK)  
 Mis-insertion preventer(MIP)  
 Test jumper(TJ) Note13

Vertical terminal adapter(VTA) Can be connected to the Horizontal terminals.  
 Front terminal adapter(FTA)

Upper side : Vertical Lower side : Horizontal (DR-VH) Note19  
 Upper side : Horizontal Lower side : Vertical (DR-HV) Note19

<b>Electronic trip relay(ETR)</b> <small>Note11</small>		<b>Reset type</b> <input type="checkbox"/> Automatic Reset (Standard) <input type="checkbox"/> Manual Reset (MRE)							
<input checked="" type="checkbox"/> With ETR Type <input style="width: 40px; height: 20px;" type="text"/> - <input style="width: 40px; height: 20px;" type="text"/> ; DP3									
<b>Main setting</b> <small>Note10</small> <table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td>WS1</td> <td>AE630-SW~AE1600-SW, AE2000-SW~AE3200-SW, AE4000-SW</td> </tr> <tr> <td>WS2</td> <td>AE2000-SWA, AE4000-SWA, AE5000-SW</td> </tr> <tr> <td>WS3</td> <td>AE6300-SW</td> </tr> </table> WS : General use		WS1	AE630-SW~AE1600-SW, AE2000-SW~AE3200-SW, AE4000-SW	WS2	AE2000-SWA, AE4000-SWA, AE5000-SW	WS3	AE6300-SW	<b>Optional setting</b> G1: Ground fault protection NA: Without optional setting	
WS1	AE630-SW~AE1600-SW, AE2000-SW~AE3200-SW, AE4000-SW								
WS2	AE2000-SWA, AE4000-SWA, AE5000-SW								
WS3	AE6300-SW								
<b>ETR Auxiliary Equipment</b> <small>Note10</small> <input type="checkbox"/> MCR switch(MCR-SW)		<b>Power supply</b> P1: 100-240V AC·DC P2: 24-60V DC P3: 100-240V AC / 100-125V DC with output contact P4: 24-60V DC with output contact P5: 100-240V DC with output contact (SSR)							
		<input type="checkbox"/> Neutral CT(NCT) <small>Note5</small>							

<b>Electrical accessories</b>														
<input type="checkbox"/> Auxiliary switch <small>A and B contacts in the same quantity are used. Max. quantity: 5 each for A and B contacts.</small> <input type="checkbox"/> Standard (AX <input type="checkbox"/> : 2 or 4 or 6 or 8 or 10) <input type="checkbox"/> High capacity (HAX <input type="checkbox"/> : 2 or 4 or 6 or 8 or 10)														
<input type="checkbox"/> Motor charging (MD) <table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td><input type="checkbox"/> 100-125V AC · DC</td> </tr> <tr> <td><input type="checkbox"/> 200-250V AC · DC</td> </tr> <tr> <td><input type="checkbox"/> 48V DC <small>Note6</small></td> </tr> </table>		<input type="checkbox"/> 100-125V AC · DC	<input type="checkbox"/> 200-250V AC · DC	<input type="checkbox"/> 48V DC <small>Note6</small>										
<input type="checkbox"/> 100-125V AC · DC														
<input type="checkbox"/> 200-250V AC · DC														
<input type="checkbox"/> 48V DC <small>Note6</small>														
<input type="checkbox"/> Closing coil (CC) <table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td><input type="checkbox"/> 100-250V AC · DC</td> </tr> <tr> <td><input type="checkbox"/> 24-48V DC</td> </tr> </table>		<input type="checkbox"/> 100-250V AC · DC	<input type="checkbox"/> 24-48V DC											
<input type="checkbox"/> 100-250V AC · DC														
<input type="checkbox"/> 24-48V DC														
<input type="checkbox"/> Shunt trip device (SHT) <table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td><input type="checkbox"/> 100-250V AC · DC</td> </tr> <tr> <td><input type="checkbox"/> 380-500V AC</td> </tr> <tr> <td><input type="checkbox"/> 24-48V DC</td> </tr> </table>		<input type="checkbox"/> 100-250V AC · DC	<input type="checkbox"/> 380-500V AC	<input type="checkbox"/> 24-48V DC										
<input type="checkbox"/> 100-250V AC · DC														
<input type="checkbox"/> 380-500V AC														
<input type="checkbox"/> 24-48V DC														
<input type="checkbox"/> Under voltage trip device (UVT) <small>Note12</small> <table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td><input type="checkbox"/> 100-120V AC</td> <td rowspan="2">Time delay</td> </tr> <tr> <td><input type="checkbox"/> 200-240V AC</td> </tr> <tr> <td><input type="checkbox"/> 380-460V AC</td> <td><input type="checkbox"/> Inst (INST)</td> </tr> <tr> <td><input type="checkbox"/> 24V DC</td> <td><input type="checkbox"/> 0.5s(05)</td> </tr> <tr> <td><input type="checkbox"/> 48V DC</td> <td><input type="checkbox"/> 3.0s(30)</td> </tr> <tr> <td><input type="checkbox"/> 100-110V DC</td> <td></td> </tr> <tr> <td><input type="checkbox"/> 120-125V DC</td> <td></td> </tr> </table> <small>Note: In the case of 380-460V AC, the external transformer is attached.</small>		<input type="checkbox"/> 100-120V AC	Time delay	<input type="checkbox"/> 200-240V AC	<input type="checkbox"/> 380-460V AC	<input type="checkbox"/> Inst (INST)	<input type="checkbox"/> 24V DC	<input type="checkbox"/> 0.5s(05)	<input type="checkbox"/> 48V DC	<input type="checkbox"/> 3.0s(30)	<input type="checkbox"/> 100-110V DC		<input type="checkbox"/> 120-125V DC	
<input type="checkbox"/> 100-120V AC	Time delay													
<input type="checkbox"/> 200-240V AC														
<input type="checkbox"/> 380-460V AC	<input type="checkbox"/> Inst (INST)													
<input type="checkbox"/> 24V DC	<input type="checkbox"/> 0.5s(05)													
<input type="checkbox"/> 48V DC	<input type="checkbox"/> 3.0s(30)													
<input type="checkbox"/> 100-110V DC														
<input type="checkbox"/> 120-125V DC														

<b>Mechanical accessories</b>					
<input type="checkbox"/> Push button cover (BC-L) <input type="checkbox"/> Counter (CNT) <input type="checkbox"/> Cylinder lock (CYL) <input type="checkbox"/> Door interlock (DI) <small>Note7</small> <input type="checkbox"/> Terminal cover (TTC) <input type="checkbox"/> Door frame (DF) <input type="checkbox"/> Dust cover (DUC) <input type="checkbox"/> Interphase barrier (BA) <small>Note8</small> <input type="checkbox"/> Mechanical interlock (MI) <table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td><input type="checkbox"/> for 2units (MI2)</td> </tr> <tr> <td><input type="checkbox"/> monuting pitch (1m)</td> </tr> <tr> <td><input type="checkbox"/> monuting pitch (2m)</td> </tr> <tr> <td><input type="checkbox"/> for 2units (MI3) <small>Note7</small></td> </tr> </table>		<input type="checkbox"/> for 2units (MI2)	<input type="checkbox"/> monuting pitch (1m)	<input type="checkbox"/> monuting pitch (2m)	<input type="checkbox"/> for 2units (MI3) <small>Note7</small>
<input type="checkbox"/> for 2units (MI2)					
<input type="checkbox"/> monuting pitch (1m)					
<input type="checkbox"/> monuting pitch (2m)					
<input type="checkbox"/> for 2units (MI3) <small>Note7</small>					

**Note 1:** For AE2000-SW, low rating current types are available. Low rating types (250A, 315A, 500A) are not available for AE630-SW.

**Note 2:** There is a case to be derated by ambient temperature. Refer to Page 64. The ambient temperature range is -5°C to +50°C.

**Note 3:** As for the terminal for AE2000-SWA, AE4000-SWA and AE4000-SW~AE6300-SW, Vertical terminal type only is available. (FIX-VT or DR-VT)

**Note 4:** This setting is available for change by customer later. A preliminary setting of CL at factory shipment is as follows.  
CL1:1C CL2:1C1D CL3:1C1T1D CL4:2C1T1D

**Note 5:** Neutral CT is required for Ground fault or Neutral pole protection, when 3-pole breaker is used for 3 phase 4 wire system.

**Note 6:** 48V DC are not available for AE4000-SWA 4P or AE4000 to 6300-SW.

**Note 7:** The combined installation of DI and MI3 is not available.

**Note 8:** Some module types are not provided BA. Refer to Page19.

**Note 9:** Current capacity of the neutral poles  
HN: 50% of the rated current  
FN: 100% of the rated current (See page 51, 56 for the outline and dimensions.)

**Note 10:** If MCR switch is ordered, INST/MCR characteristic will be installed. INST/MCR characteristics can be switched using a setting dial.

**Note 11:** For WS relay with ampere meter and fault memory (DP3), ETR including optional setting such as "G1" has integrated structure. So, optional setting such as G1 for WS relay with DP3 should be specified before ordering as those parts cannot be installed with ETR after factory shipment.

**Note 12:** When the ambient temperature is 60°C, the UVT controller will be installed externally. Please inquire at the time of order.

**Note 13:** If a 5 m cable extension is required, please specify when ordering.

Remark
--------

Order Issuer			

# Index

	page
A	AE□□-SW/SWA ..... 13, 14
	AP ..... 24, 37
	AX ..... 18
B	BA ..... 19
	BARE ..... 13(Note 1)
	BC-L ..... 19
	BIF-CL ..... 41
	BIF-CON ..... 41
C	CC ..... 17
	CL ..... 21
	CNT ..... 19
	CYL ..... 19
D	DF ..... 19
	DI ..... 19
	DP1 ..... 40
	DP2 ..... 40
	DR ..... 11
	DR-FT ..... 15
	DR-VT ..... 15
	DUC ..... 20
E	E1 (ER) ..... 24, 36
	ETR ..... 23
	EX1/EX2 ..... 40
F	FIX ..... 11
	FIX-VT ..... 15
	FTA ..... 15
G	G1 (GFR) ..... 24, 35
H	HAX ..... 18
	HP ..... 22
I	I/O unit ..... 41
M	MCR-SW ..... 38
	MD ..... 16
	MI ..... 20
	MI2 ..... 20
	MI3 ..... 20
	MIP ..... 22
	MRE ..... 18
N	N5 ..... 24, 37
	NA ..... 24
	NCT ..... 35
O	OCR alarm (Automatic reset type, Manual reset type) ... 18

	page
P	P1 ..... 24
	P2 ..... 24
	P3 ..... 24
	P4 ..... 24
	P5 ..... 24
S	SBC ..... 22
	SHT ..... 17
	SST ..... 22
	SST-LOCK ..... 22
T	TAL ..... 38
	TJ ..... 22
	TTC ..... 19
U	UVT ..... 18
V	VT (Vertical connection) ..... 15
	VTA ..... 15
	VT unit ..... 40
W	WB ..... 31
	WF ..... 33
	WM ..... 29
	WS ..... 25
Y	Y-2005 ..... 38
Z	ZCT ..... 36
	ZT ..... 36
	ZTA ..... 36

## Revising history

The main revising contents are below.

\*from **22A** (Y-0622L printed on September 2022) to **26A** (Y-0622M printed on March 2026)

- ▶ P.8 and others : The description was deleted due to the discontinuation of CC-Link interface unit (BIF-CC).
- ▶ P.5 : Review of the free Warranty period and warranty coverage [service period for spare parts].
- ▶ P.5 : Addition of (5) to the Exclusion of loss in opportunity and secondary loss from warranty liability.
- ▶ P.10 : Added diagram of conversion adapters.
- ▶ P.16 : Motor charging device (MD) DC24V has been deleted due to discontinuation.
- ▶ P.18 : Added Note 8 to Undervoltage trip device (UVT).
- ▶ P.20 : Review of the Mechanical interlock (MI) installation layout dimension drawing.
- ▶ P.24 : Added note (2) to the power supply module (control circuit terminal block P1 and P2 terminals).
- ▶ P.40 : Added a note to VT unit (VT).
- ▶ P.47-51 : Review the lock plate dimensions in the outline dimensions.
- ▶ P.47,49,52,54 : Review the installation dimensions of the interphase barrier (BA).
- ▶ P.57 : Added back panel cut-out dimensions.
- ▶ P.67-70 : Review the order specifications.
- ▶ P.73 : Review the service network.

Country/Region	Corporation Name	Address	Telephone
Australia	Mitsubishi Electric Australia Pty. Ltd.	348 Victoria Road, Rydalmere, N.S.W. 2116, Australia	+61-2-9684-7777
Algeria	Mec Casa	Rue i N 125 Hay-Es-Salem, 02000, W-Chief, Algeria	+213-27798069
Bangladesh	PROGRESSIVE TRADING CORPORATION ELECTRO MECH AUTOMATION& ENGINEERING LTD.	HAQUE TOWER,2ND FLOOR,610/11,JUBILEE ROAD, CHITTAGONG, BANGLADESH SHATABDI CENTER, 12TH FLOOR, SUITES: 12-B, 292, INNER CIRCULAR ROAD, FAKIRA POOL, MOTIJHEEL, DHAKA-1000, BANGLADESH	+880-31-624307 +88-02-7192826
Belarus	Technikon	Oktyabrskaya 19, Off. 705, BY-220030 Minsk, Belarus	+375 (0)17 / 210 46 26
Belgium	Mitsubishi Electric Europe B.V. Benelux Branch	Nijverheidsweg 23A, 3641 RP Mijdrecht	+31 (0)297 250 350
Brazil	Mitsubishi Electric do Brasil Comércio e Serviços Ltda.	Avenida Adelino Cardana, 293 – 21º Andar, Bethaville, Barueri, SP, Brasil, CEP 06401-147	+55-11-4689-3000
Cambodia	DHINIMEX CO.,LTD Pump Elctric Solution CO.,LTD.	#245, St. Tep Phan, Phnom Penh, Cambodia C19 Street R8, Phnom Penh 120210, Cambodia	+855-23-997-725 +855-12-318-190
Central America	Automation International LLC	7050 W. Palmetto Park Road Suite #15 PMB #555, Boca Raton, FL 33433	+1-561-237-5228
Chile	Rhona S.A. (Main office)	Vte. Agua Santa 4211 Casilla 30-D (P.O. Box) Vina del Mar, Chile	+56-32-2-320-600
China	Mitsubishi Electric Automation (China) Ltd.	Mitsubishi Electric Automation Building, No.1386 Hongqiao Road, Shanghai, China 200336	+86-21-2322-3030
	Mitsubishi Electric Automation (China) Ltd. Beijing	5/F,ONE INDIGO,20 Juxianqiao Road Chaoyang District,Beijing, China 100016	+86-10-6518-8830
	Mitsubishi Electric Automation (China) Ltd. ShenZhen	Level 8, Galaxy World Tower B, 1 Yabao Road, Longgang District, Shenzhen, China 518129	+86-755-2399-8272
	Mitsubishi Electric Automation (China) Ltd. GuangZhou	Rm.1006, A1 Times E-Park, No.276-282, Hanxi Road East, Zhongcun Street, Panyu Distric, Guangzhou, China 510030	+86-20-8923-6730
	Mitsubishi Electric Automation (China) Ltd. ChengDu	1501-1503,15F, Guang-hua Centre Building-C, No.98 North Guang Hua 3th Rd Chengdu, China 610000	+86-28-8446-8030
	Mitsubishi Electric Automation (Hong Kong) Ltd.	20/F,1111 King's Road, Taikoo Shing, Hong Kong	+852-2510-0555
Colombia	Proelectrico Representaciones S.A.	Carrera 42 N° 75 – 367 Bodega 109, Itagüi, Medellín, Antioquia, Colombia	+57-4-4441284
Czech Republic	AUTOCONT CONTROL SYSTEMS S.R.O	Technologická 374/6, CZ-708 00 Ostrava - Pustkovec	+420 595 691 150
Denmark	BEIJER ELECTRONICS A/S	LYKKEGARDSVEJ 17, DK-4000 ROSKILDE, Denmark	+45 (0)461 75 76 66
Egypt	Cairo Electrical Group	9, Rostoum St. Garden City P.O. Box 165-11516 Maglis El-Shaab,Cairo - Egypt	+20-2-27961337
France	Mitsubishi Electric Europe B.V. French Branch	FR-92741 Nanterre Cedex	+33 (0)1 55 68 57 01
Germany	Mitsubishi Electric Europe B.V.	Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany	+49 (0) 2102 4860
Greece	KALAMARAKIS - SAPOUNAS S.A.	IONIAS & NEROMILOU STR., CHAMOMILOS ACHARNES, ATHENS, 13678 Greece	+30-2102 406000
Hungary	Meltrade Ltd.	Fertő utca 14. HU-1107 Budapest, Hungary	+36 (0)1-431-9726
India	Mitsubishi Electric India Private Limited	3rd Floor, Tower A, Global Gateway, MG Road, Gurugram - 122002, Haryana, India	+91(124)673 9300
	Mitsubishi Electric India Private Limited Pune Sales Office	ICC-Devi Gaurav Technology Park, Unit no. 402, Fourth Floor, Survey no. 191-192 (P), Opp. Vallabh Nagar Bus Depot, Pune – 411018, Maharashtra, India	+91-20-68192100
	Mitsubishi Electric India Private Limited FA Center	204-209, 2nd Floor, 31FIVE, Corporate Road, Prahladnagar, Ahmedabad 380015,Gujarat, India	+91-79677-77888
Indonesia	PT. Sahabat Indonesia	P.O.Box 5045 Kawasan Industri Pergudangan, Jakarta, Indonesia	+62-(0)21-6610651-9
Ireland	Mitsubishi Electric Europe B.V.	Westgate Business Park, Ballymount, IRL-Dublin 24, Ireland	+353 (0)1-4198800
Israel	Gino Industries Ltd.	26, Ophir Street IL-32235 Haifa, Israel	+972 (0)4-867-0656
Italy	Mitsubishi Electric Europe B.V.	Viale Colleoni 7, I-20041 Agrate Brianza (MI), Italy	+39 039-80531
Kazakhstan	Kazpromavtomatika	Ul. Zhambyla 28, KAZ - 100017 Karaganda	+7-7212-501000
Korea	Mitsubishi Electric Automation Korea Co., Ltd	9F Gangseo Hangang xi-tower A, 401 Yangcheon-ro, Gangseo-gu, Seoul 07528 Korea	+82-2-3660-9573
Laos	AROUNKIT CORPORATION IMPORT- EXPORT SOLE CO.,LTD	SAPHANMO VILLAGE. SAYSETHA DISTRICT, VIENTIANE CAPITAL, LAOS	+856-20-415899
Lebanon	Comptoir d'Electricite Generale-Liban	Cebaco Center - Block A Autostrade Dora, P.O. Box 11-2597 Beirut - Lebanon	+961-1-240445
Lithuania	Rifas UAB	Tinklu 29A, LT-5300 Panevezys, Lithuania	+370 (0)45-582-728
Malaysia	Mitric Sdn Bhd	No. 5 Jalan Pemberita U1/49, Temasya Industrial Park, Glenmarie 40150 Shah Alam,Selangor, Malaysia	+603-5569-3748
Malta	ALFATRIDE LTD	99 PAOLA HILL, PAOLA PLA 1702, Malta	+356 (0)21-697-816
Marocco	SCHIELE MAROC	KM 7,2 NOUVELLE ROUTE DE RABAT AIN SEBAA, 20600 Casablanca, Maroco	+212 661 45 15 96
Myanmar	Peace Myanmar Electric Co.,Ltd.	NO137/139 Botahtaung Pagoda Road, Botahtaung Town Ship 11161,Yangon,Myanmar	+95-(0)1-202589
Nepal	Watt&Volt House	KHA 2-65,Volt House Dillibazar Post Box:2108,Kathmandu,Nepal	+977-1-4411330
Netherlands	Mitsubishi Electric Europe B.V. Benelux Branch	Nijverheidsweg 23A, 3641 RP Mijdrecht	+31 (0)297 250 350
North America	Mitsubishi Electric Automation, Inc.	500 Corporate Woods Parkway, Vernon Hills, IL 60061 USA	+847-478-2100
Norway	Scanelec AS	Leirvikasen 43B, NO-5179 Godvik, Norway	+47 (0)55-506000
Mexico	Mitsubishi Electric Automation, Inc. Mexico Branch	Bldv. Miguel de Cervantes Saavedra 301, Torre Norte Piso 5, Col. Ampliación Granada, Miguel Hidalgo, Ciudad de México, CP 11520, México	+52-55-3067-7511
Middle East Arab Countries & Cyprus	Comptoir d'Electricite Generale-International-S.A.L.	Cebaco Center - Block A Autostrade Dora P.O. Box 11-1314 Beirut - Lebanon	+961-1-240430
Pakistan	Prince Electric Co.	2-P GULBERG II, LAHORE, 54600, PAKISTAN	+92-42-575232, 5753373
	STRA AUTOMATION	157-F, Block F Phase 1 Johar Town, Lahore, 54782, Pakistan	+92-42-35175265/66
Peru	Rhona S.A. (Branch office)	Avenida Argentina 2201, Cercado de Lima	+51-1-464-4459
Philippines	MELCO Factory Automation Philippines Inc.	128, Lopez Rizal St., Brgy. Highway Hills, Mandaluyong City, Metro Manila, Philippines	+63-(0)2-256-8042
	Edison Electric Integrated, Inc.	24th Fl. Galleria Corporate Center, EDSA Cr. Ortigas Ave., Quezon City Metro Manila, Philippines	+63-(0)21-634-8691
Poland	Mitsubishi Electric Europe B.V. Polish Branch	Krakowska 48, 32-083 Balice, Poland	+48 12 347 65 00
Republic of Moldova	Intehsis SRL	bld. Traian 23/1, MD-2060 Kishinev, Moldova	+373 (0)22-66-4242
Romania	Sirius Trading & Services SRL	RO-060841 Bucuresti, Sector 6 Aleea Lacul Morii Nr. 3	+40-(0)21-430-40-06
Russia	Mitsubishi Electric (Russia) LLC	2 bld.1. Letnikovskaya street, Moscow, 115114, Russia	+7 495 721-2070
Saudi Arabia	Center of Electrical Goods	Al-Shuwayer St. Side way of Salahuddin Al-Ayoubi St. P.O. Box 15955 Riyadh 11454 - Saudi Arabia	+966-1-4770149
Singapore	Mitsubishi Electric Asia Pte. Ltd.	307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943	+65-6473-2308
Slovakia	PROCONT, Presov	Kupelna 1/, SK - 08001 Presov, Slovakia	+421 (0)51 - 7580 611
	SIMAP	Jana Derku 1671, SK - 91101 Trencin, Slovakia	+421 (0)32 743 04 72
Slovenia	Inea RBT d.o.o.	Stegne 11, SI-1000 Ljubljana, Slovenia	+386 (0)1-513-8116
South Africa	CBI-electric: low voltage	Private Bag 2016, ZA-1600 Isando Gauteng, South Africa	+27-(0)11-9282000
Spain	Mitsubishi Electric Europe B.V. Spanish Branch	Carretera de Rubí 76-80, E-08190 Sant Cugat del Vallés (Barcelona), Spain	+34 (0)93-565-3131
Sweden	Mitsubishi Electric Europe B.V. (Scandinavia)	Hedvig Möllers gata 6, 223 55 Lund, Sweden	+46 (0)8-625-10-00
	Euro Energy Components AB	Järnvägsgatan 36, S-434 24 Kungsbacka, Sweden	+46 (0)300-690040
Switzerland	TriElec AG	Muehentalstrasse 136, CH-8201 Schaffhausen, Switzerland	+41-(0)52-6258425
Taiwan	Mitsubishi Electric Automation (Taiwan) Co.,Ltd	3F., No.105, Wugong 3rd Rd, Wugu Dist., New Taipei, 248019,Taiwan, R.O.C.	+886-(0)2-2298-8889
Thailand	United Trading & Import Co., Ltd.	77/12 Bamrungmuang Road,Klong Mahanak Pomrab Bangkok Thailand	+66-223-4220-3
Tunisia	MOTRA Electric	3, Résidence Imen, Avenue des Martyrs Mourouj III, 2074 - El Mourouj III Ben Arous, Tunisia	+216-71 474 599
Turkey	Mitsubishi Electric Turkey A.Ş.	Şerifali Mahallesi Kale Sokak No: 41, 34775 Ümraniye, Istanbul, Turkey	+90-216-969-2666
United Kingdom	Mitsubishi Electric Europe B.V.	Travellers Lane, UK-Hatfield, Herts. AL10 8XB, United Kingdom	+44 (0)1707-276100
Uruguay	Fierro Vignoli S.A.	Avda. Uruguay 1274 Montevideo Uruguay	+598-2-902-0808
Vietnam	Mitsubishi Electric Vietnam Co.,Ltd. Head Office	11th & 12th Floor, Viettel Building, 285 Cach Mang Thang 8 Street, Hoa Hung Ward, Ho Chi Minh City, Vietnam	+(84) 28 3910 5945
	Mitsubishi Electric Vietnam Co.,Ltd. Hanoi Branch	14th Floor, Capital Tower, 109 Tran Hung Dao Street, Cua Nam Ward, Ha Noi, Viet Nam	+(84) 24 3937 8075

## Creating Solutions Together.



Industrial Computer



Controllers



Computerized Numerical Controllers



Drive Products



Human Machine Interfaces



Robots



Low-voltage Power Distribution Products



Medium-voltage Power Distribution Products



Energy Saving Supporting Devices



Processing Machines: EDM, Lasers



Engineering and Solution Software

Mitsubishi Electric's FA division provides robust support for our customers' manufacturing needs. We offer a vast array of FA products, including industry-leading PLCs, control devices, drive devices, energy efficiency support equipment, power distribution control equipment, and industrial mechatronics. Our presence on every type of production floor enables us to assist in labor-saving initiatives and quality improvements, helping customers achieve sustainable manufacturing. We also address challenges such as decarbonization and labor shortages through the utilization of automation technology.

Additionally, by leveraging synergies among FA technologies, manufacturing expertise, and digital innovations, we aim to streamline the construction of systems for data collection, accumulation, and analysis. This contributes to reducing manufacturing and quality losses.

We enable flexible manufacturing processes that respect legacy systems while embracing innovations to drive optimization. As your solution partner, Mitsubishi Electric FA delivers high-performance, high-quality products that enhance your competitiveness.

Let's automate the world together!

Note: not all products are available in all countries

# MITSUBISHI Low Voltage Air Circuit Breakers (*World Super AE* Series)

**For Safety :** Please read the instruction manual carefully before using the products in this catalog.  
Wiring and connection must be done by the person have a specialized knowledge of electric construction and wiring.



Mitsubishi Electric's e-F@ctory concept utilizes both FA and IT technologies, to reduce the total cost of development, production and maintenance, with the aim of achieving manufacturing that is a "step ahead of the times". It is supported by the e-F@ctory Alliance Partners covering software, devices, and system integration, creating the optimal e-F@ctory architecture to meet the end users needs and investment plans.



**MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN